

E-TON

PARTS LIST MANUAL



TXL 50


ATV 1

CONTENTS

PARTS ITEM	
------------	--


1	CYLINDER, HEAD
2	CRANKSHAFT, PISTON
3	FAN COVER, AIR SHROUD
4	OIL PUMP
5	AIR CLEANER, REED VALVE
6	CARBURETOR
7	CRANK CASE, COVER
8	KICK SHAFT ASSY., STARTER CLUTCH ASSY.
9	DRIVEN PULLEY
10	TRANSMISSION
11	ENGINE BRACKET
12	GENERATOR, START MOTOR
13	MUFFLER
14	FRAME
15	SWING ARM, FOOTREST, FEND BAR
16	FENDER
17	SEAT
18	OIL TANK , FUEL TANK
19	SUSPENSION
20	FRONT WHEEL
21	REAR WHEEL
22	FRONT BRAKE
23	REAR BRAKE
24	HANDLE BAR
25	REAR WHEEL AXLE
26	CHAIN
27	STEERING
28	ELECTRICAL PARTS
29	TOOL BOX

 1. CYLINDER, HEAD

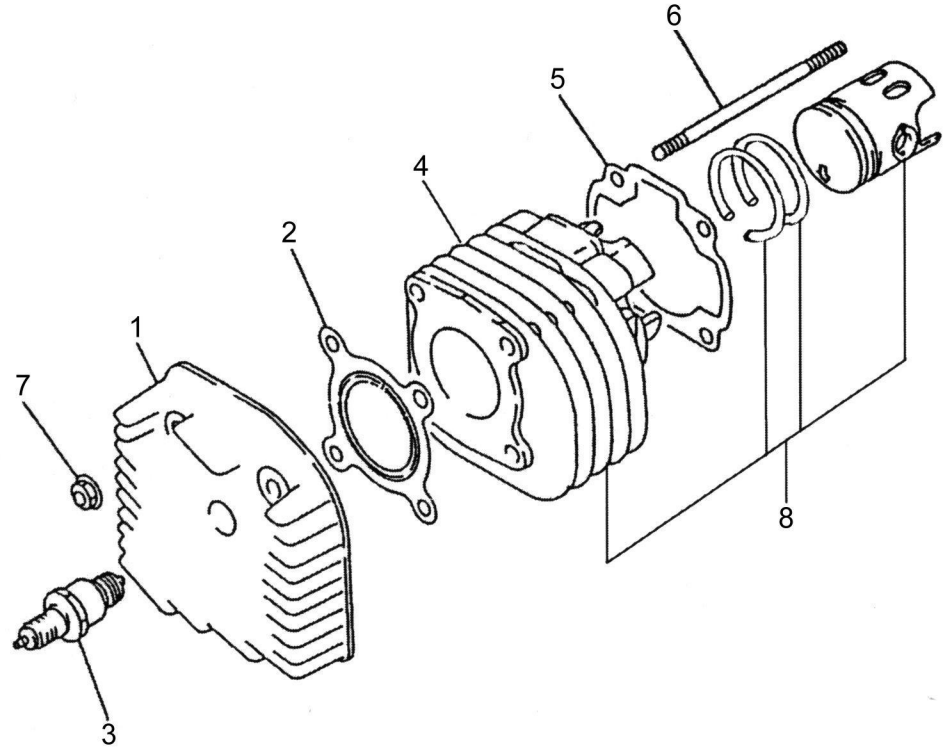


ITEM	PART NO.	NAME	QUANTITY	NOTE
1		CYLINDER, HEAD		
1-1	A2200-B02-0000	HEAD, CYLINDER	1	
1-2	A2251-B02-0000	GASKET, CYLINDER HEAD	1	
1-3	I4701-00264	SPARK PLUG (NGK BPR7HS)	1	
1-4	A2100-B02-0000	CYLINDER	1	
1-5	A2191-B02-0000	GASKET, CYLINDER	1	
1-6	I0031-07109	BOLT, STUD.	4	
1-7	I4050-07080	FLANGE NUT	4	
1-8	A210A-B02-0000	CYLINDER, PISTON AND RINGS	1	

 2. CRANKSHAFT, PISTON

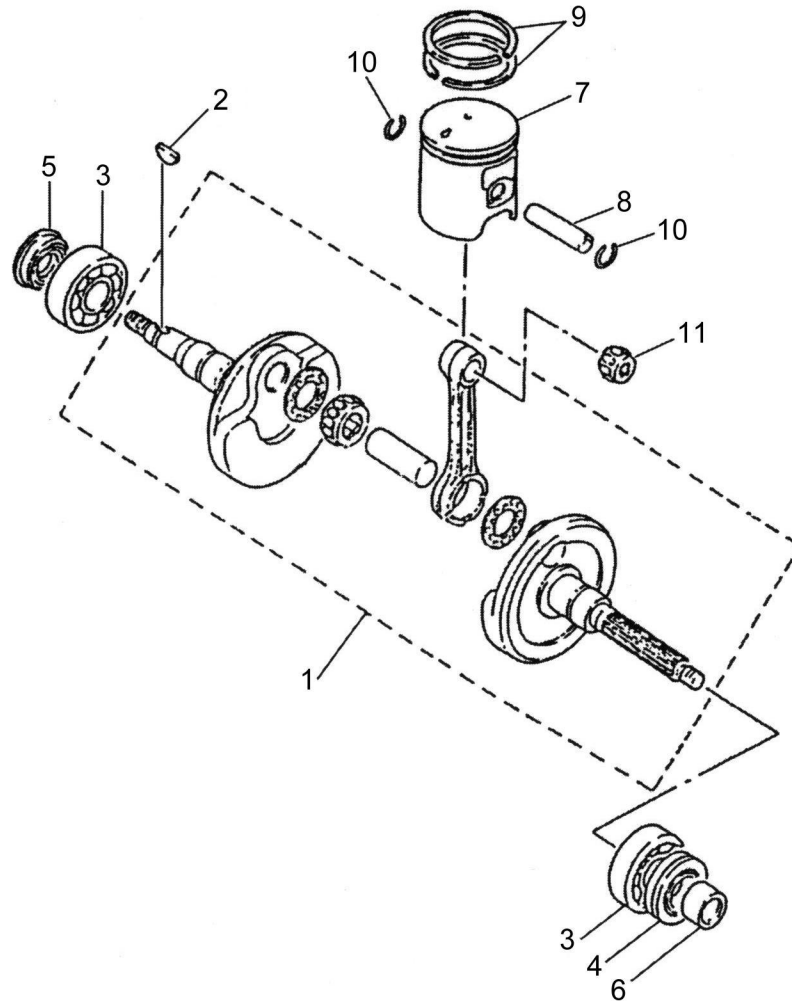


ITEM	PART NO.	NAME	QUANTITY	NOTE
2		CRANKSHAFT, PISTON		
2-1	A3000-B02-9000	CRANKSHAFT ASSY.	1	
2-2	I0701-B00-0000	KEY, WODRUFF	1	
2-3	I1002-62040	BEARING RADIAL BALL	2	
2-4	I1202-B00-0000	OIL SEAL	1	
2-5	I1201-B00-0000	OIL SEAL	1	
2-6	B8117-B02-0000	COLLAR	1	
2-7	A3101-B02-0000	PISTON	1	
2-8	A3111-B02-0000	PIN, PISTON	1	
2-9	A3011-B02-0000	PISTON RING SET	1	
2-10	I4601-B02-0000	CIRCLIP	2	
2-11	I1102-B02-0000	BEARING CON-ROD 2	1	

 3. FAN COVER, SHROUD

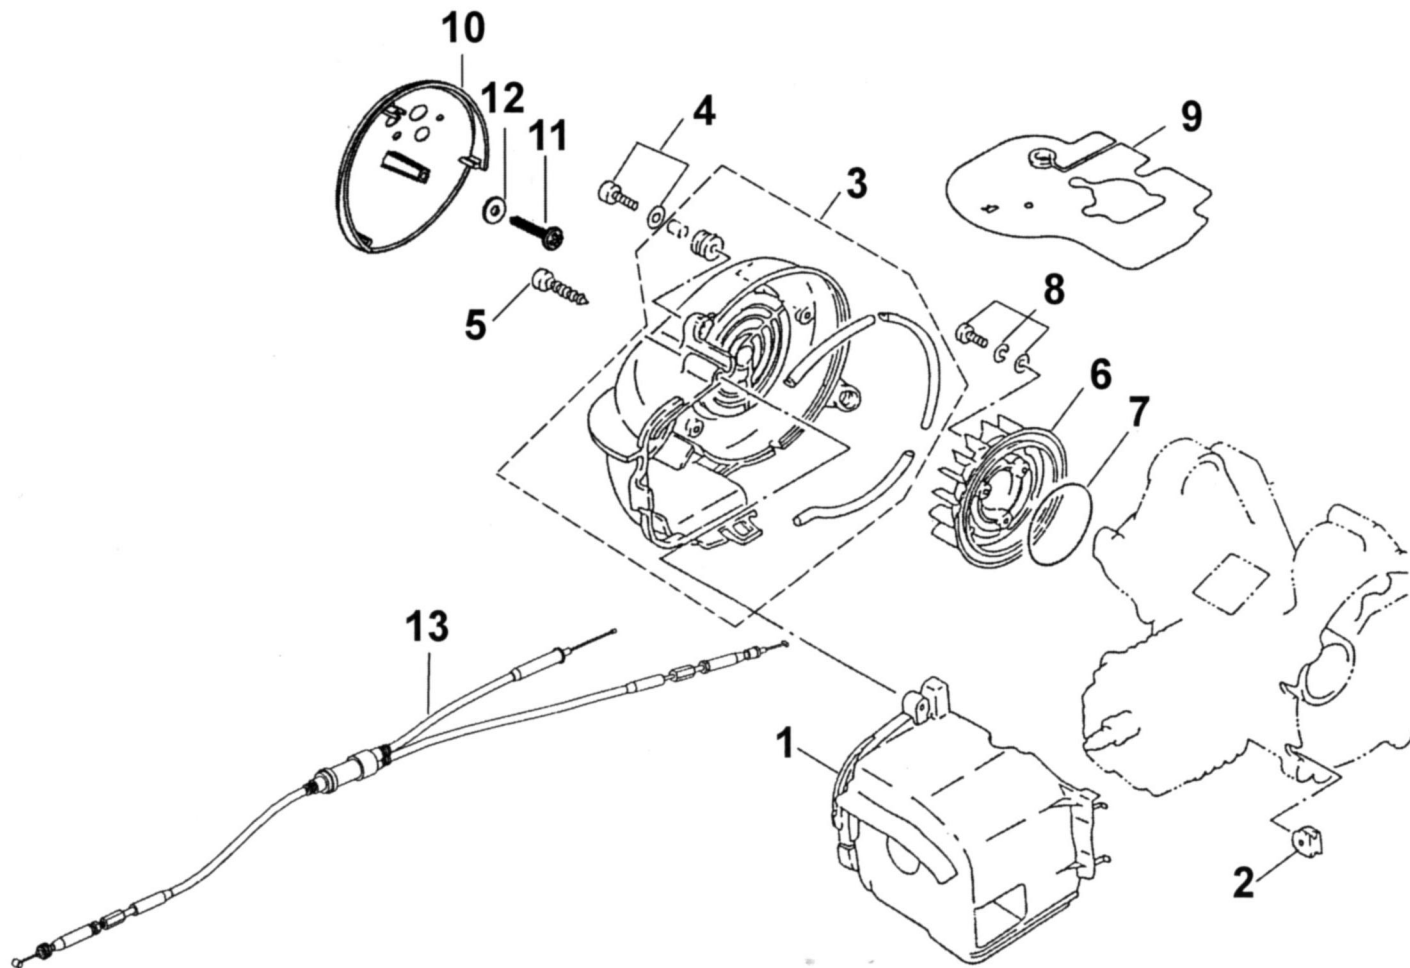


ITEM	PART NO.	NAME	QUANTITY	NOTE
3		FAN COVER, AIR SHROUD		
3-1	A9620-B02-0000	AIR SHROUD, CYLINDER	1	
3-2	A1207-B00-0000	GROMMET	2	
3-3	A9610-B00-0000	FAN COVER ASSY.	1	
3-4	I3891-06020	SCREW, W/WASHER	2	
3-5	I3911-06040	SCREW, TAPPING	1	
3-6	A9510-B02-0000	FAN	1	
3-7	I1302-B00-0000	O-RING	1	
3-8	I3893-06016	SCREW, W/WASHER	3	
3-9	H0153-B00-0000	DEFLEVTOR	1	
3-10	A9616-B00-0100	FAN COVER, SHROUD PLATE(YELLOW)	1	
	A9616-B00-0200	FAN COVER, SHROUD PLATE(RED)	1	
3-11	I3903-45380	SCREW	1	
3-12	I4101-05316	WASHER	1	
3-13	A7910-5EA0-0000	CABLE ASSY., THROTTLE	1	

 4. OIL PUMP

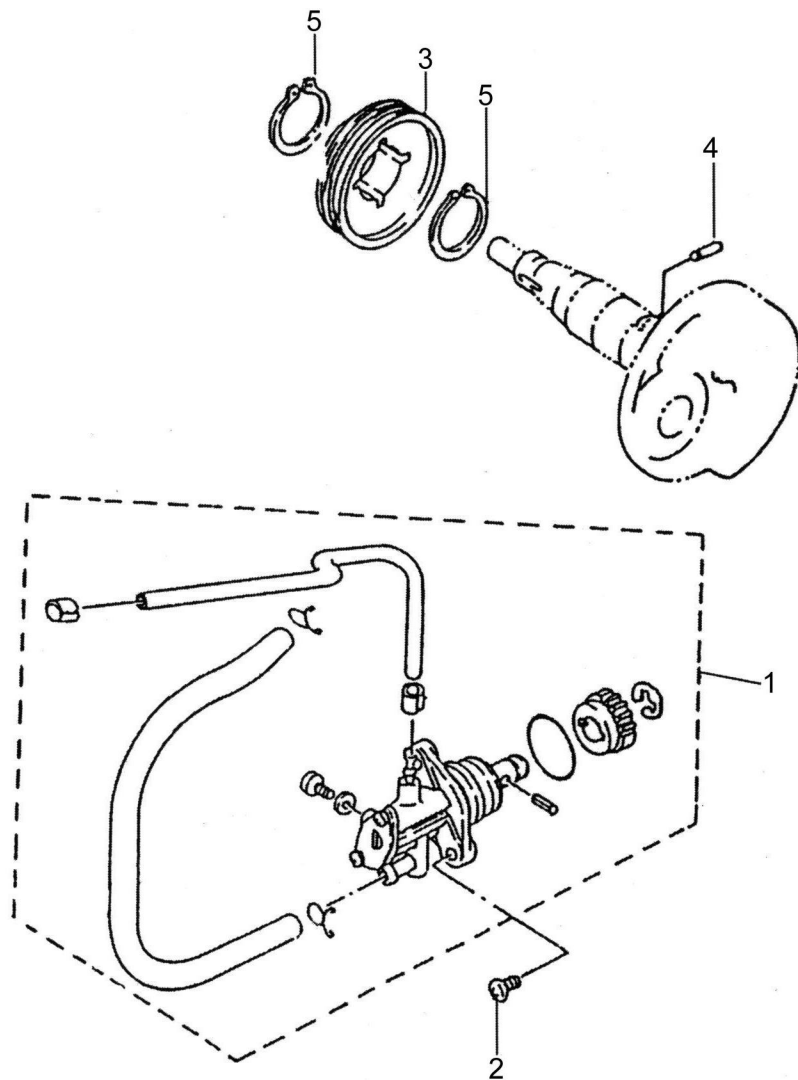


ITEM	PART NO.	NAME	QUANTITY	NOTE
4		OIL PUMP		
4-1	A510A-B02-9000	OIL PUMP ASSY.	1	
4-2	I3500-05014	SCREW, PAN HEAD	2	
4-3	A5131-B00-0000	GEAR, PUMP DRIVE	1	
4-4	I6220-03012	PIN DOWEL	1	
4-5	I4510-19000	CIRCLIP	2	

 5. AIR CLEANER, REED VALVE

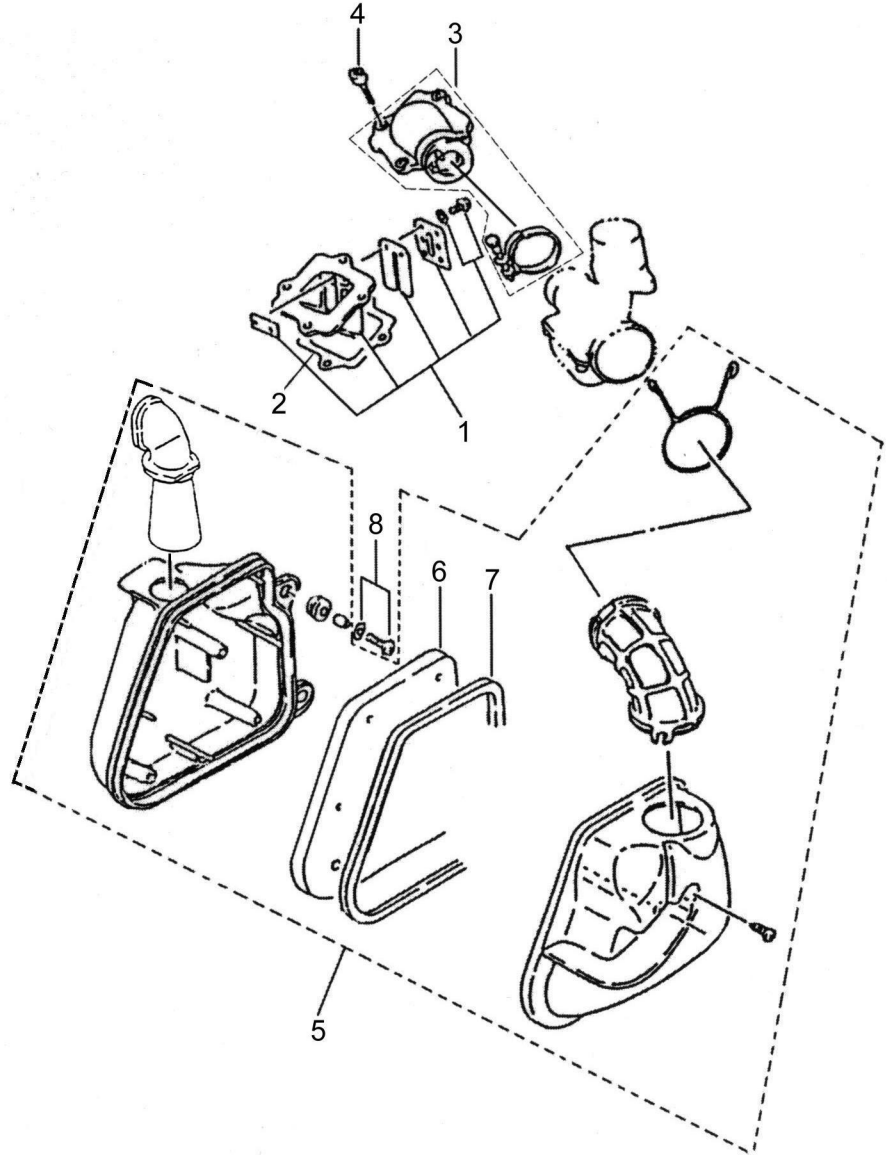


ITEM	PART NO.	NAME	QUANTITY	NOTE
5		AIR CLEANER, REED VALVE		
5-1	A410A-B00-0000	REED VALVE ASSY.	1	
5-2	A6201-B00-0000	GASKET, VALVE SEAT	1	
5-3	A711A-B00-0000	MANIFOLD, INTAKE	1	
5-4	I6001-06020	FLANGE BOLT	4	
5-5	A720A-B00-9000	AIR CLEANER ASSY.	1	
5-6	A7205-B00-0000	ELEMENT, AIR CLEANER	1	
5-7	A7214-B00-0000	SEAL	1	
5-8	I3891-06020	SCREW W/WASHER	2	

 6. CARBURETOR

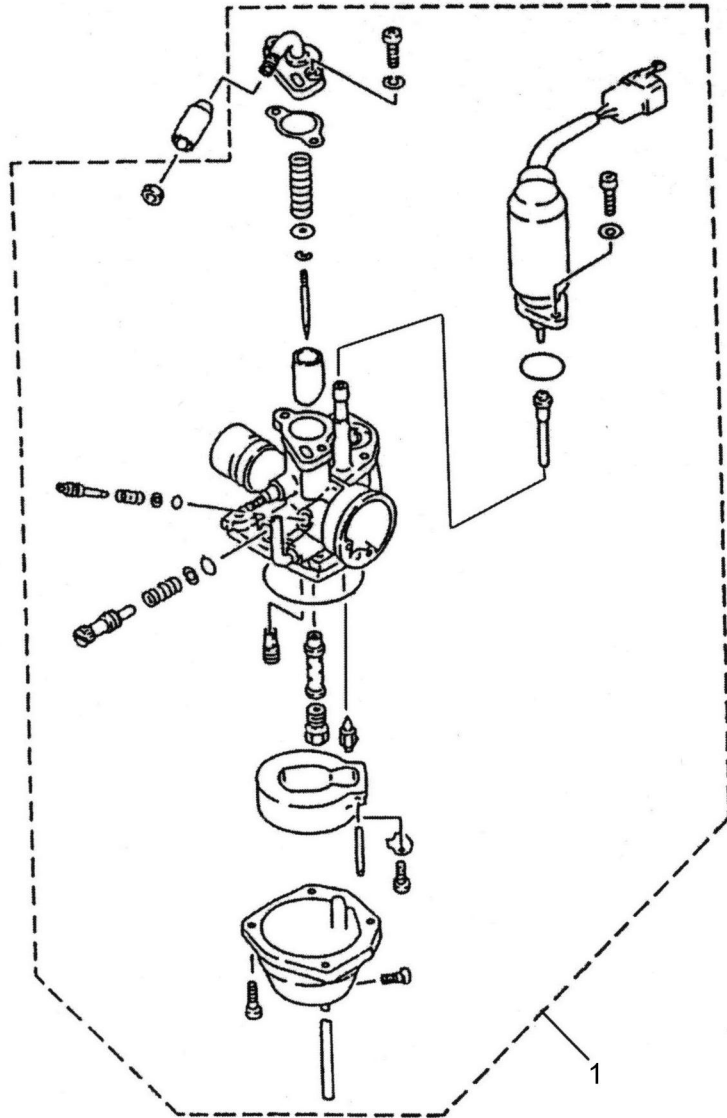


ITEM	PART NO.	NAME	QUANTITY	NOTE
6		CARBURETOR		
6-1	A6100-B02-0001	CARBURETOR ASSY.	1	

 7. CRANK CASE, COVER

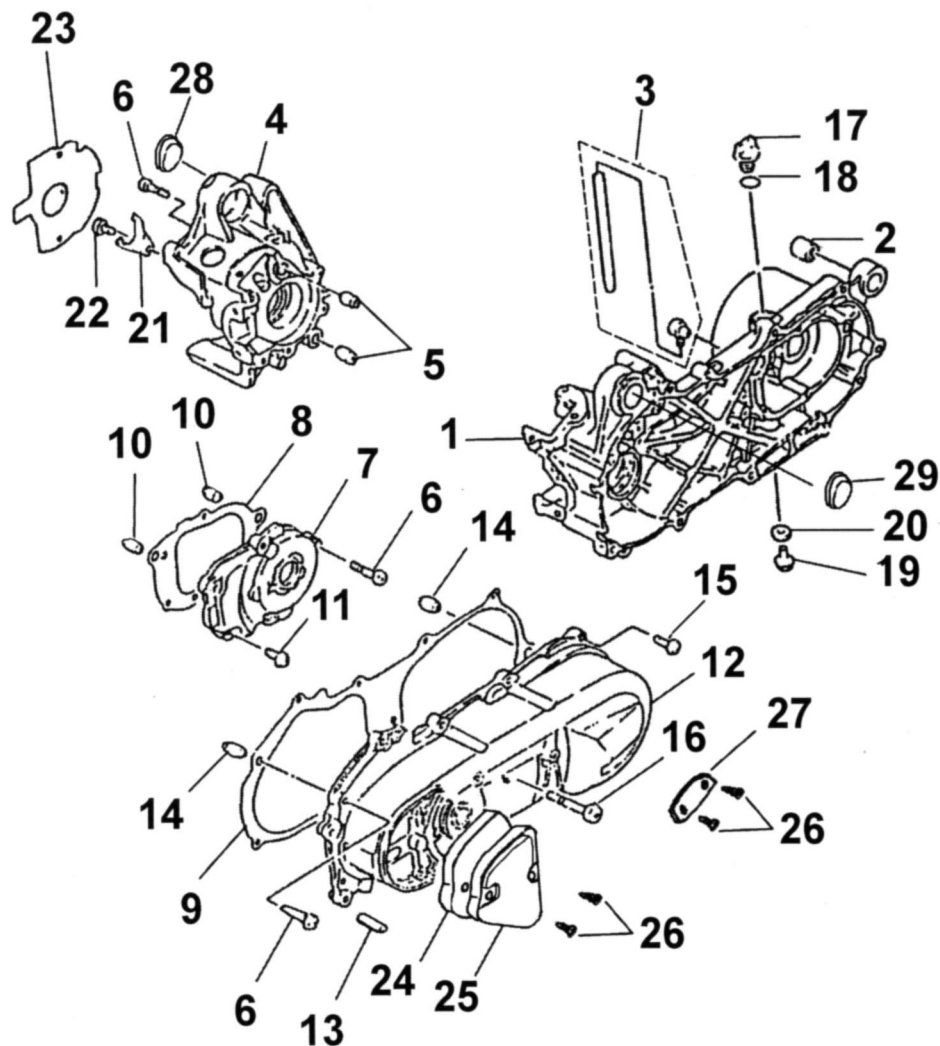


ITEM	PART NO.	NAME	QUANTITY	NOTE
7		CRANK CASE, COVER		
7-1	A1200-B02-0900	CRANKCASE L.	1	
7-2	A1203-B00-0000	BUSH, REAR SHOCK ABSORBER	1	
7-3	A122A-B00-0000	HOSE BREATHER ASSY.	1	
7-4	A1100-B02-0900	CRANKCASE R.	1	
7-5	I4301-12160	PIN, DOWEL	2	
7-6	I3500-06035	SCREW, PAN HEAD	10	
7-7	B1301-B00-0000	COVER, MISSION	1	
7-8	B1395-B00-0000	GASKET, MISSION COVER	1	
7-9	A1395-B00-0000	GASKET, CRANKCASE COVER L.	1	
7-10	I4301-10140	PIN, DOWEL	2	
7-11	I3500-06020	SCREW, PAN HEAD	3	
7-12	A1341-B02-0000	COVER, CRANKCASE L.	1	
7-13	A1342-B00-0000	SHAFT	1	
7-14	I4301-10140	PIN, DOWEL	2	
7-15	I3500-06025	SCREW, PAN HEAD	8	
7-16	I3500-06065	SCREW, PAN HEAD	1	
7-17	A5651-B00-0000	PLUG, OIL	1	
7-18	I1303-13825	O-RING	1	
7-19	I5801-08016	FLANGE BOLT	1	
7-20	I4109-B00-0000	WASHER	1	
7-21	A1121-B00-0000	HOLDER	1	
7-22	I3500-06012	SCREW, PAN HEAD	1	
7-23	A1393-B00-0000	GASKET, CRANKCASE COVER	1	
7-24	A1362-B02-0000	ELEMENT	1	
7-25	A1363-B02-0000	GUIDE, ELEMENT	1	
7-26	I3500-05008	SCREW, PAN HEAD	4	
7-27	A1364-B02-0000	PLATE	1	
7-28	A1105-B00-0000	RUBBER CAP, R.	1	
7-29	A1205-B00-0000	RUBBER CAP, L.	1	

 8. KICK SHAFT ASSY., STARTER CLUTCH ASSY.

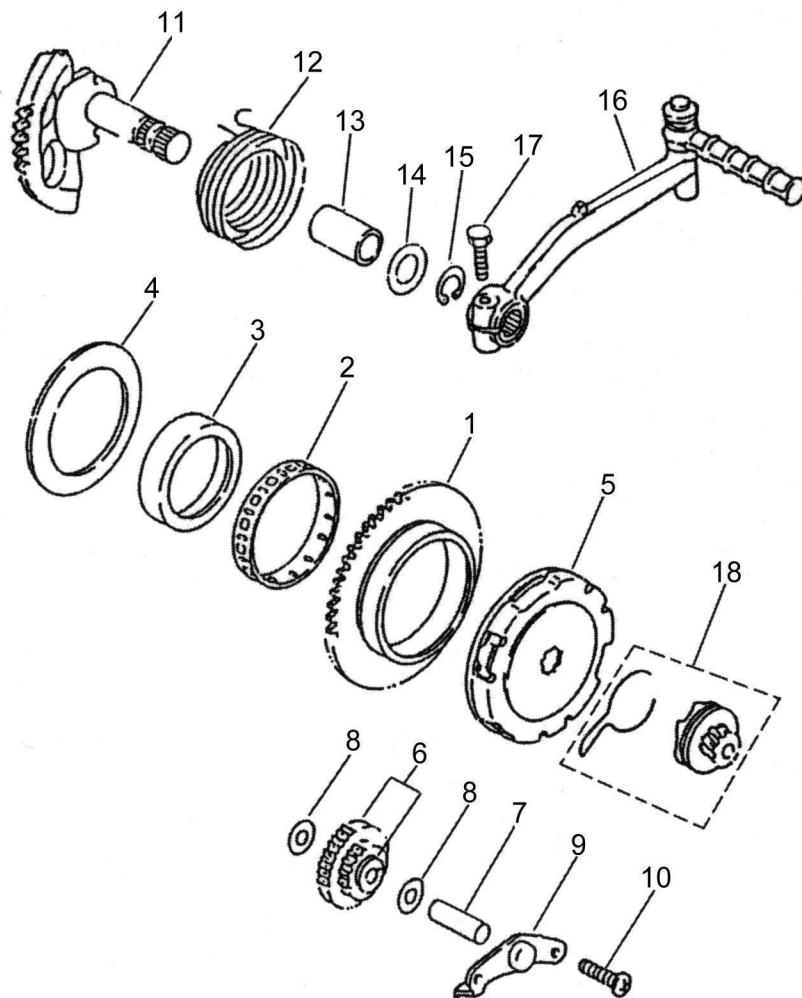


ITEM	PART NO.	NAME	QUANTITY	NOTE
8		KICK SHAFT ASSY., STARTER CLUTCH ASSY.		
8-1	B8110-B02-0000	WHEEL, STARTER	1	
8-2	I1104-B00-0000	BEARING NEDDLE	1	
8-3	B8115-B00-0000	BOSS, GEAR	1	
8-4	B8116-B00-0000	WASHER, PLATE	1	
8-5	B812A-B02-0000	STARTER CLUTCH ASSY.	1	
8-6	B810A-B02-0000	IDLE GEAR ASSY.	1	
8-7	B8102-B00-0000	SHAFT, IDLE GEAR	1	
8-8	I0441-B00-0000	WASHER, PLATE	2	
8-9	B8105-B00-0000	PLATE, IDLE GEAR	1	
8-10	I3500-06012	SCREW, PAN HEAD	2	
8-11	B8250-B00-0000	KICK SHAFT ASSY.	1	
8-12	B8281-B00-0000	SPRING, TORSION	1	
8-13	B8254-B00-0000	BUSH, SOLID	1	
8-14	I0451-B00-0000	WASHER, PLATE	1	
8-15	I4510-15000	CIRCLIP	1	
8-16	B8300-B00-9000	KICK CRANK ASSY.	1	
8-17	I2101-06025	NO:34 BOLT, HEX.	1	
8-18	B823A-B00-0000	KICK PINION ASSY.	1	

 9. DRIVEN PULLEY

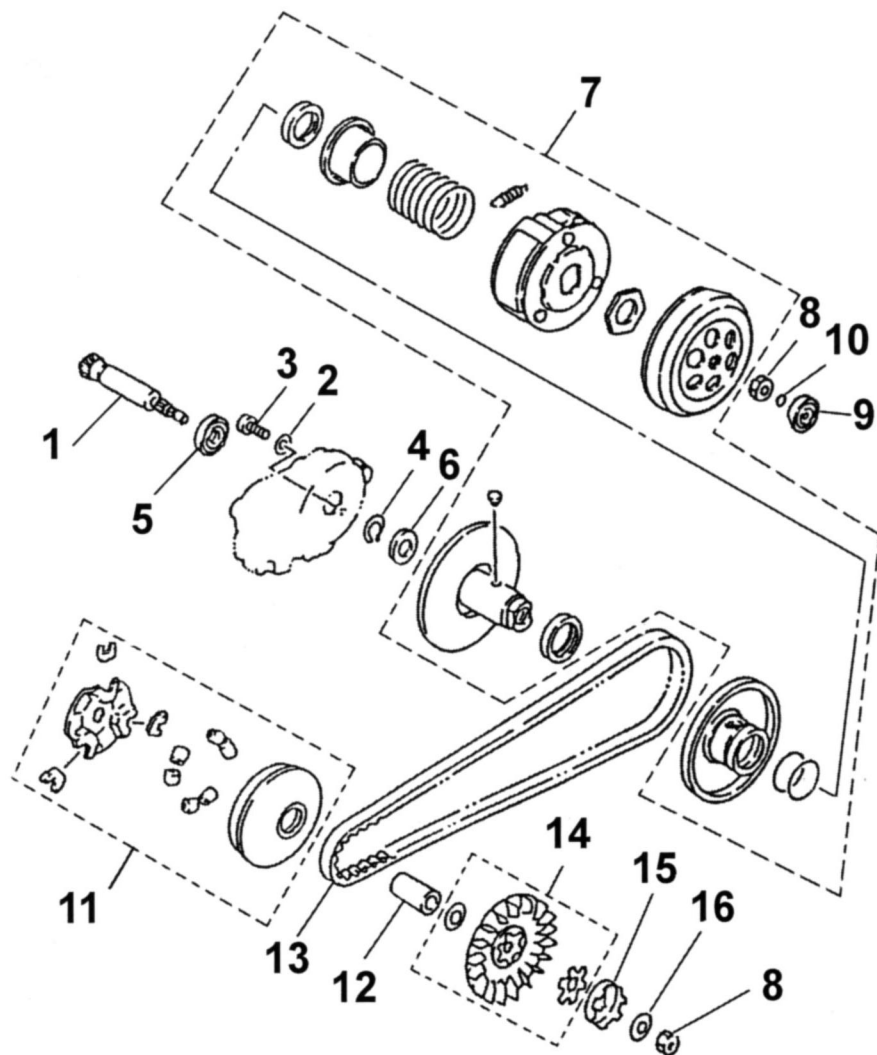


ITEM	PART NO.	NAME	QUANTITY	NOTE
9		DRIVEN PULLEY		
9-1	B3411-B02-0000	GEAR, PRIMARY DRIVE	1	
9-2	I4101-06193	WASHER, PLATE	1	
9-3	I3500-06010	SCREW, PAN HEAD	1	
9-4	I4510-17000	CIRCLIP	1	
9-5	I6100-60030	BEARING RADIAL BALL	1	
9-6	I1203-B00-0000	OIL SEAL	1	
9-7	B301A-B02-9000	SECONDARY SHEAVE ASSY.	1	
9-8	A4050- B00-0000	FLANGE NUT	1	
9-9	I6100-638ZZ	BEARING RADIAL BALL	1	
9-10	I1304-B00-0000	O-RING	1	
9-11	B211A-B02-0000	PRIMARY SLIDING SHEAVE COMP.	1	
9-12	B2105-B02-0000	COLLAR	1	
9-13	B3100-B00-0000	V-BELT	1	
9-14	B2102-B02-0000	SHEAVE, PRIMARY FIXED	1	
9-15	B8211-B02-0000	CLUTCH, ONEWAY	1	
9-16	I4102-10246	WASHER, CONICAL SPRING	1	
9-17	I4001-10000	NUT	1	

 10. TRANSMISSION

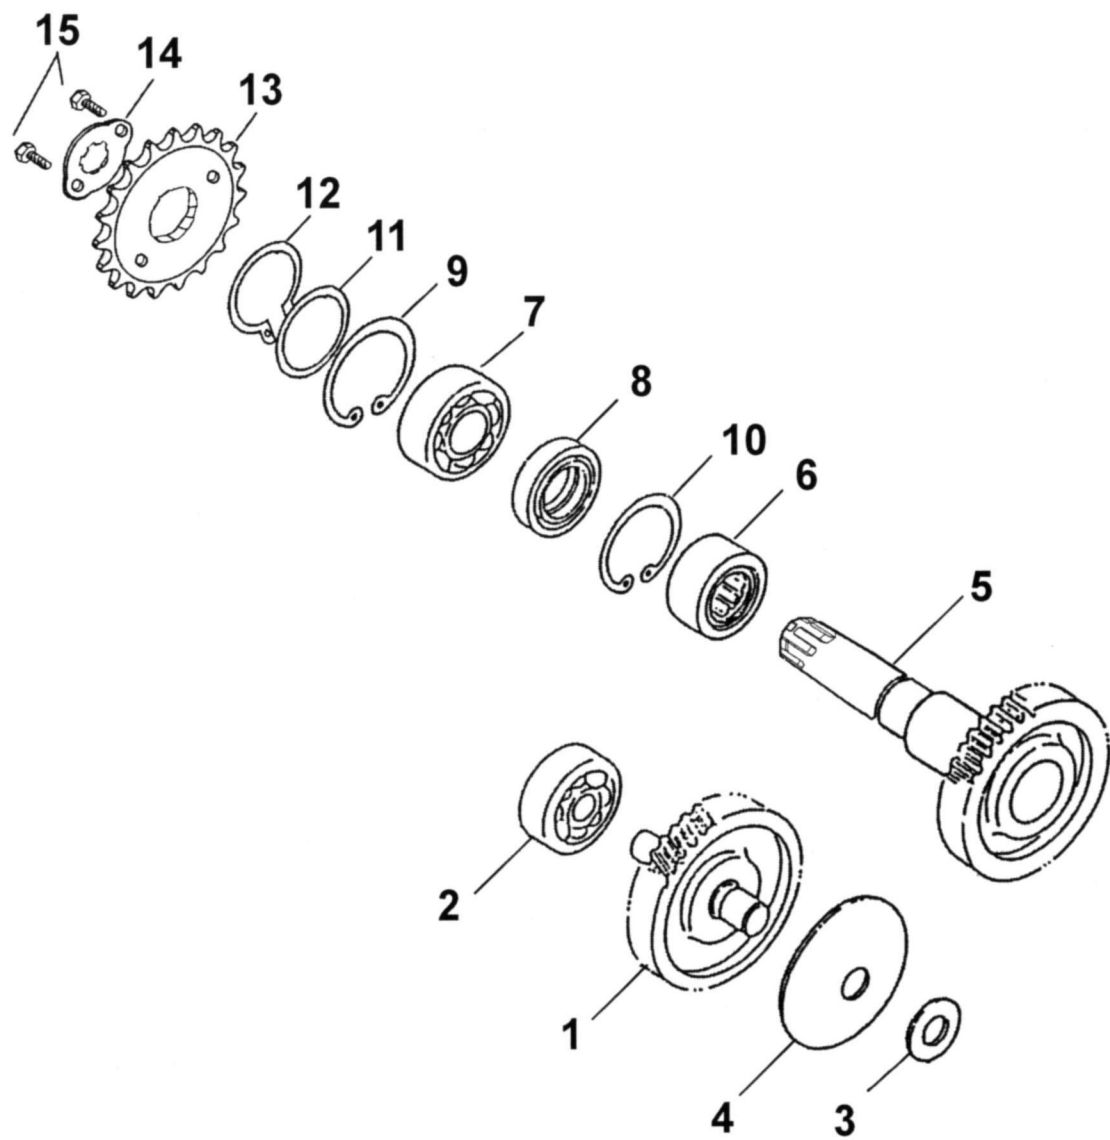



ITEM	PART NO.	NAME	QUANTITY	NOTE
10		TRANSMISSION		
10-1	B3420-B02-0000	MAIN AXLE COMP.	1	
10-2	I6100-62010	BEARING	1	
10-3	I4101-12223	WASHER, PLATE	1	
10-4	B3425-B00-0000	WASHER, CONICAL SPRING	1	
10-5	B343A-B02-9000	DRIVE AXLE	1	
10-6	I1106-25150	BEARING	1	
10-7	I6100-6004LLUA	BEARING	1	
10-8	I1204-B00-0000	OIL SEAL	1	
10-9	I4520-B00-0000	CIRCLIP	1	
10-10	I4530-B00-0000	CIRCLIP	1	
10-11	I0454-20010	NO.35 WASHER THRUST	1	
10-12	I4510-2000	CIRCLIP#20	1	
10-13	B3801-B02-9000	DRIVE CHAIN SPROCKET	1	
10-14	B3811-A00-0000	PLATE A2 FIXING	1	
10-15	I2000-06010	NO.33 BOLT HEX.	2	

 11. ENGINE BRACKET

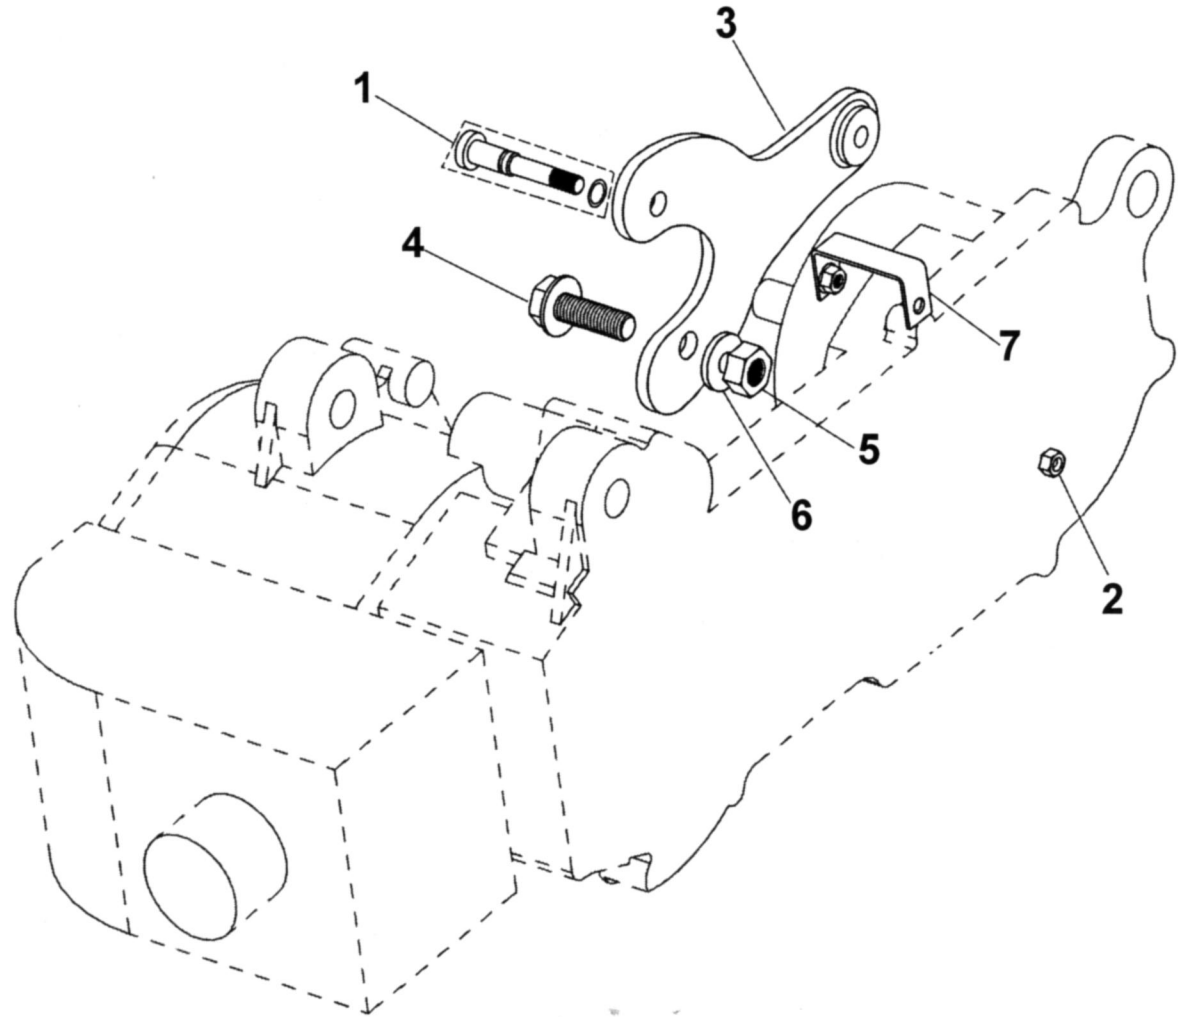


ITEM	PART NO.	NAME	QUANTITY	NOTE
11		ENGINE BRACKET		
11-1	A1204-B00-9000	PIN, PIVOT	1	
11-2	I0309-08008	FLANGE NUT	1	
11-3	A1241-B00-0000	ENGINE BRACKET	1	
11-4	I0190-12038	BOLT(M12×38)	1	
11-5	I4001-12080	NUT(M12)	1	
11-6	I0459-12010	WASHER	1	
11-7	A1251- B00-0000	BRACKET, OIL TANK	1	

  12. GENERATOR, START MOTOR

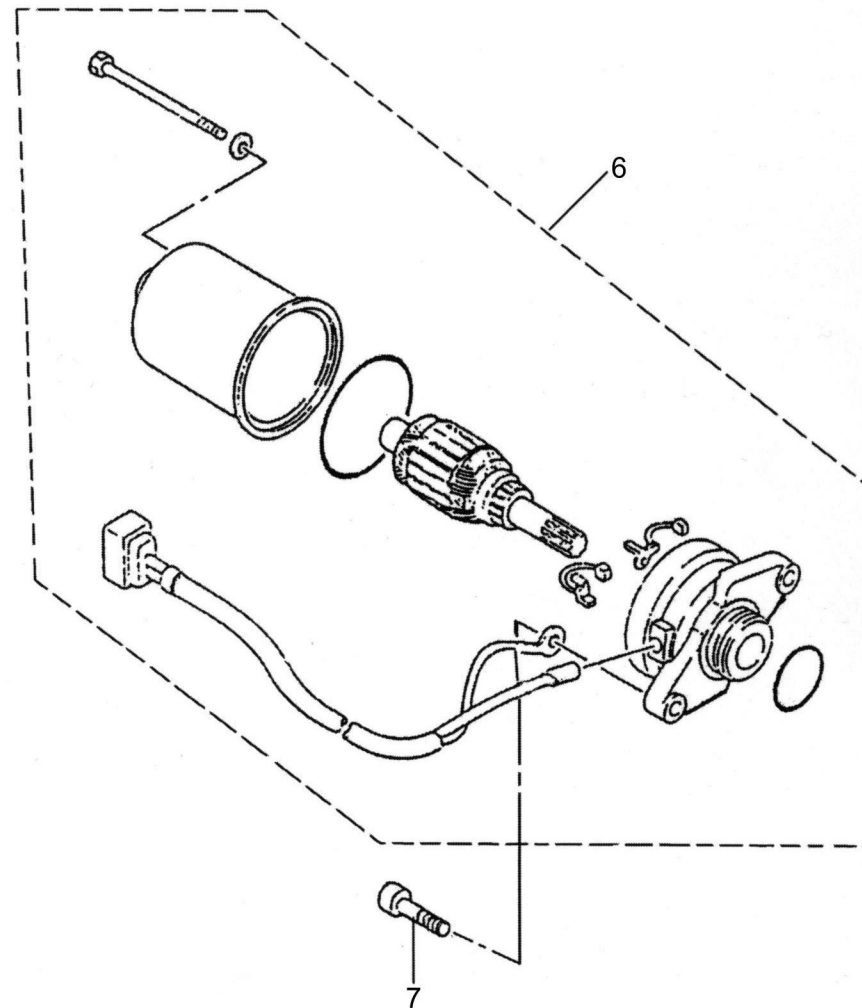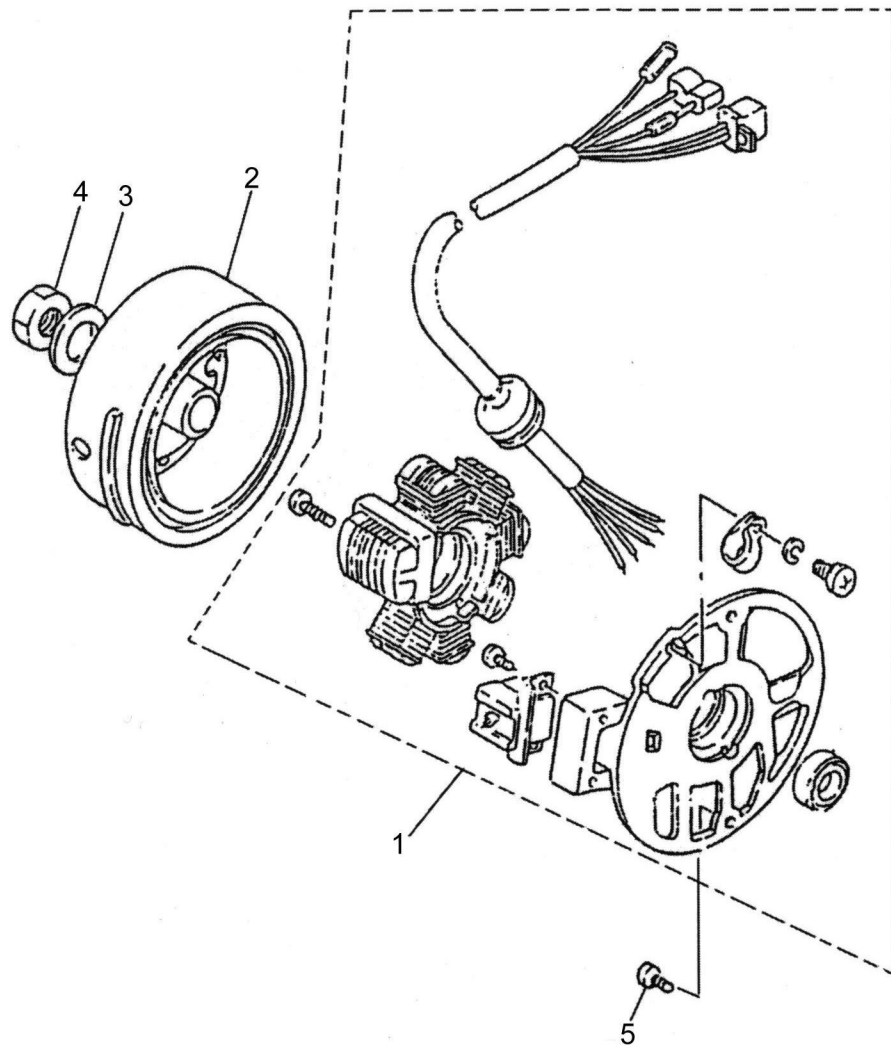


ITEM	PART NO.	NAME	QUANTITY	NOTE
12		GENERATOR, START MOTOR		
12-1	C112A-B00-0000	A.C. GENERATOR ASSY.	1	
12-2	C1110-B02-0000	FLYWHEEL COMP.	1	
12-3	I0440-10515	WASHER, PLATE	1	
12-4	I4001-10000	NUT	1	
12-5	I3500-06016	SCREW, PAN HEAD	2	
12-6	C1200-B02-0000	STARTER MOTOR ASSY.	1	
12-7	I6001-06022	NO: 11 FLANGE BOLT	2	

 13. MUFFLER

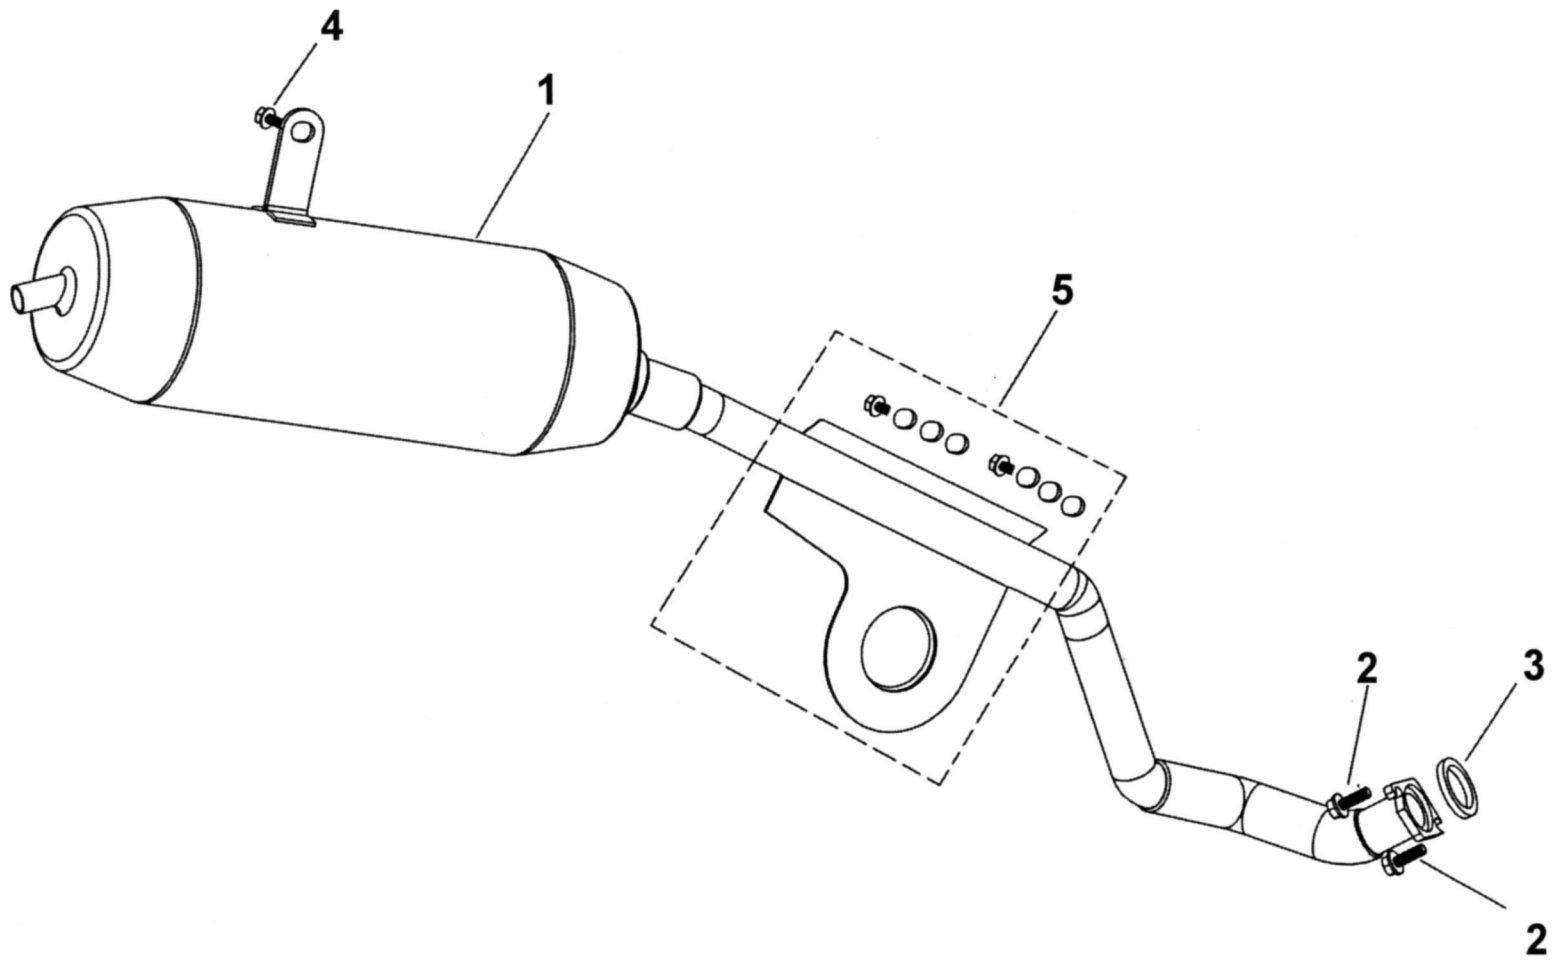

ITEM	PART NO.	NAME	QUANTITY	NOTE
13		MUFFLER ASSY.		
13-1	A830A-5EA0-0000	EXHAUST PIPE ASSY.	1	
13-2	I0149-06810	FLANGE BOLT (M6×18)	2	
13-3	A8291-5AA0-0000	GASKET	1	
13-4	I0149-10022	FLANGE BOLT (M10×22)	1	
13-5	A830B-5EA0-0000	EXHAUST PIPE COVER	1	

 
14. FRAME

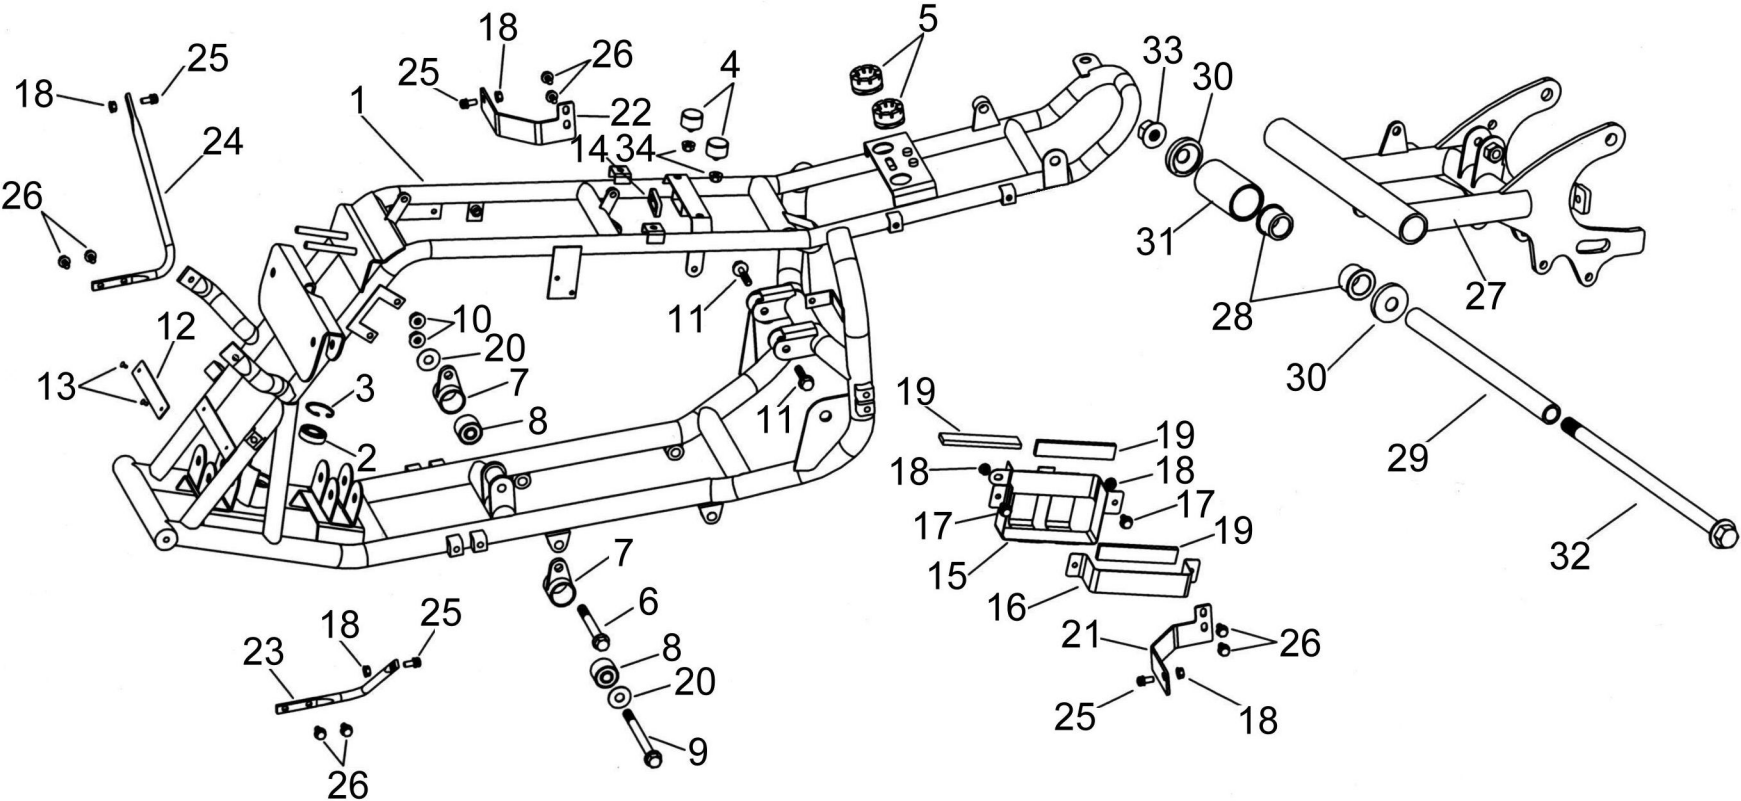

ITEM	PART NO.	NAME	QUANTITY	NOTE
14		FRAME		
14-1	E0100-5EA0-0000	FRAME COMP.	1	
14-2	I6100-6002ZZ	BEARING (6002ZZ)	1	
14-3	I4510-32000	C CLIP	1	
14-4	G7211-5EA0-0000	RUBBER(ψ 25×15)	2	
14-5	G7212-5EA0-0000	RUBBER(ψ 37×ψ 13×23)	2	
14-6	E0352-5EA0-0000	ENGINE SET BOLT(M10×85)	1	
14-7	E0350-5EA0-0000	ENGINE SUSPENSION ASSY.	2	
14-8	E0201-5EA0-0000	ENGINE SETTING BUSH	2	
14-9	E0351-5EA0-0000	ENGINE SET BOLT(M10×115)	1	
14-10	I5611-10200	FLANGE SELF-LOCK NUT(M10)	2	
14-11	I0149-08036-01	FLANGE BOLT (M8×36)	2	
14-12	E0101-5EA0-0000	FRAME NUMBER PLATE	1	
14-13	H750A-5BA1-0000	FIX NAIL	2	
14-14	G7213-5EA0-0000	PLUG RUBBER	1	
14-15	E0102-5EA0-0000	BATTERY SEAT	1	
14-16	E0103-5EA0-0000	BATTERY COVER	1	
14-17	I0119-06802	BOLT WITH WASHER(M6×14)	2	
14-18	I5702-06500	FLANGE NUT(M6)	6	
14-19	E0104-5EA0-0000	BATTERY PAD	3	
14-20	I9905-10100	WASHER(ψ 28×ψ 11×1.2)	2	
14-21	E0105-5EA0-0000	LEFT FIXED PLATE,REAR FENDER	1	
14-22	E0106-5EA0-0000	RIGHT FIXED PLATE,REAR FENDER	1	
14-23	E0107-5EA0-0000	LEFT FIXED PLATE,FRONT FENDER	1	
14-24	E0108-5EA0-0000	RIGHT FIXED PLATE,FRONT FENDER	1	
14-25	I0149-06823	BOLT(M6×23)	4	


14-26	I0149-06012	FLANGE SCREW(M6×12)	8
14-27	E220A-5EA0-0000	SWING ARM SUB ASSY.	1
14-28	E2208-5EA0-0000	BUSHING(ψ 20)	2
14-29	E2209-5EA0-0000	SWING ARM SPACER(ψ 20×ψ 14.1×254)	1
14-30	E2205-5EA0-0000	SWING ARM SEAL COVER	2
14-31	E2202-5EA0-0000	RUBBER SLEEVE	1
14-32	E2201-5EA0-0000	SWING ARM SET BOLT (M14×285)	1
14-33	I5611-14200	FLANGE SELF-LOCK NUT(M14)	1
14-34	I5611-08200	FLANGE SELF-LOCK NUT(M8)	2

 15. SWING ARM, FOOTREST, FEND BAR

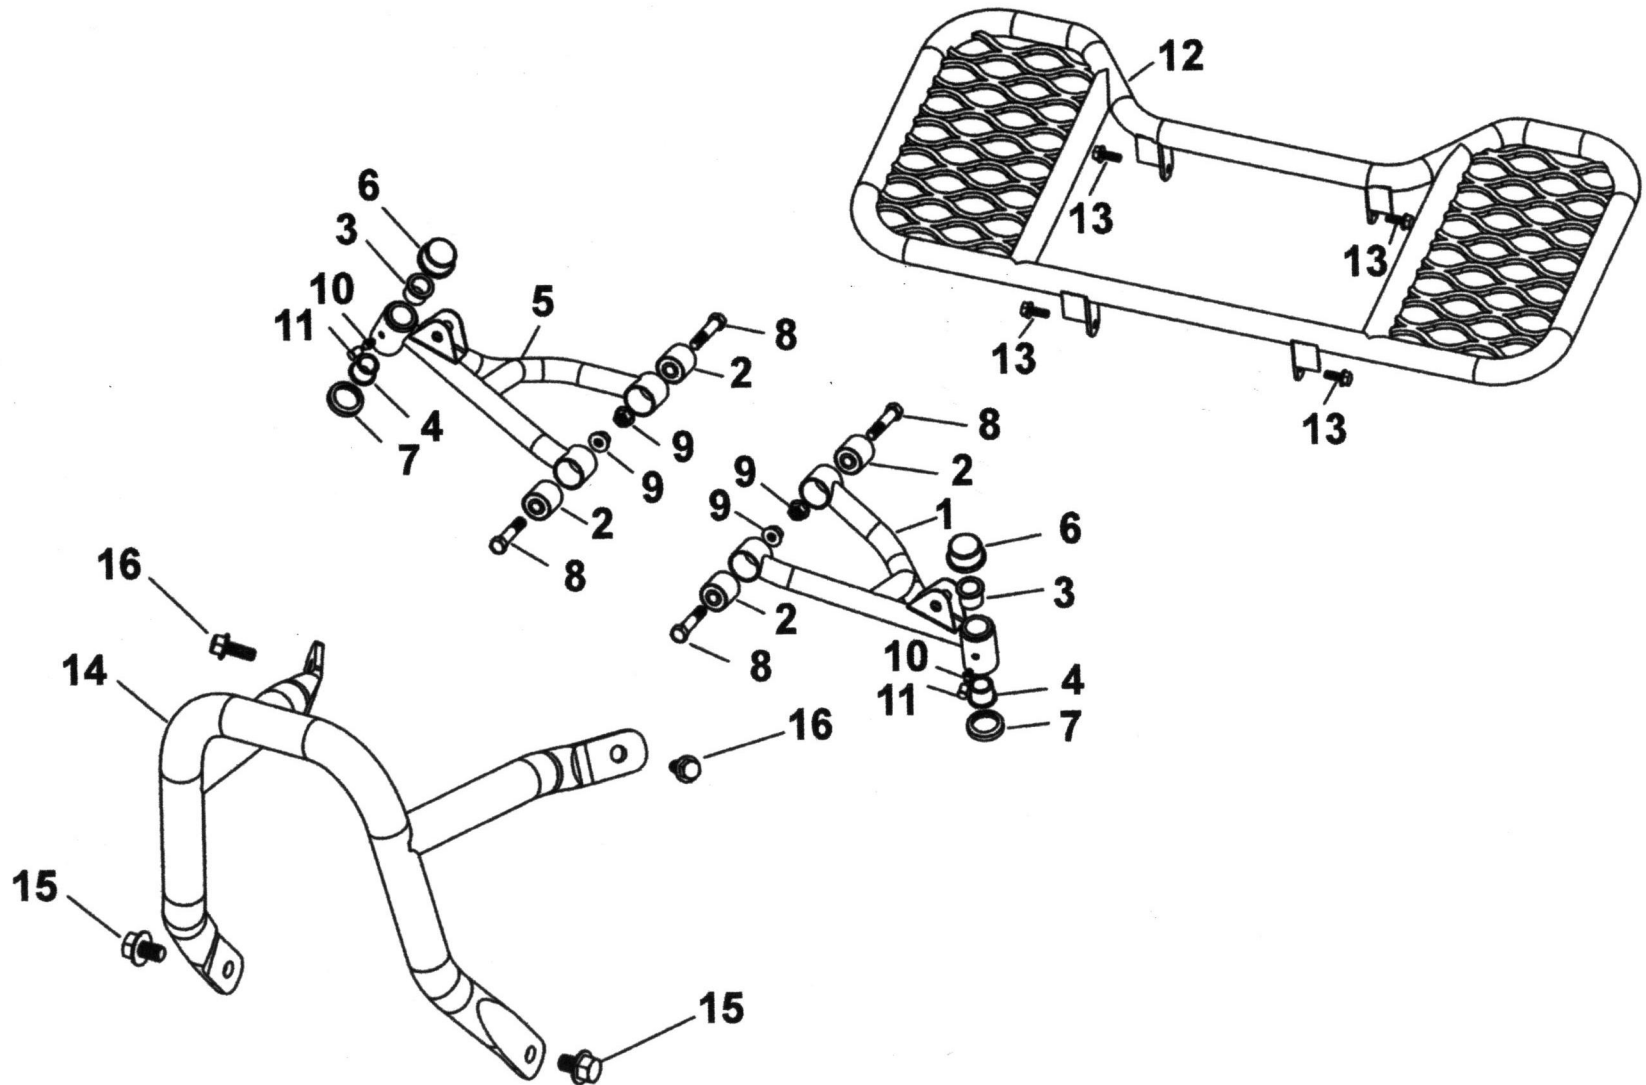


ITEM	PART NO.	NAME	QUANTITY	NOTE
15		SWING ARM, FOOTREST, FEND BAR		
15-1	E0200-5EA0-0000	ARM, SUSPENSION, L.H.	1	
15-2	E0201-5EA0-0000	BUSH, ARM SUSPENSION	4	
15-3	E0207-5EA0-0000	BUSH, CONTAIN OIL(ψ 15.5)	2	
15-4	E0206-5EA0-0000	BUSH, CONTAIN OIL(ψ 17)	2	
15-5	E0210-5EA0-0000	ARM, SUSPENSION, R.H.	1	
15-6	E0202-5EA0-0000	WATERPROOF COVER	2	
15-7	E0203-5EA0-0000	DUSTPROOF RUBBER	2	
15-8	I0102-10048	PIN HOLE BOLT(M10×48)	4	
15-9	I5611-10200	FLANGE SELF-LOCK NUT(M10)	4	
15-10	I6600-06000	GREASE VALVE	2	
15-11	E0209-5EA0-0000	CAP, GREASE VALVE	2	
15-12	E0700-5EA0-0000	FOOTREST ASSY.	1	
15-13	I0149-10022	FLANGE SCREW(M10×22)	4	
15-14	I5611-10200	FLANGE SELF-LOCK NUT(M10)	4	
15-15	E0400-5EA0-0000	FEND BAR ASSY.	1	
15-16	I0149-08016	FLANGE SCREW(M8×16)	2	
15-17	I0149-06016	FLANGE SCREW(M6×16)	2	

 16. FENDER

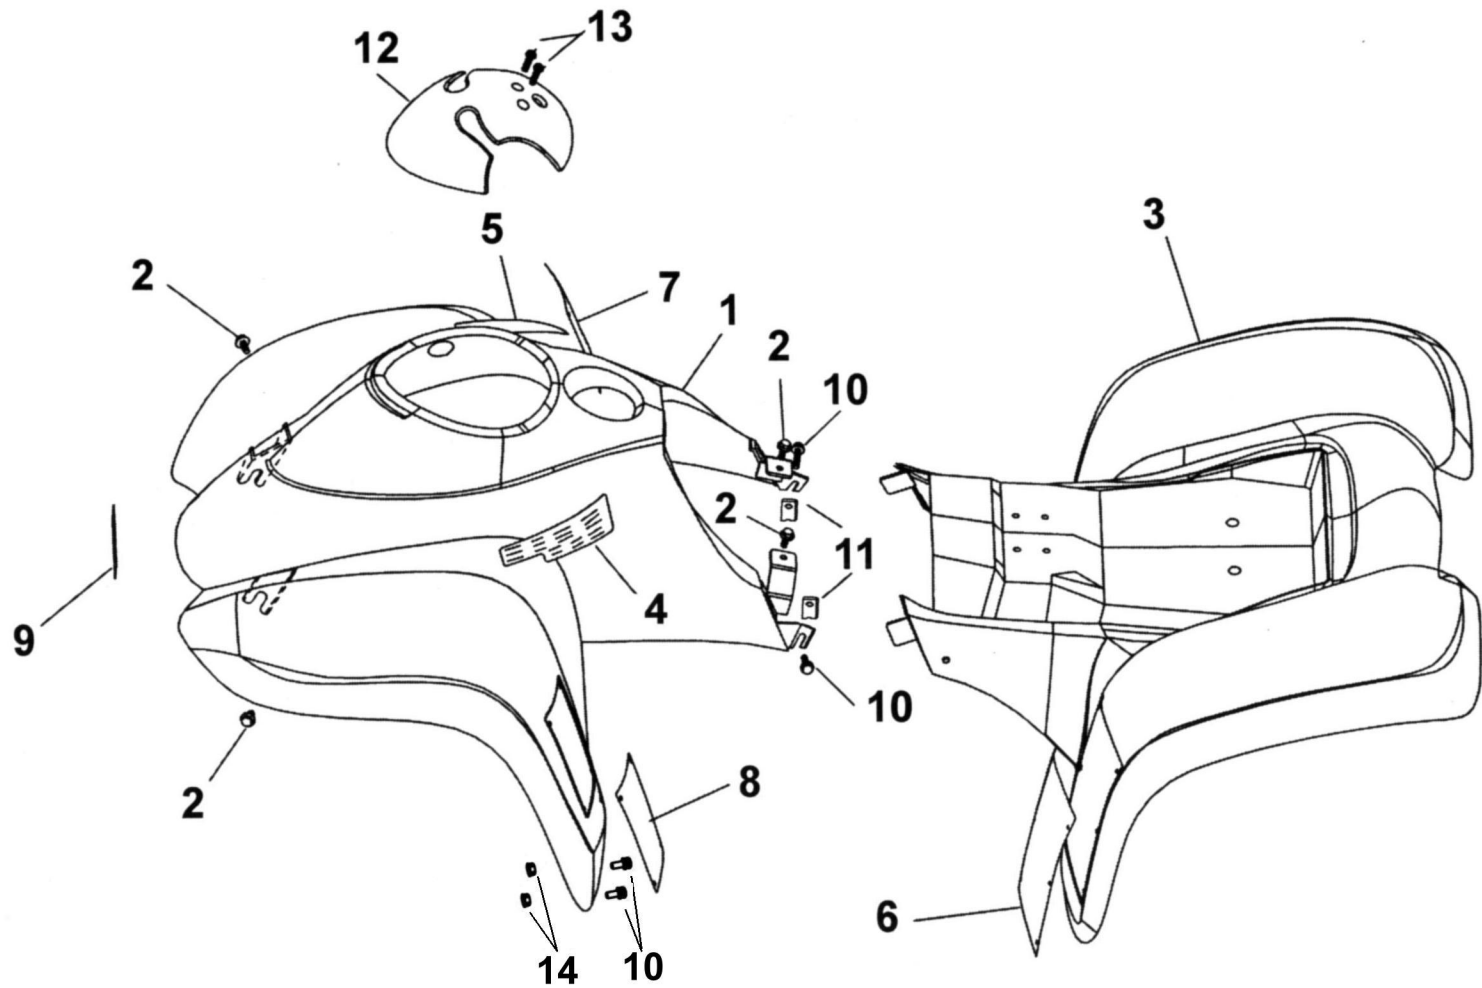



ITEM	PART NO.	NAME	QUANTITY	NOTE
16		FENDER		
16-1	F4300-5EA0-0100	FRONT FENDER(YELLOW)	1	
	F4300-5EA0-0200	FRONT FENDER(RED)	1	
16-2	I0119-06802	SCREW WITH WASHER(M6×14)	4	
16-3	H3500-5EA0-0100	REAR FENDER(YELLOW)	1	
	H3500-5EA0-0200	REAR FENDER(RED)	1	
16-4	F4304-5EA0-0000	STICKER 1,TYPE	1	
16-5	F4305-5EA0-0000	STICKER 2,TYPE	1	
16-6	F4306-5EA0-0000	STICKER, WARNING (PASSENGER)	1	
16-7	F4307-5EA0-0000	STICKER, WARNING(Y-12)	1	
16-8	F4308-5EA0-0000	STICKER, WARNING (TIRE psi)	1	
16-9	F4309-5EA0-0000	STICKER, MFD.	1	
16-10	I0149-06823	BOLT(M6×23)	2	
16-11	I5900-06400	NUT(M6)	2	
16-12	E3205-5EA0-0100	COVER, HANDLE BAR(YELLOW)	1	
	E3205-5EA0-0200	COVER, HANDLE BAR(RED)	1	
16-13	I8506-06012	SCREW(M6×12)	2	

 17. SEAT

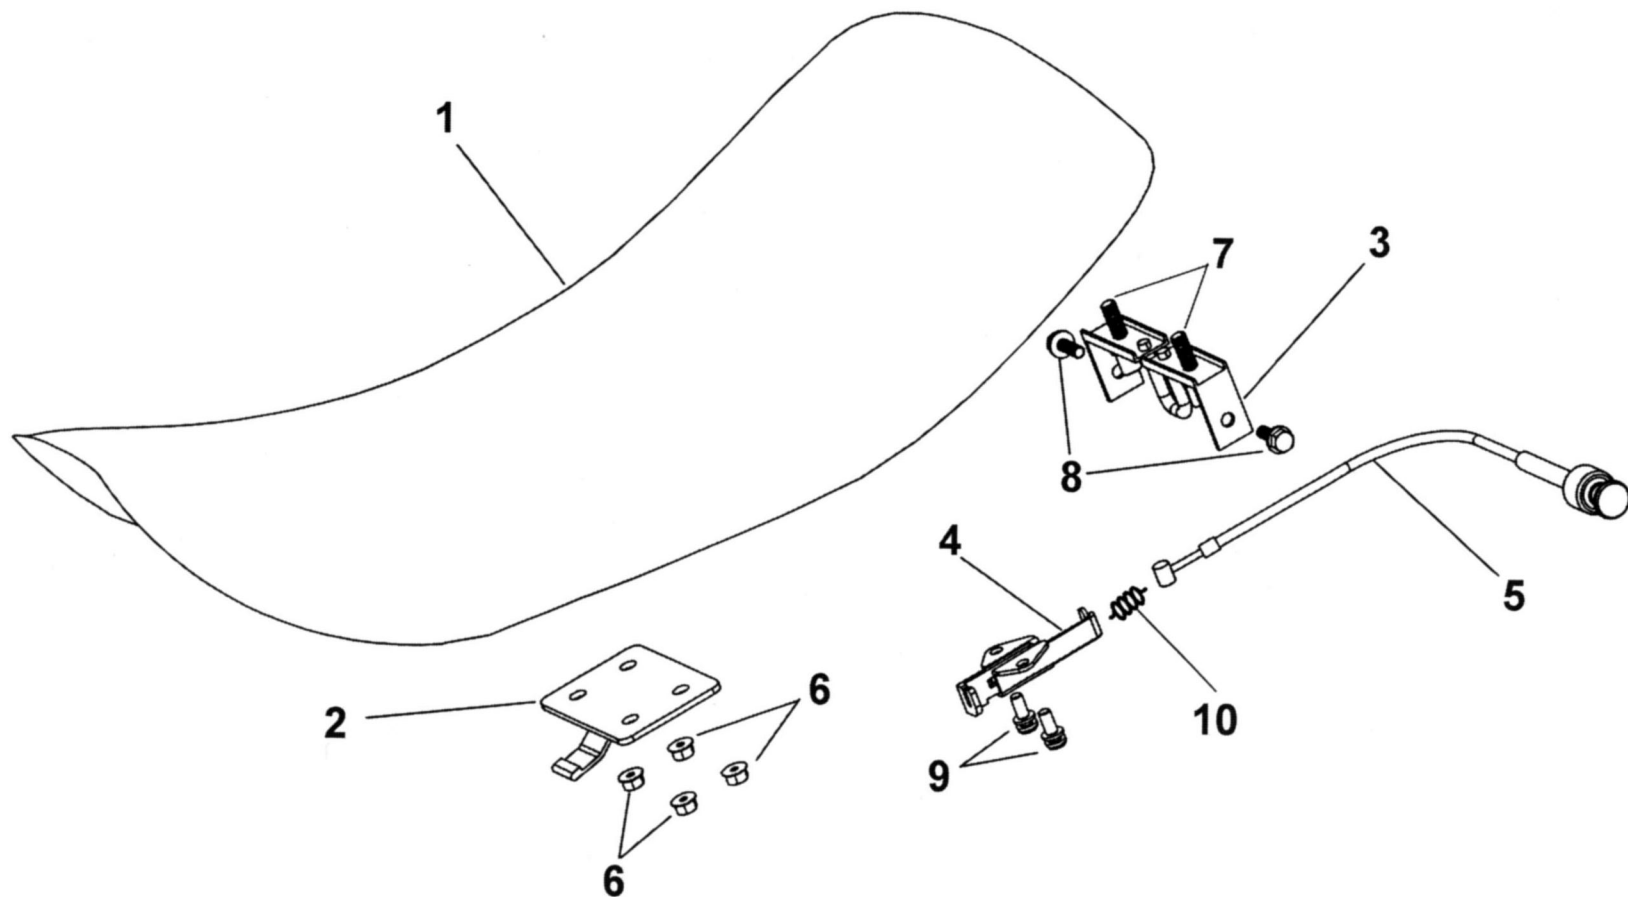


ITEM	PART NO.	NAME	QUANTITY	NOTE
17		SEAT		
17-1	G7200-5EA0-0000	SEAT ASSY.	1	
17-2	G7220-5EA0-0000	SEAT FIXED PLATE	1	
17-3	G7221-5EA0-0000	SEAT FIXER	1	
17-4	G7225-5EA0-0000	SEAT LOCK	1	
17-5	G7226-5EA0-0000	SEAT RELEASER UNIT	1	
17-6	I5702-06500	FLANGE NUT(M6)	4	
17-7	G7222-5EA0-0000	SEAT SCREW (M6×18)	2	
17-8	I0240-06012	BOLT WITH WASHER	2	
17-9	I8557-06012	BOLT WITH SPRING WASHER	2	
17-10	G7227-5EA0-0000	SPRING, LEVEL	1	

  18. OIL TANK, FUEL TANK

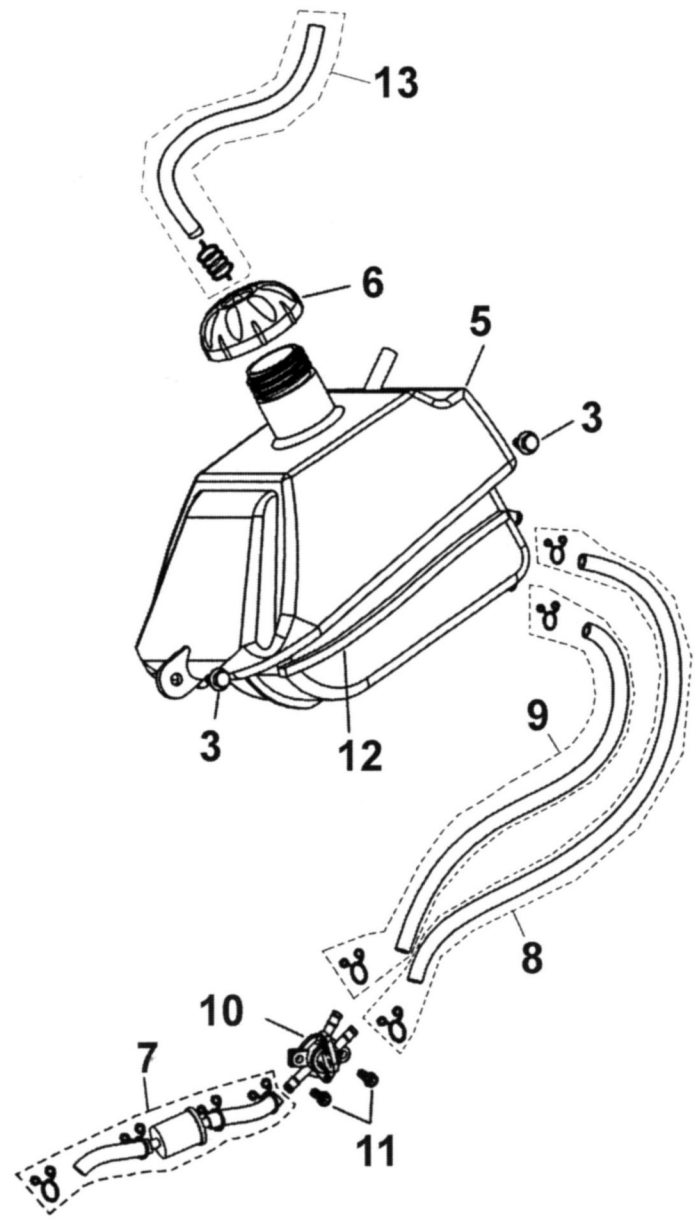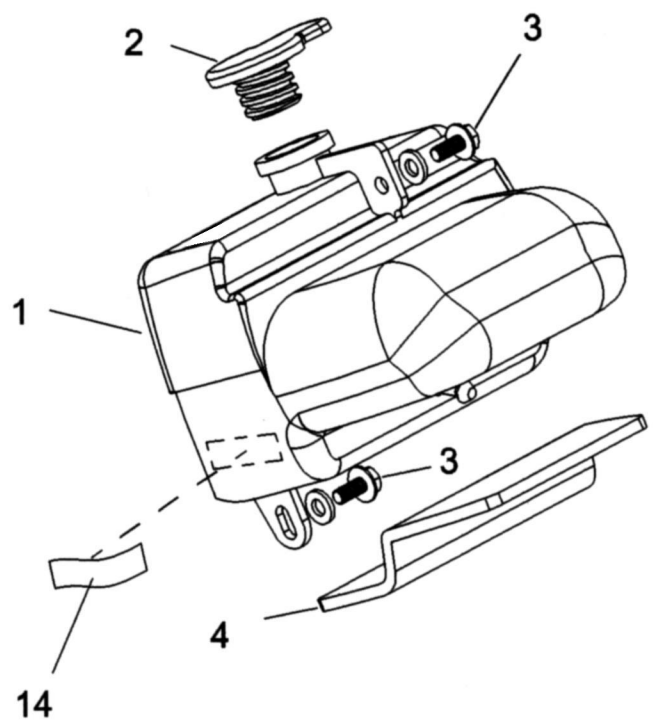


ITEM	PART NO.	NAME	QUANTITY	NOTE
18		OIL TANK, FUEL TANK		
18-1	E5100-5EA0-0000	OIL TANK ASSY.	1	
18-2	E5105-5EA0-0000	OIL TANK CAP	1	
18-3	I0119-06802	SCREW WITH WASHER(M6×14)	4	
18-4	E5101-5EA0-0000	PAD	1	
18-5	A7500-5EA0-0000	FUEL TANK ASSY.	1	
18-6	A7620-5EA0-0000	FUEL TANK CAP	1	
18-7	A7510-5EA0-0000	FUEL FILTER ASSY.	1	
18-8	A7501-5EA0-0000	FUEL TUBE	1	
18-9	A7502-5EA0-0000	SPARE TUBE	1	
18-10	A7520-5EA0-0000	MANUAL FUEL CUP ASSY.	1	
18-11	I8506-05016	SCREW(M5×16)	2	
18-12	A7509-5EA0-0000	PAD(5×10×200)	2	
18-13	A7621-5EA0-0000	BREATHE TUBE	1	

 19. SUSPENSION

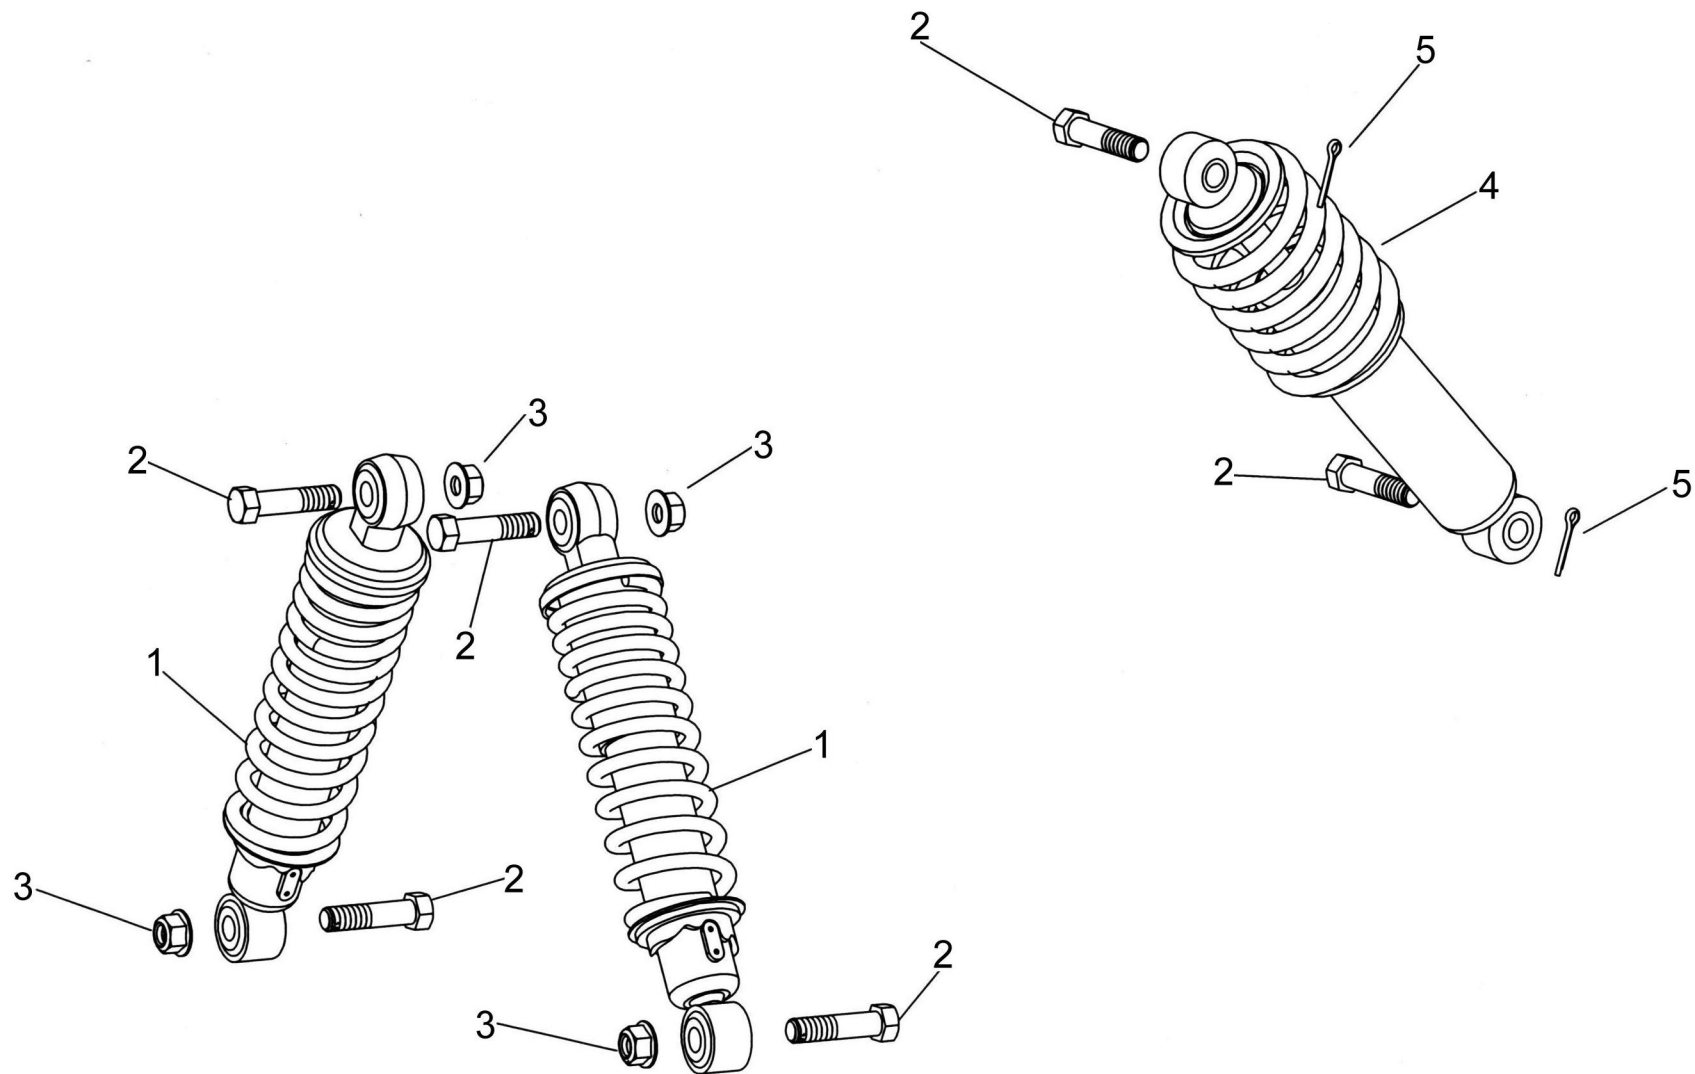


ITEM	PART NO.	NAME	QUANTITY	NOTE
19		SUSPENSION		
19-1	E1105-5EA0-0000	SUSPENSION, FRONT	2	
19-2	I0102-10040	PIN HOLE BOLT(M10×40)	6	
19-3	I5611-10200	FLANGE SELF-LOCK NUT(M10)	4	
19-4	E2400-5EA0-0000	SUSPENSION, REAR	1	
19-5	I9900-25019	COTTER PIN	2	

 20. FRONT WHEEL

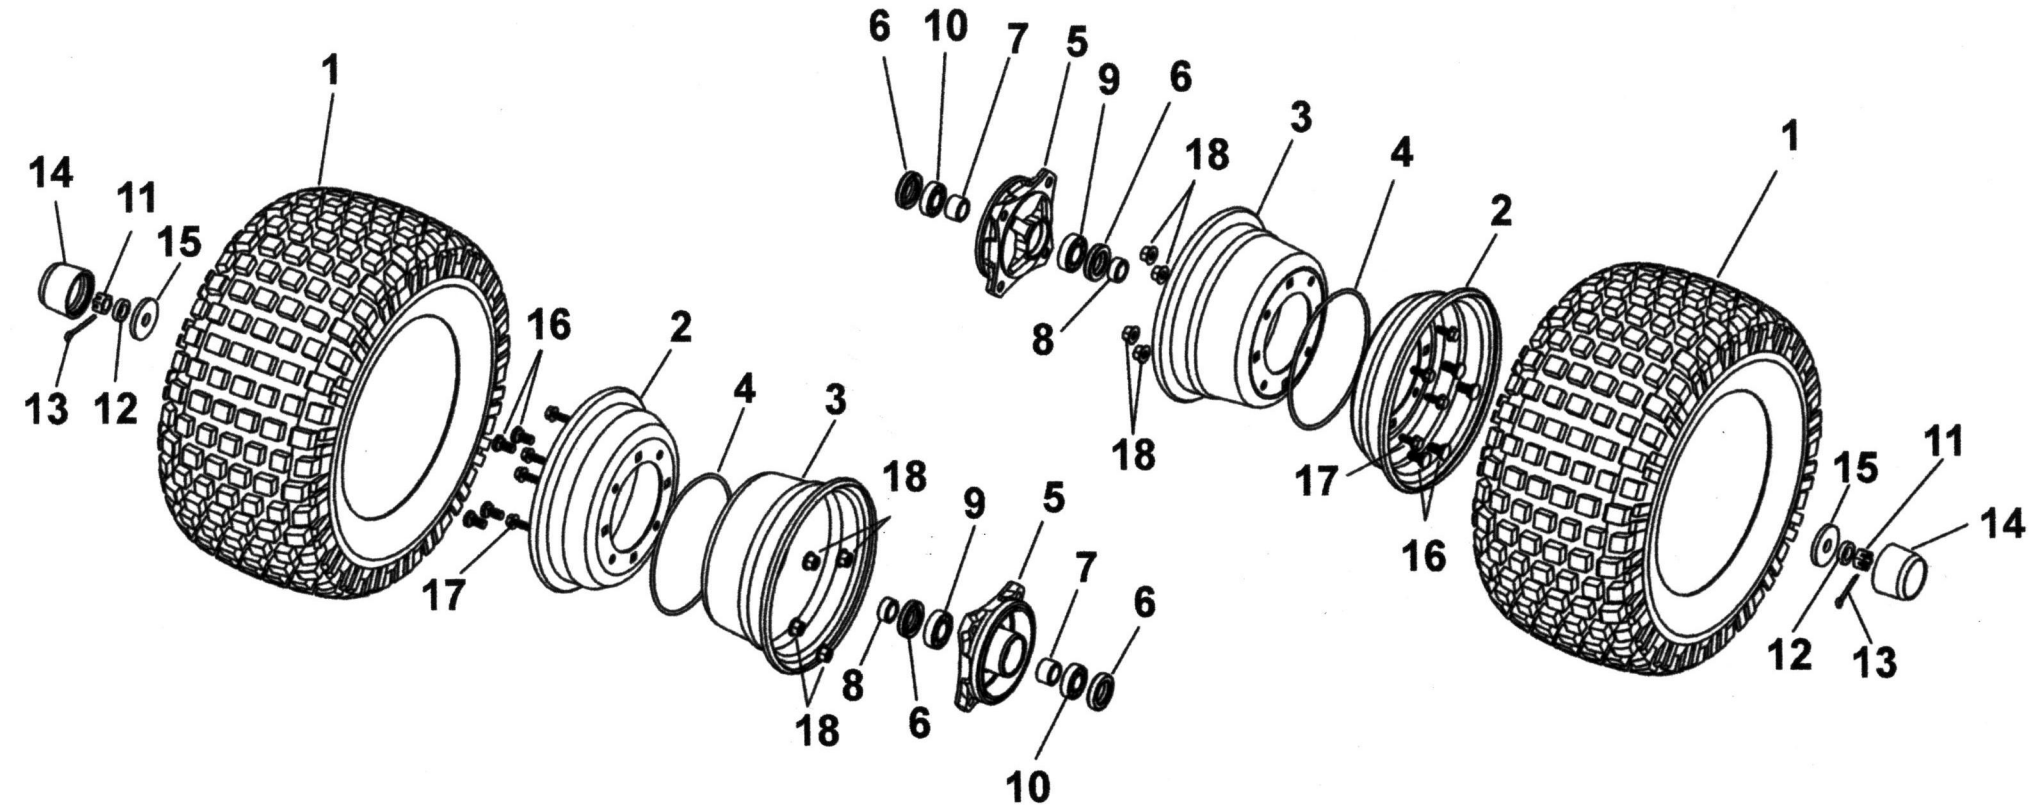



ITEM	PART NO.	NAME	QUANTITY	NOTE
20		FRONT WHEEL		
20-1	D4710-5EA0-0000	WHEEL TIRE(16×8-7)	2	
20-2	D4601-5EA0-0000	WHEEL RIM, OUTER	2	
20-3	D4602-5EA0-0000	WHEEL RIM, INNER	2	
20-4	D4605-5EA0-0000	O-RING(ψ 135×3)	2	
20-5	D4610-5EA0-0000	BRAKE DRUM, FRONT	2	
20-6	I3102-5AC0-0000	OIL SEAL(ψ 22×ψ 35×7)	4	
20-7	D4620-5EA0-0000	INNER SPACER(ψ 15×ψ 21.7×15)	2	
20-8	D4621-5EA0-0000	OUTER SPACER (ψ 15×ψ 21.7×10)	2	
20-9	I6100-6002Z	BEARING(6002Z)	2	
20-10	I6100-6003Z	BEARING(6003Z)	2	
20-11	I5500-12000	CASTLE NUT(M12)	2	
20-12	I9905-12100	WASHER(ψ 21×ψ 13×4t)	2	
20-13	I9900-30032	COTTER PIN	2	
20-14	D4609-5EA0-0000	RUBBER CAP	2	
20-15	D4608-5EA0-0000	WHEEL AXLE WASHER,FRONT (ψ 40×ψ 12×4.5t)	2	
20-16	I0149-08016-01	FLANGE SCREW(M8×16)	8	
20-17	I5400-08016-01	SCREW(M8×16)	8	
20-18	I5611-08200	FLANGE SELF-LOCK NUT(M8)	8	

 21. REAR WHEEL

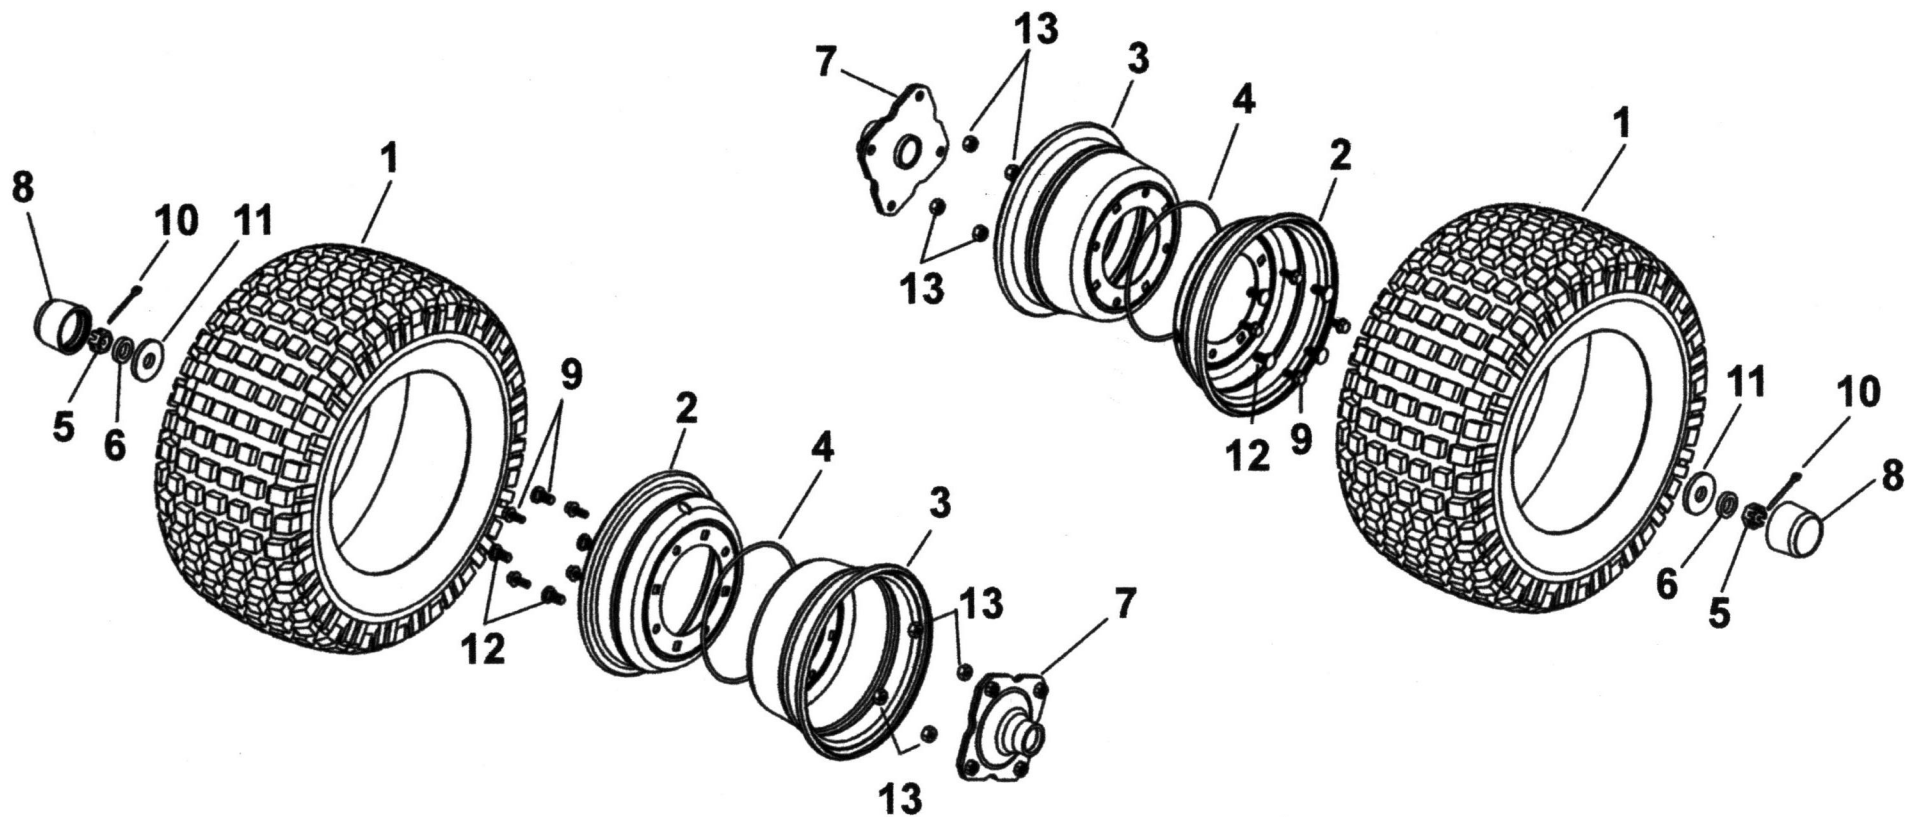


ITEM	PART NO.	NAME	QUANTITY	NOTE
21		REAR WHEEL		
21-1	D4710-5EA0-0000	WHEEL TIRE(16×8-7)	2	
21-2	D4601-5EA0-0000	WHEEL RIM, OUTER	2	
21-3	D4602-5EA0-0000	WHEEL RIM, INNER	2	
21-4	D4605-5EA0-0000	O-RING(ψ 135×3)	2	
21-5	I5500-14000	CASTLE NUT(M14)	2	
21-6	I9905-14100	WASHER(ψ 24×ψ 15×5t)		
21-7	D2705-5EA0-0000	SHAFT CONNECTER	2	
21-8	D4609-5EA0-0000	RUBBER COVER	2	
21-9	I0149-08016-01	FLANGE SCREW(M8×16)	8	
21-10	I9900-30032	COTTER PIN	2	
21-11	D2309-5EA0-0000	WHEEL AXLE WASHER, REAR (ψ 40×ψ 14×4.5t)	2	
21-12	I5400-08016-01	SCREW(M8×16)	8	
21-13	I5611-08200	FLANGE SELF-LOCK NUT(M8)	8	

  22. FRONT BRAKE

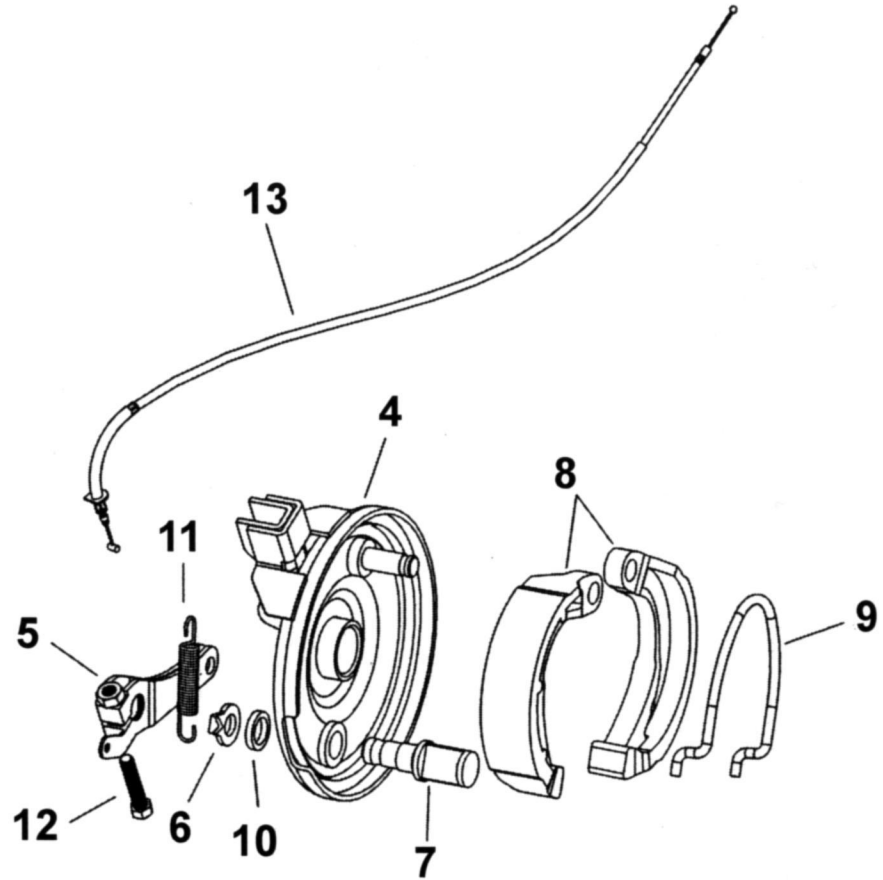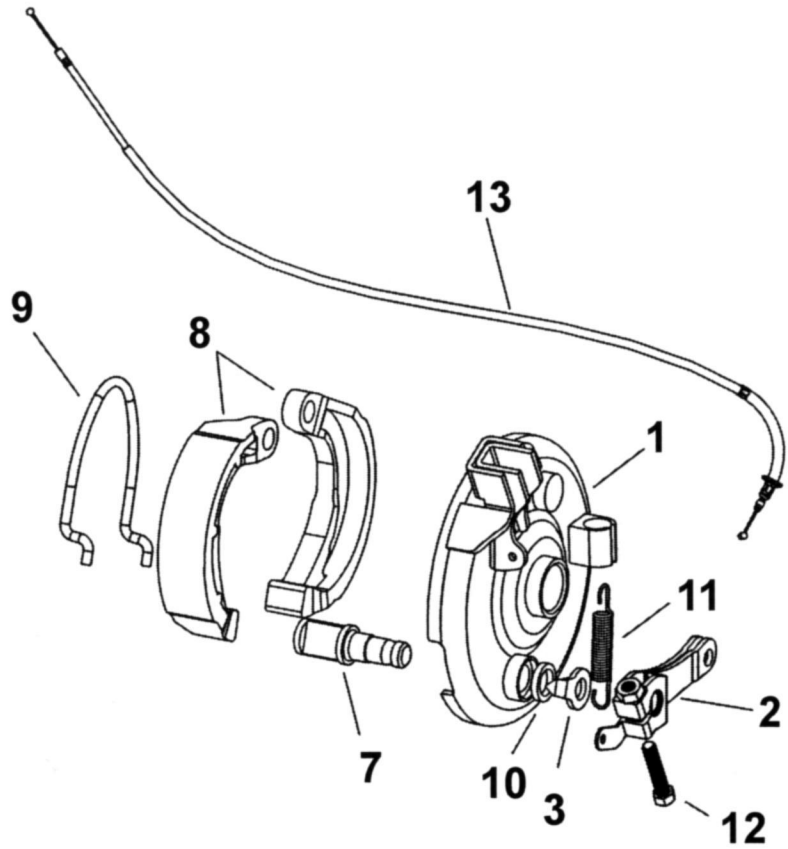

ITEM	PART NO.	NAME	QUANTITY	NOTE
22		FRONT BRAKE		
22-1	D5351-5EA0-0000	FRONT BRAKE PANEL COMP., LEFT	1	
22-2	D5410-5EA0-0000	FRONT BRAKE ARM, LEFT	1	
22-3	D5145-5EA0-0000	FRONT BRAKE INDICATOR, LEFT	1	
22-4	D5352-5EA0-0000	FRONT BRAKE PANEL COMP., RIGHT	1	
22-5	D5411-5EA0-0000	FRONT BRAKE ARM,RIGHT	1	
22-6	D5146-5EA0-0000	FRONT BRAKE INDICATOR, RIGHT	1	
22-7	D5141-5EA0-0000	FRONT BRAKE ARM CAM	2	
22-8	D5120-5EA0-0000	FRONT BRAKE SHOE COMP.	2	
22-9	D5125-5EA0-0000	SPRING	2	
22-10	D5149-5EA0-0000	FELT SEAL	2	
22-11	D5419-5EA0-0000	RETURN SPRING, FRONT	2	
22-12	I0020-05024	BOLT(M5×24)	2	
22-13	E5450-5EA0-0000	CABLE, FRONT BRAKE	2	

 
23. REAR BRAKE

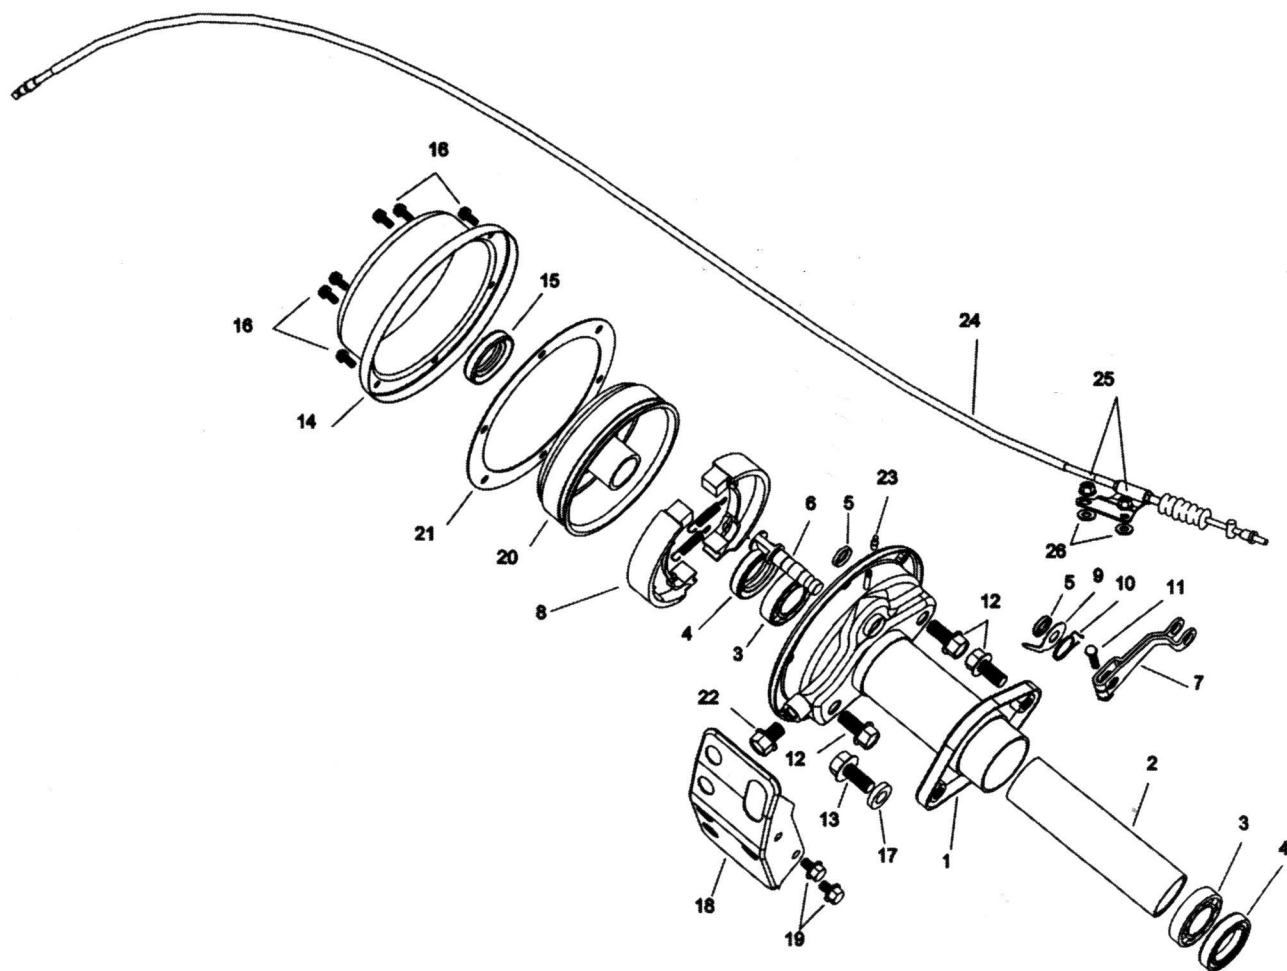

ITEM	PART NO.	NAME	QUANTITY	NOTE
23		REAR BRAKE		
23-1	D2310-5EA0-0000	BEARING SEAT ASSY., REAR WHEEL AXLE	1	
23-2	D2311-5EA0-0000	SPACER	1	
23-3	I6100-6006ZZ	BEARING(6006Z)	2	
23-4	D2313-5EA0-0000	OIL SEAL(ψ 35×ψ 55×11)	2	
23-5	D2314-5EA0-0000	OIL SEAL(ψ 14×ψ 20×4)	2	
23-6	D3141-5EA0-0000	BRAKE ARM CAM, REAR	1	
23-7	D3410-5EA0-0000	BRAKE ARM, REAR	1	
23-8	D3120-5EA0-0000	BRAKE SHOE COMP., REAR(ψ 130)	1	
23-9	D3415-5EA0-0000	BRAKE INDICATOR, REAR	1	
23-10	D3419-5EA0-0000	RETURN SPRING, REAR	1	
23-11	I0020-06030	BOLT(M6×30)	1	
23-12	I0141-12025-01	FLANGE SCREW(M12×25)	3	
23-13	I0141-12028-01	FLANGE SCREW(M12×28)	1	
23-14	D3615-5EA0-0000	DRUM COVER, REAR	1	
23-15	D3616-5EA0-0000	OIL SEAL(ψ 32×ψ 52×11)	1	
23-16	I8557-06012	BOLT WITH WASHER(M6×12)	6	
23-17	D2203-5EA0-0000	WASHER(ψ 25×ψ 13×5)	1	
23-18	D3617-5EA0-0000	REAR BRAKE COVER	1	
23-19	I0149-08012	FLANGE SCREW(M8×12)	2	
23-20	D3610-5EA0-0000	REAR DRUM	1	
23-21	D3611-5EA0-0000	GASKET, REAR DRUM COVER	1	
23-22	I0149-12016	FLANGE BOLT(M12×16)	1	


23-23	D2319-5EA0-0000	PLUG, PURGE HOLE	1
23-24	E3450-5EA0-0000	CABLE, REAR BRAKE	1
23-25	I5611-08200	FLANGE SELF-LOCK NUT(M8)	2

 24. HANDLE BAR

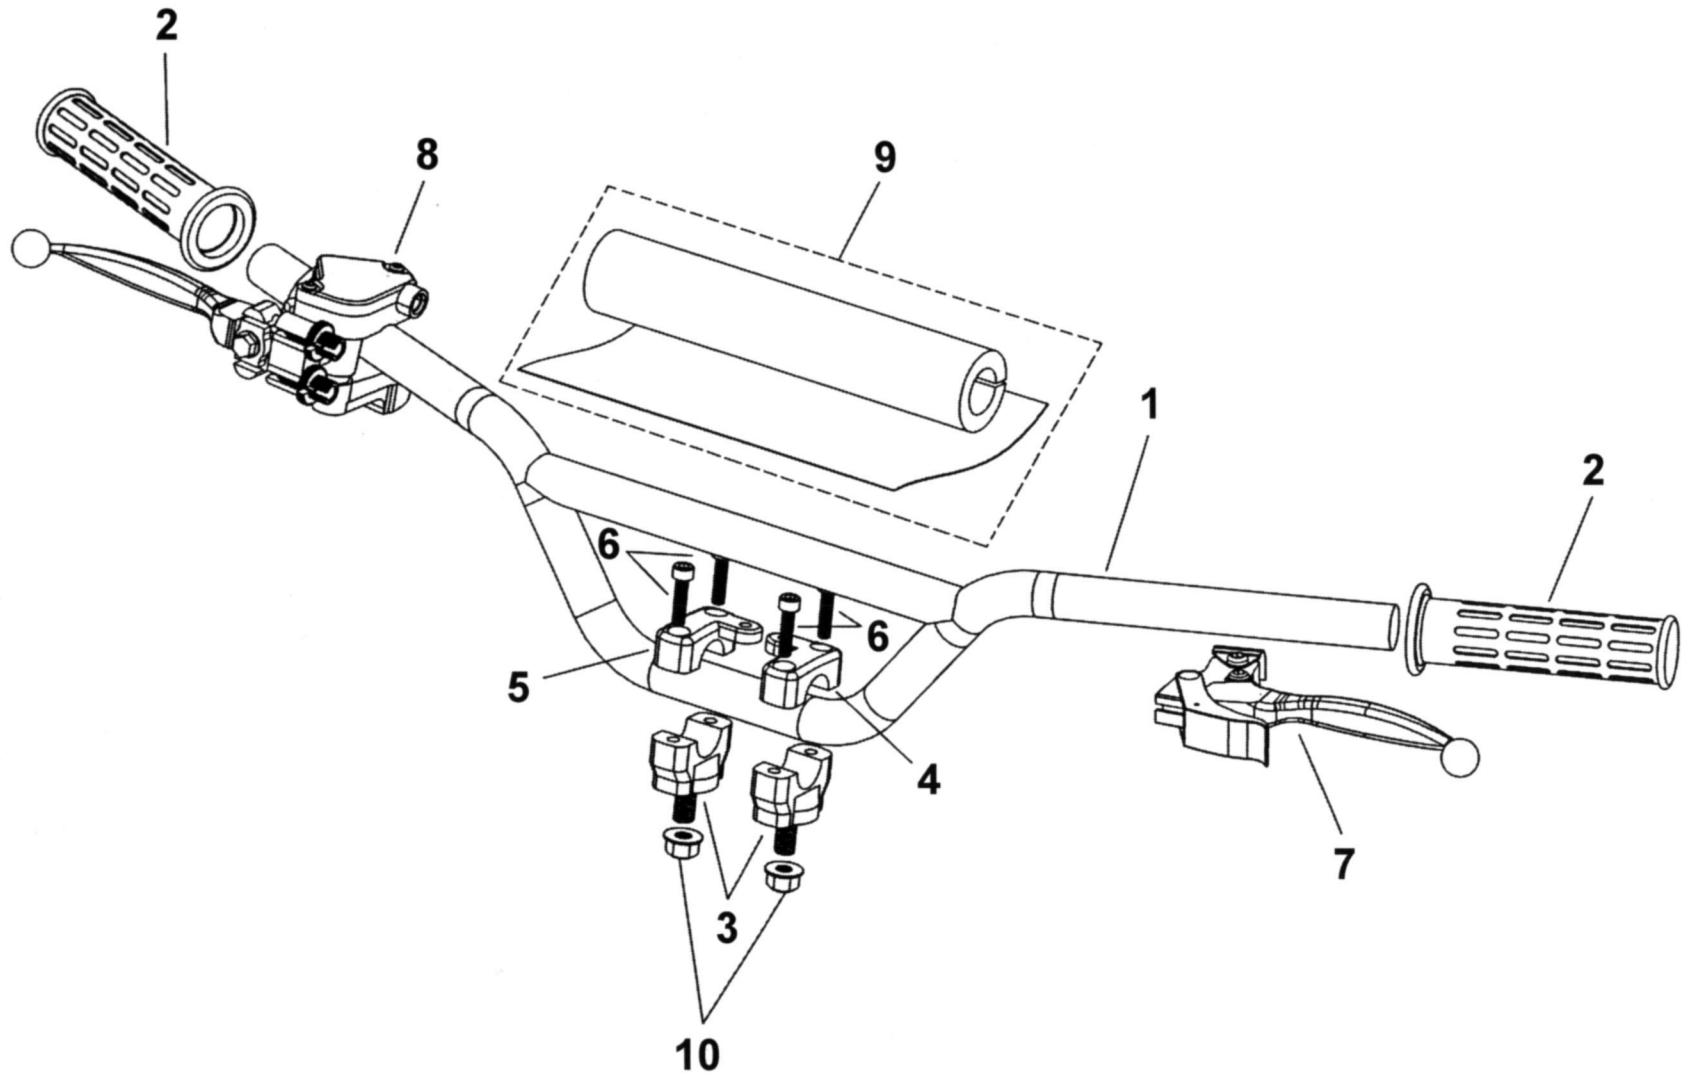


ITEM	PART NO.	NAME	QUANTITY	NOTE
24		HANDLE BAR		
24-1	E3100-5EA0-0000	HANDLE BAR ASSY.	1	
24-2	E3166-5EA0-0000	GRIP HANDLE	2	
24-3	E3112-5EA0-0000	HANDLE BAR CLAMP, BOTTOM	2	
24-4	E3110-5EA0-0000	HANDLE BAR CLAMP, CAP, LEFT	1	
24-5	E3111-5EA0-0000	HANDLE BAR CLAMP, CAP, RIGHT	1	
24-6	I0050-06025	SOCKET SCREW(M6×25)	4	
24-7	E3170-5EA0-0000	LEVEL ASSY., LEFT	1	
24-8	E3180-5EA0-0000	LEVEL ASSY., RIGHT	1	
24-9	E3101-5EA0-0000	HANDLE BAR PROTECT FOAM	1	
24-10	I5611-10200	FLANGE SELF-LOCK NUT (M10)	2	

 25. REAR WHEEL AXLE

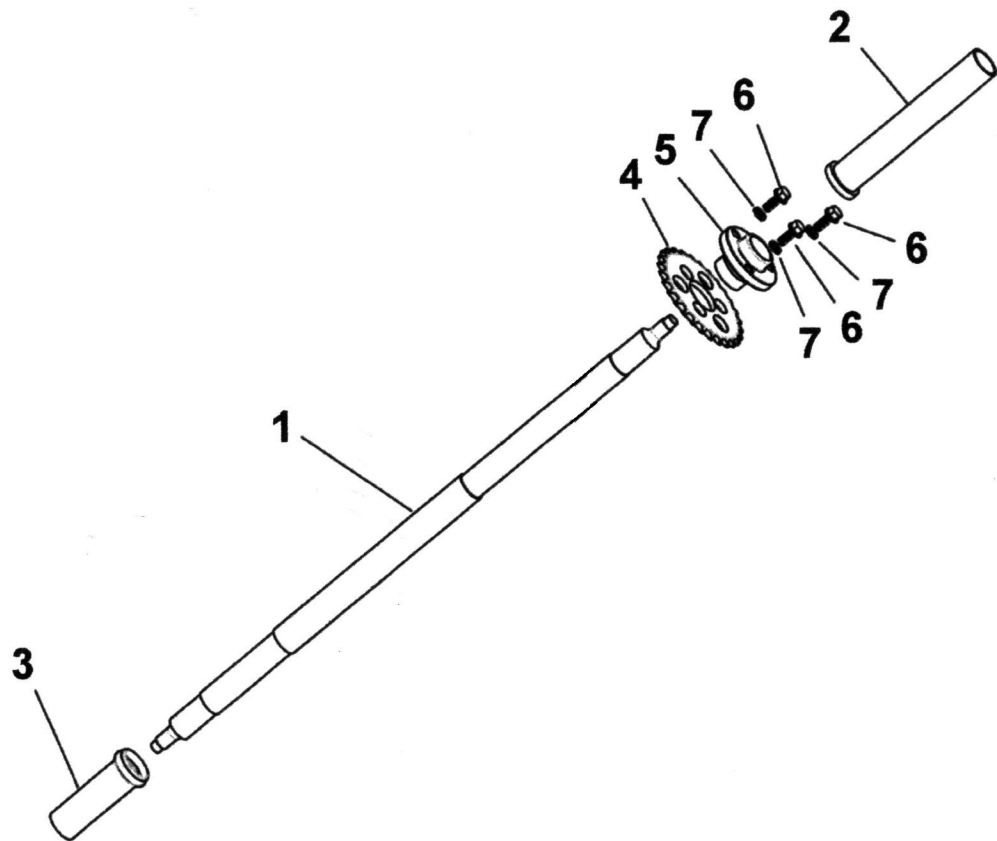


ITEM	PART NO.	NAME	QUANTITY	NOTE
25		REAR WHEEL AXLE		
25-1	D2301-5EA0-0000	AXLE, REAR	1	
25-2	D2306-5EA0 -0000	RIGHT SPACER, LONG	1	
25-3	D2305-5EA0-0000	LEFT SPACER, SHORT	1	
25-4	D0110-5EA0-0000	SPROCKET, REAR(28T)	1	
25-5	D0111-5EA0-0000	SPROCKET HOLDER, REAR	1	
25-6	I0149-08020-01	FLANGE SCREW(M8×20)	3	
25-7	I9901-08100	SPRING WASHER(ψ 8)	3	

 26. CHAIN

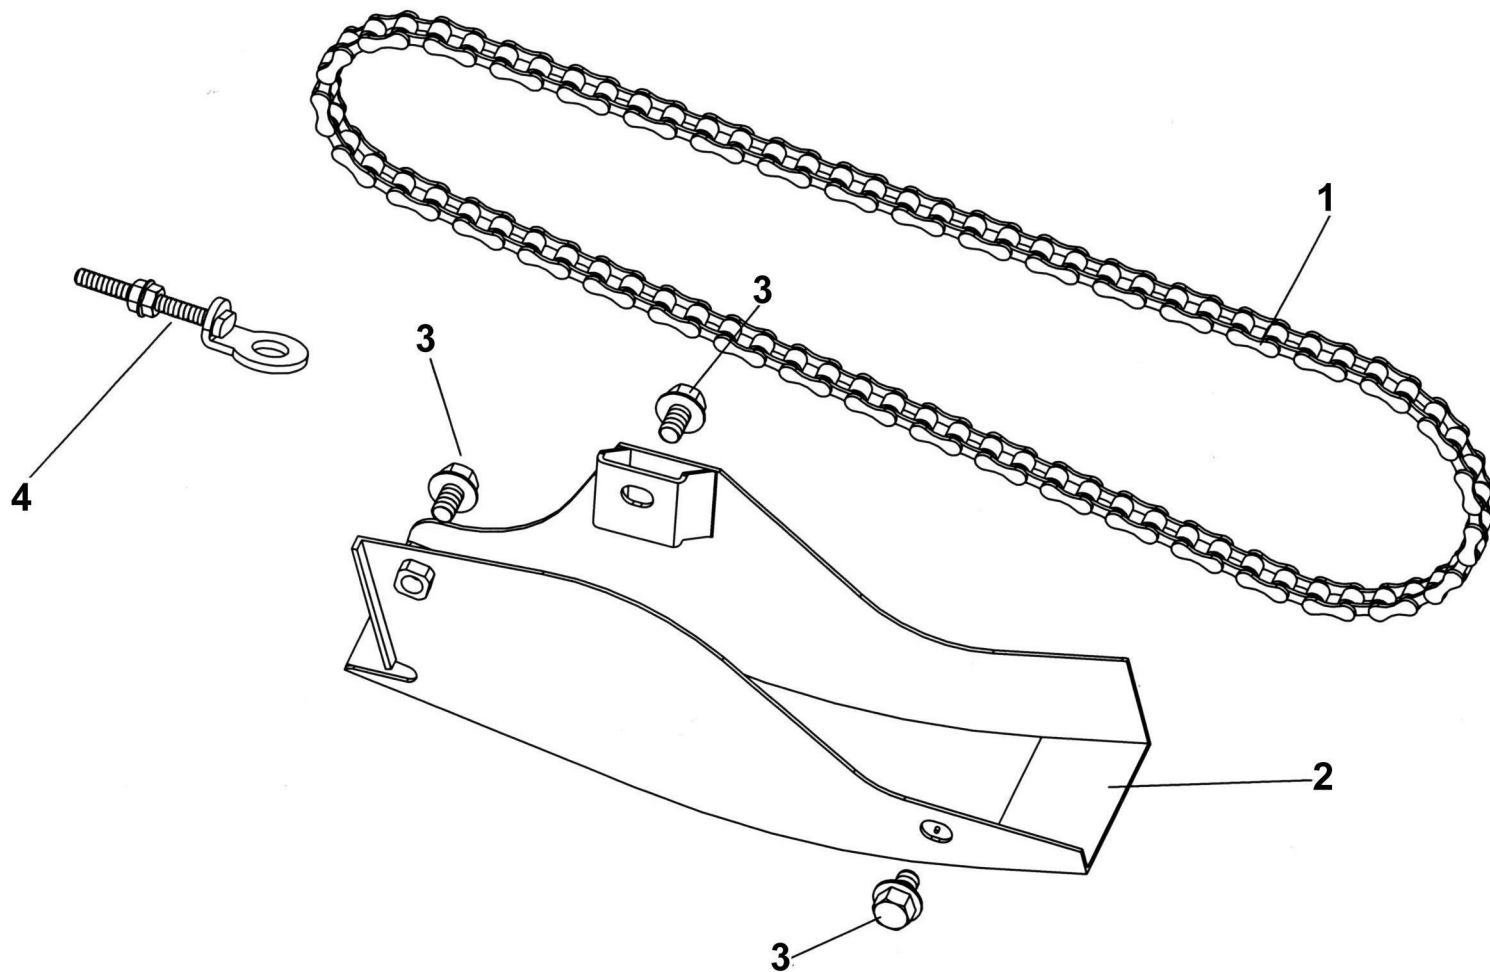


ITEM	PART NO.	NAME	QUANTITY	NOTE
26		CHAIN		
26-1	D0100-5EA0-0000	DRIVE CHAIN ASSY.(#420,78)	1	
26-2	D0101-5EA0-0000	PROTECT COVER	1	
26-3	I0149-08012	FLANGE SCREW(M8×12)	3	
26-4	D0120-5EA0-0000	ADJUSTER, CHAIN	1	

 27. STEERING

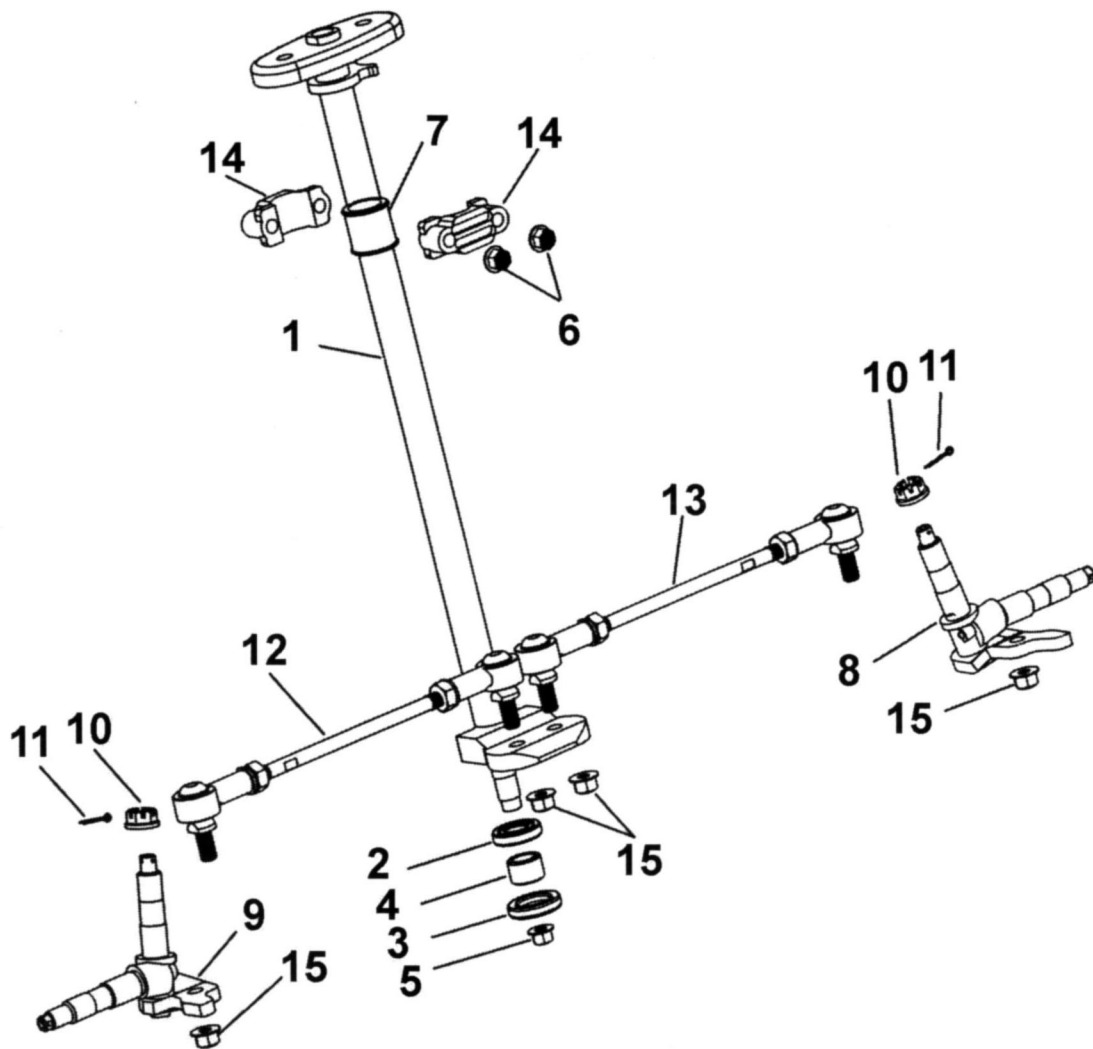


ITEM	PART NO.	NAME	QUANTITY	NOTE
27		STEERING		
27-1	E3200-5EA0-0000	SHAFT ASSY., STEERING	1	
27-2	E3201-5EA0-0000	OIL SEAL(ψ 18×ψ 32×7)	1	
27-3	I3102-5AC0-0000	OIL SEAL(ψ 22×ψ 35×7)	1	
27-4	D4620-5EA0-0000	INNER SPACER(ψ 15×ψ 21.7×15)	1	
27-5	I5611-14200	FLANGE SELF-LOCK NUT (M14)	1	
27-6	I5611-08200	FLANGE SELF-LOCK NUT (M8)	2	
27-7	E3225-5EA0-0000	PU BUSH SLEEVE, STEERING SHAFT	1	
27-8	E0205-5EA0-0000	KNUCKLE, LEFT	1	
27-9	E0215-5EA0-0000	KNUCKLE, RIGHT	1	
27-10	I5550-10000	CASTLE FLANGE NUT (M10)	2	
27-11	I9900-20019	COTTER PIN	2	
27-12	E0255-5EA0-0000	BALL JOINT, LEFT THREAD (M10×1.25)	2	
27-13	E0256-5EA0-0000	BALL JOINT, RIGHT THREAD(M10×1.25)	2	
27-14	E0250-5EA0-0000	BOLT, TIE-ROD	2	
27-15	E3202-5EA0-0000	HOLDER, STEERING SHAFT	2	
27-16	I5611-10200	FLANGE SELF-LOCK NUT (M10)	4	

 28. ELECTRIC PARTS

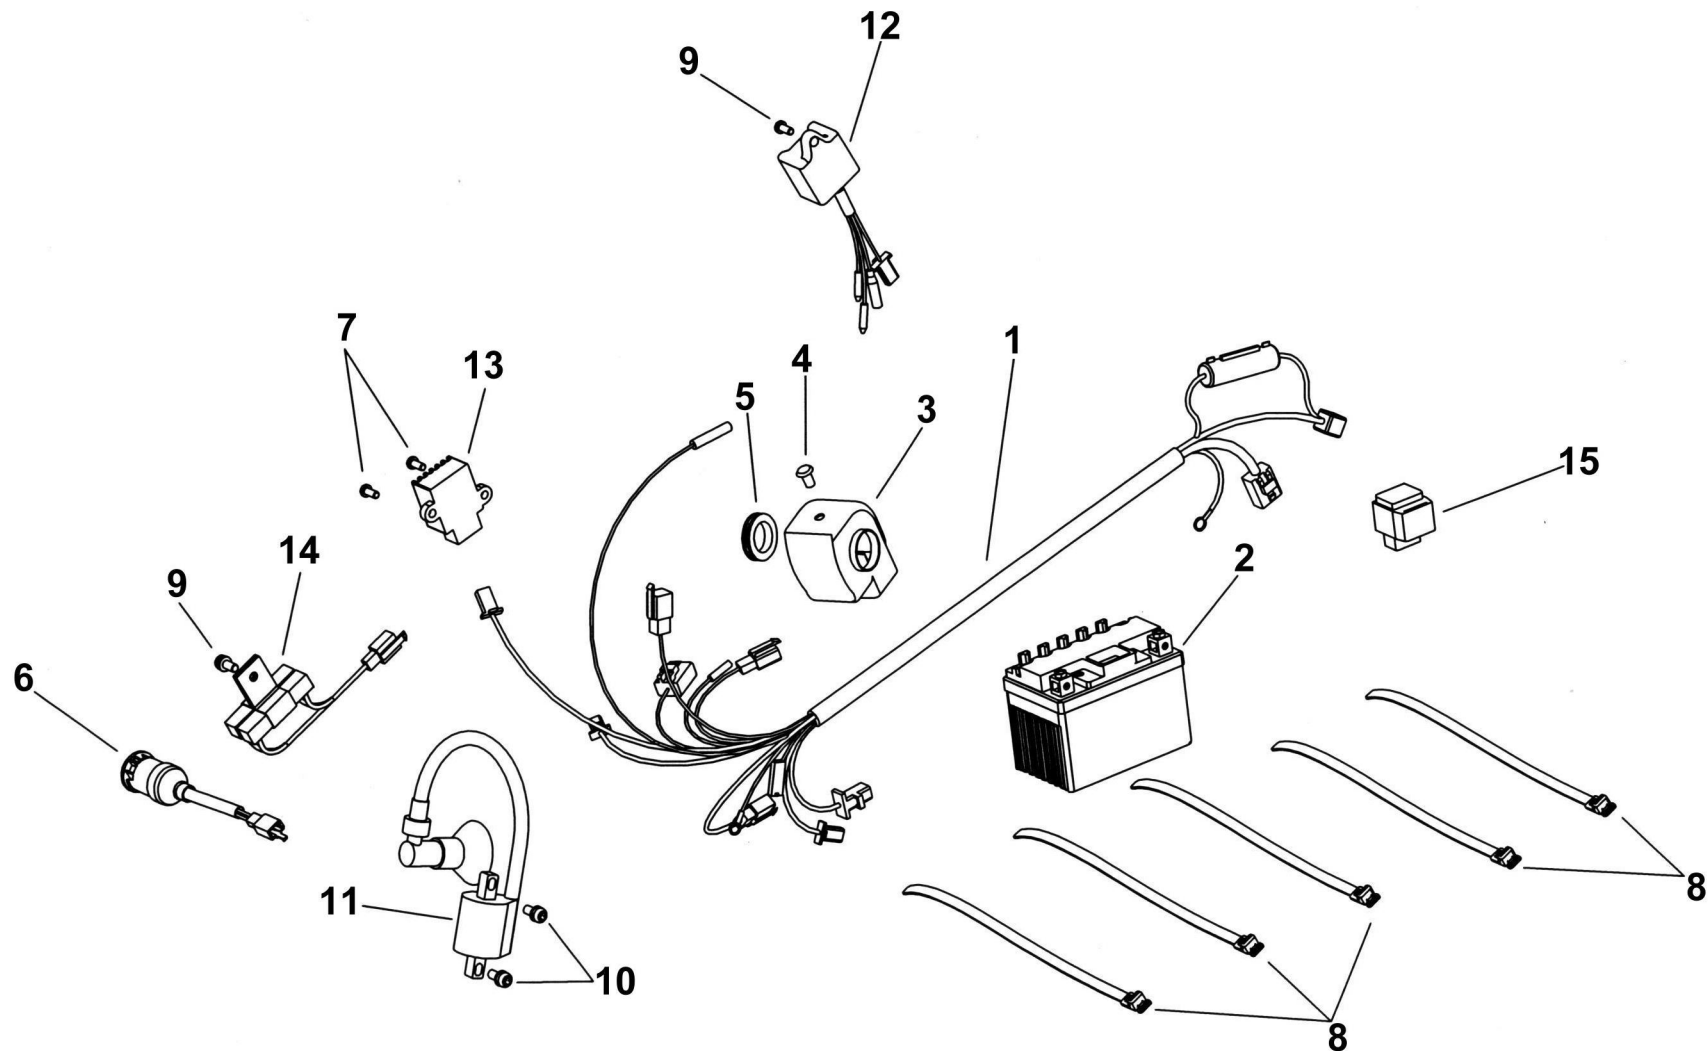

ITEM	PART NO.	NAME	QUANTITY	NOTE
28		ELECTRICAL PARTS		
28-1	C2100-5EA0-0000	MAIN WIRE ASSY.	1	
28-2	C1500-5EA0-0000	BATTERY	1	
28-3	C5200-5EA0-0000	LEVER HOLDER ASSY., LEFT	1	
28-4	C5201-5EA0-0000	PLUG	1	
28-5	C5202-5EA0-0000	RUBBER PLUG	1	
28-6	C501A-5EA0-0000	MAIN SWITCH ASSY.	1	
28-7	I8506-05012	SCREW(M5×12)	2	
28-8	H3936-5AA0-0000	WIRE CLAMP	6	
28-9	I8556-06016	SCREW WITH WASHER(M6×16)	2	
28-10	I8556-06020	SCREW WITH WASHER(M6×20)	2	
28-11	C051A-B00-0000	IGNITION COIL ASSY.	1	
28-12	C1500-B00-0000	C.D.I. UNIT ASSY. C.D.I.	1	
28-13	C1600-B00-0000	RECTIFIER & REGULATOR	1	
28-14	C5400-B00-0000	RESISTOR ASSY.	1	
28-15	C5850-B00-0000	STARTER RELAY ASSY.	1	

 29. TOOL BOX

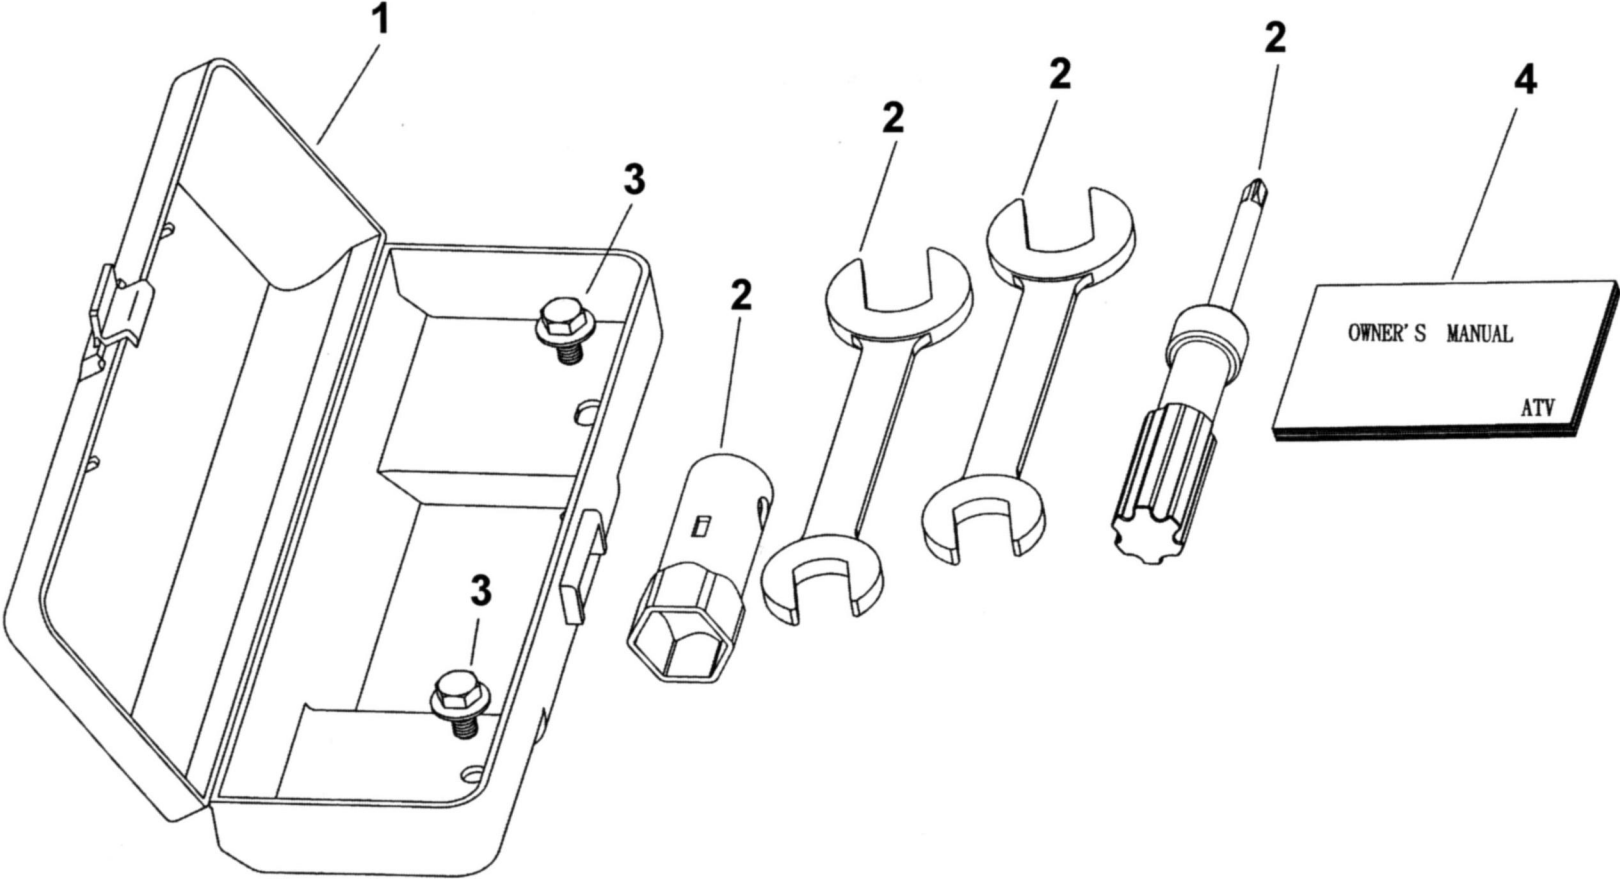

ITEM	PART NO.	NAME	QUANTITY	NOTE
29		TOOL BOX		
29-1	H9010-5EA0-0000	TOOL BOX	1	
29-2	H9020-5EA0-0000	TOOLS	1	
29-3	I0140-06012	SCREW WITH WASHER(M6×12)	2	
29-4	H9901-5EA0-0000	OWNER'S MANUAL	1	