

E-TON

PARTS LIST MANUAL



TXL 90


ATV1B

CONTENTS

PARTS ITEM


- | | |
|----|--|
| 1 | CYLINDER, HEAD |
| 2 | CRANKSHAFT, PISTON |
| 3 | FAN COVER, AIR SHROUD |
| 4 | OIL PUMP |
| 5 | AIR CLEANER, REED VALVE |
| 6 | CARBURETOR |
| 7 | CRANK CASE, COVER |
| 8 | KICK SHAFT ASSY., STARTER CLUTCH ASSY. |
| 9 | DRIVEN PULLEY |
| 10 | TRANSMISSION |
| 11 | ENGINE BRACKET |
| 12 | GENERATOR, START MOTOR |
| 13 | MUFFLER |
| 14 | FRAME |
| 15 | SWING ARM, FOOTREST, FEND BAR |
| 16 | FENDER |
| 17 | SEAT |
| 18 | OIL TANK , FUEL TANK |
| 19 | SUSPENSION |
| 20 | FRONT WHEEL |
| 21 | REAR WHEEL |
| 22 | FRONT BRAKE |
| 23 | REAR BRAKE |
| 24 | HANDLE BAR |
| 25 | REAR WHEEL AXLE |
| 26 | CHAIN |
| 27 | STEERING |
| 28 | ELECTRICAL PARTS |
| 29 | TOOL BOX |

 1. CYLINDER, HEAD

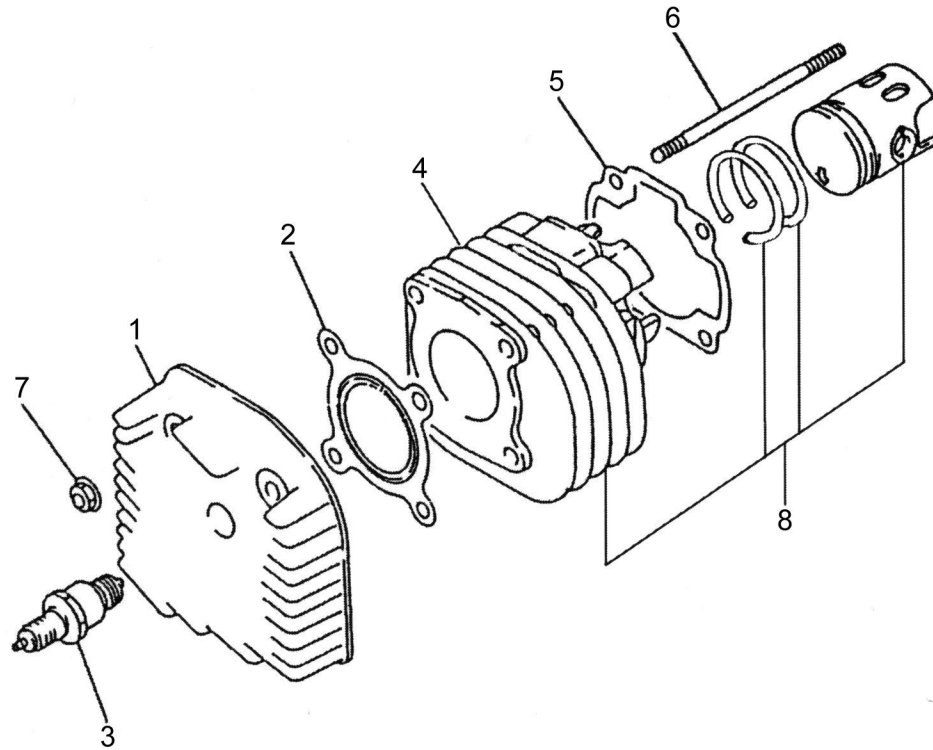


ITEM	PART NO.	NAME	QUANTITY
1		CYLINDER, HEAD	
1-1	A2200-B00-0000	HEAD CYLINDER	1
1-2	A2251-B00-0000	GASKET CYLINDER HEAD	1
1-3	I4701-00264	SPARK PLUG (NGK BPR7HS)	1
1-4	A2100-B00-0000	CYLINDER	1
1-5	A2191-B00-0000	GASKET CYLINDER	1
1-6	I0031-07124	BOLT STUD.	4
1-7	I4050-07080	FLANGE NUT	4
1-8	A210A-B00-0000	CYLINDER, PISTON AND RINGS	1

 2. CRANKSHAFT, PISTON

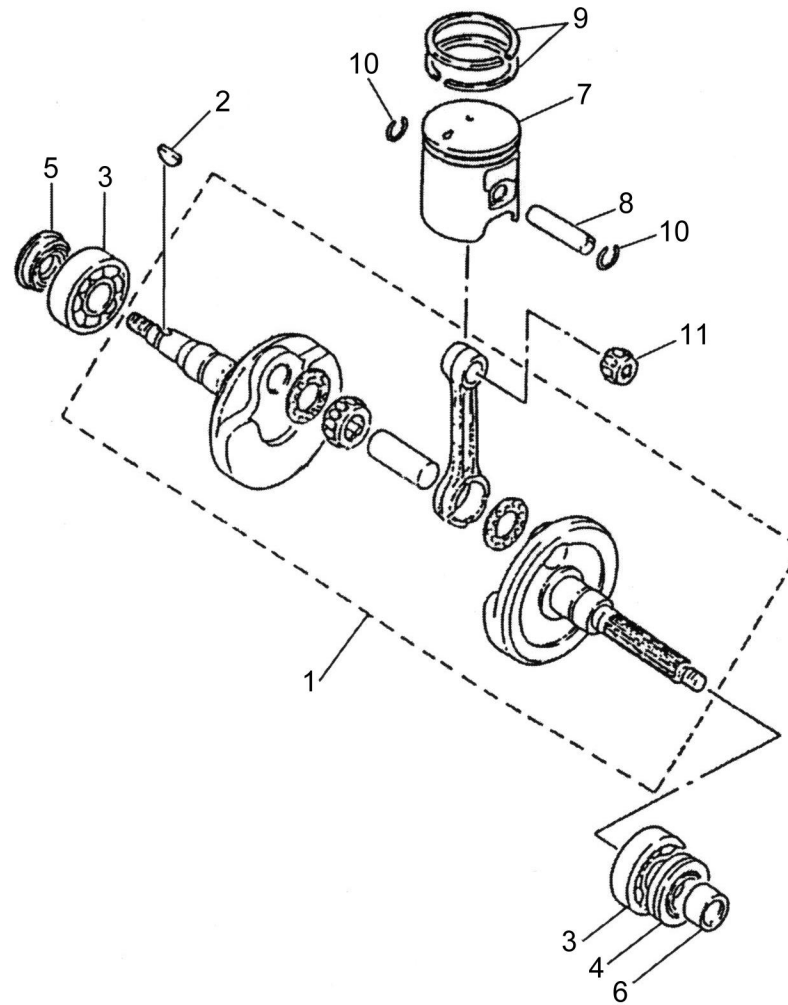


ITEM	PART NO.	NAME	QUANTITY
2		CRANKSHAFT, PISTON	
2-1	A3000-B00-8000	CRANKSHAFT ASSY.	1
2-2	I0701-B00-0000	KEY, WODRUFF	1
2-3	I1002-62040	BEARING RADIAL BALL	2
2-4	I1202-B00-0000	OIL SEAL	1
2-5	I1201-B00-0000	OIL SEAL	1
2-6	B8117-B00-0000	COLLAR	1
2-7	A3101-B00-0000	PISTON	1
2-8	A3111-B00-0000	PIN PISTON	1
2-9	A3011-B00-0000	PISTON RING SET	1
2-10	I4601-B00-0000	CIRCLIP	2
2-11	I1102-B00-0000	BRG.CON-ROD	1

 3. FAN COVER, SHROUD

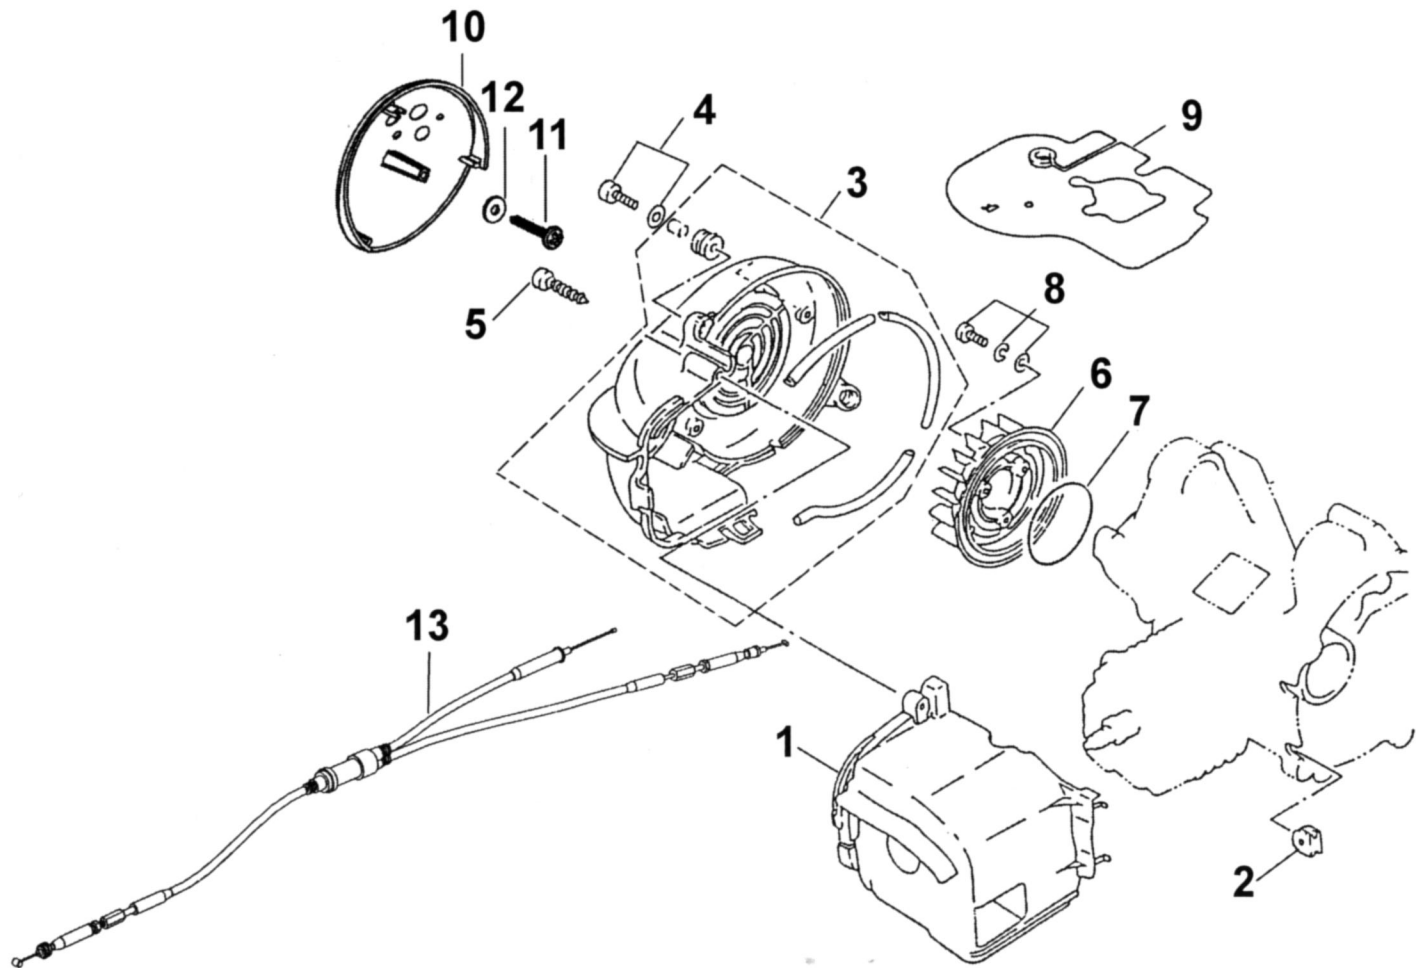


ITEM	PART NO.	NAME	QUANTITY
3		FAN COVER, AIR SHROUD	
3-1	A9620-B00-0000	AIR SHROUD, CYLINDER	1
3-2	A1207-B00-0000	GROMMET	2
3-3	A9610-B00-0000	FAN COVER ASSY.	1
3-4	I3891-06020	SCREW, W/WASHER	2
3-5	I3911-06040	SCREW, TAPPING	1
3-6	A9510-B00-0000	FAN	1
3-7	I1302-B00-0000	O-RING	1
3-8	I3893-06016	SCREW, W/WASHER	3
3-9	H0153-B00-0000	DEFLEVTOR	1
3-10	A9616-B00-0400	FAN COVER, SHROUD PLATE(BLUE)	1
	A9616-B00-0500	FAN COVER, SHROUD PLATE(GREEN)	1
3-11	I3903-45380	SCREW	1
3-12	I4101-05316	WASHER	1
3-13	A7910-5EA0-0000	CABLE ASSY., THROTTLE	1

 4. OIL PUMP

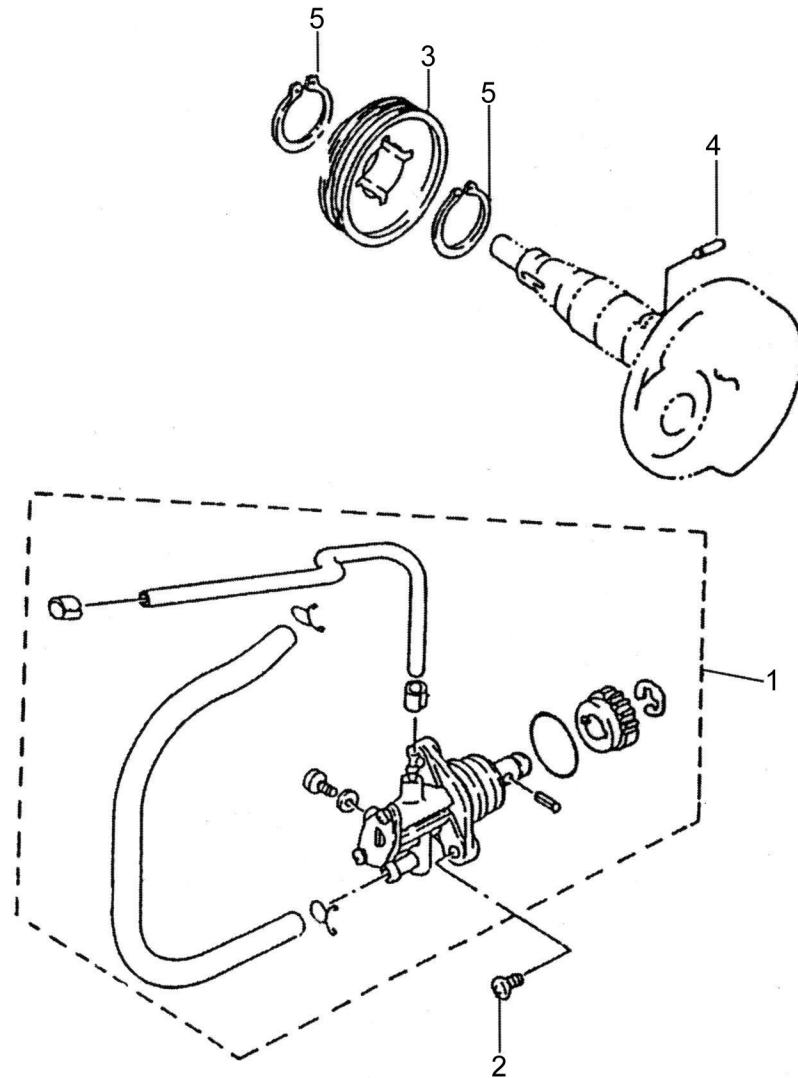


ITEM	PART NO.	NAME	QUANTITY
4		OIL PUMP	
4-1	A510A-B00-9000	OIL PUMP ASSY.	1
4-2	I3500-05014	SCREW, PAN HEAD	2
4-3	A5131-B00-0000	GEAR, PUMP DRIVE	1
4-4	I6220-03012	PIN DOWEL	1
4-5	I4510-19000	CIRCLIP	2

 5. AIR CLEANER, REED VALVE

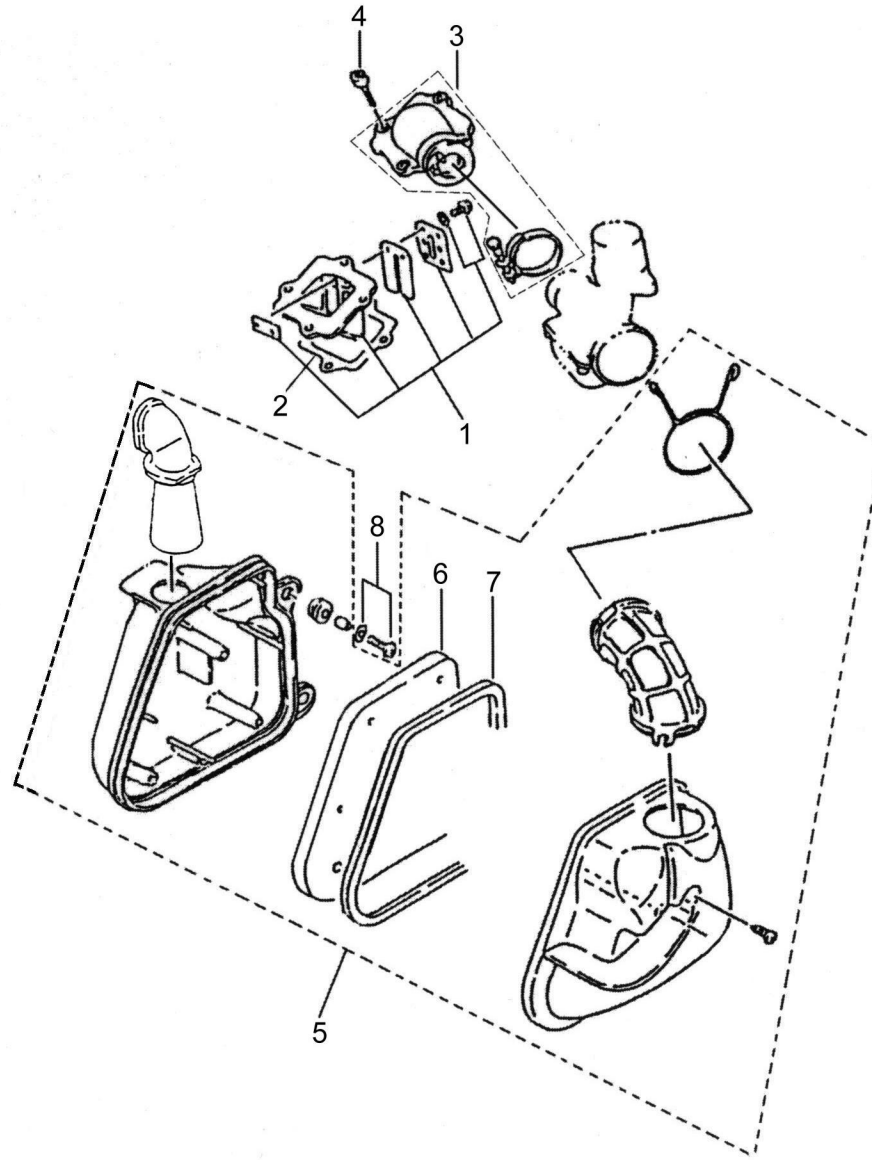

ITEM	PART NO.	NAME	QUANTITY
5		AIR CLEANER, REED VALVE	
5-1	A410A-B00-0000	REED VALVE ASSY.	1
5-2	A6201-B00-0000	GASKET, VALVE SEAT	1
5-3	A711A-B00-0000	MANIFOLD, INTAKE	1
5-4	I6001-06020	FLANGE BOLT	4
5-5	A720A-B00-9000	AIR CLEANER ASSY.	1
5-6	A7205-B00-0000	ELEMENT, AIR CLEANER	1
5-7	A7214-B00-0000	SEAL	1
5-8	I3891-06020	SCREW W/WASHER	2

 6. CARBURETOR

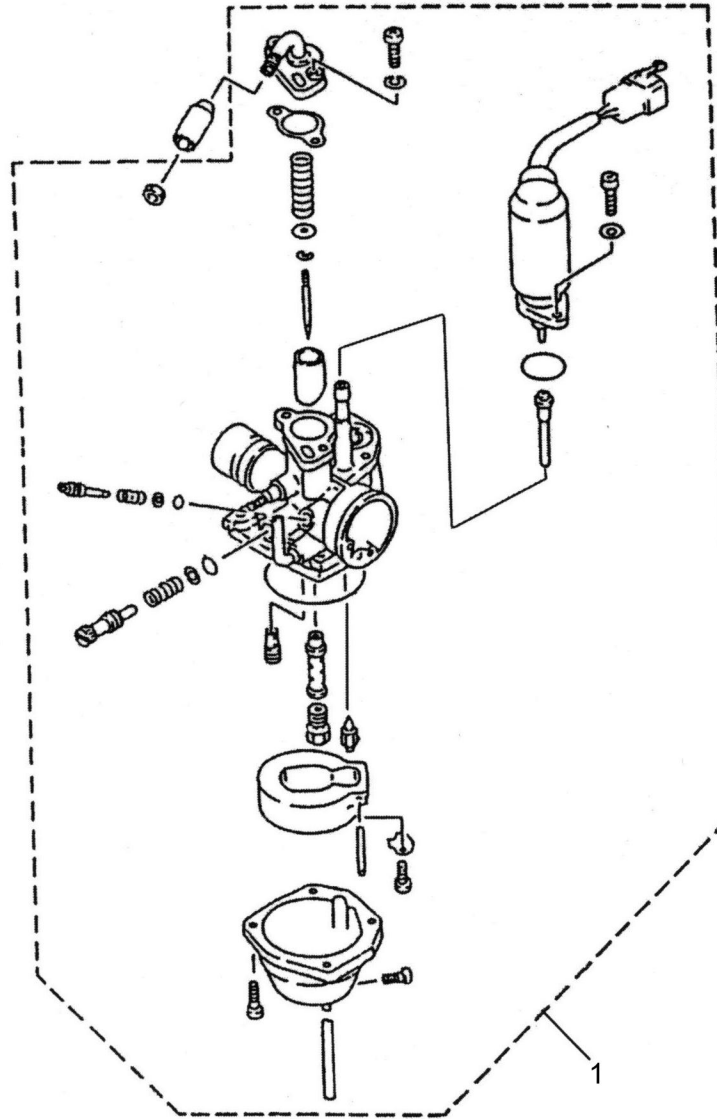

ITEM	PART NO.	NAME	QUANTITY
------	----------	------	----------

6

CARBURETOR

 
6-1

A6100-B00-0001

CARBURETOR ASSY.


1

7. CRANK CASE, COVER

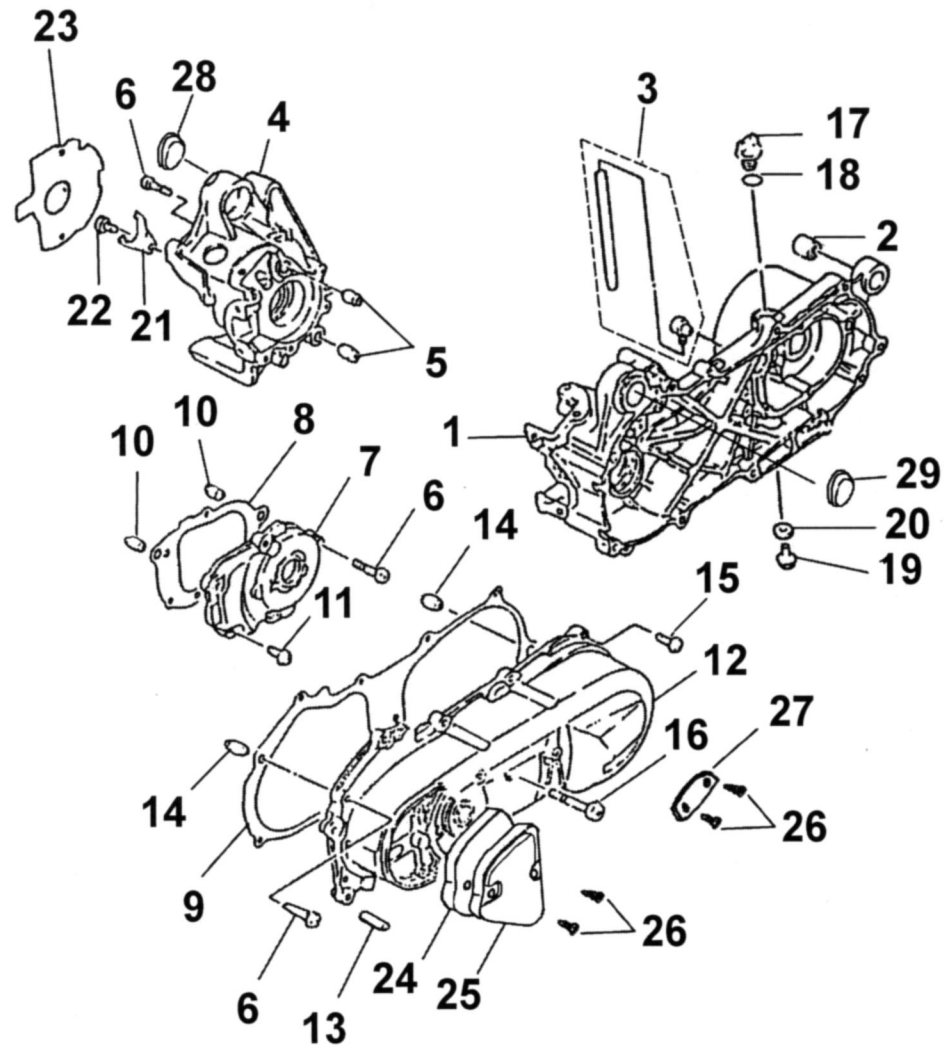


ITEM	PART NO.	NAME	QUANTITY
7		CRANK CASE, COVER	
7-1	A1200-B00-9900	SPACER ENGINE MOUNT	1
7-2	A1203-B00-0000	BUSH, REAR SHOCK ABSORBER	1
7-3	A122A-B00-0000	HOSE BREATHER ASSY.	1
7-4	A1100-B00-0900	CRANK CASE R	1
7-5	I4301-12160	PIN, DOWEL	2
7-6	I3500-06035	SCREW, PAN HEAD	10
7-7	B1301-B00-0000	COVER, MISSION	1
7-8	B1395-B00-0000	GASKET, MISSION COVER	1
7-9	A1395-B00-0000	GASKET, CRANKCASE COVER L.	1
7-10	I4301-10140	PIN, DOWEL	2
7-11	I3500-06020	SCREW, PAN HEAD	3
7-12	A1341-B00-0000	COVER CRANK CASE L	1
7-13	A1342-B00-0000	SHAFT	1
7-14	I4301-10140	PIN, DOWEL	2
7-15	I3500-06025	SCREW, PAN HEAD	8
7-16	I3500-06065	SCREW, PAN HEAD	1
7-17	A5651-B00-0000	PLUG, OIL	1
7-18	I1303-13825	O-RING	1
7-19	I5801-08016	FLANGE BOLT	1
7-20	I4109-B00-0000	WASHER	1
7-21	A1121-B00-0000	HOLDER	1
7-22	I3500-06012	SCREW, PAN HEAD	1
7-23	A1393-B00-0000	GASKET, CRANKCASE COVER	1
7-24	A1362-B00-0000	ELEMENT	1
7-25	A1363-B02-0000	GUIDE, ELEMENT	1
7-26	I4050-06030	NUT FLG	4
7-27	A1364-B02-0000	PLATE 板	1
7-28	A1105-B00-0000	RUBBER CAP, R.	1
7-29	A1205-B00-0000	RUBBER CAP, L.	1

 8. KICK SHAFT ASSY., STARTER CLUTCH ASSY.

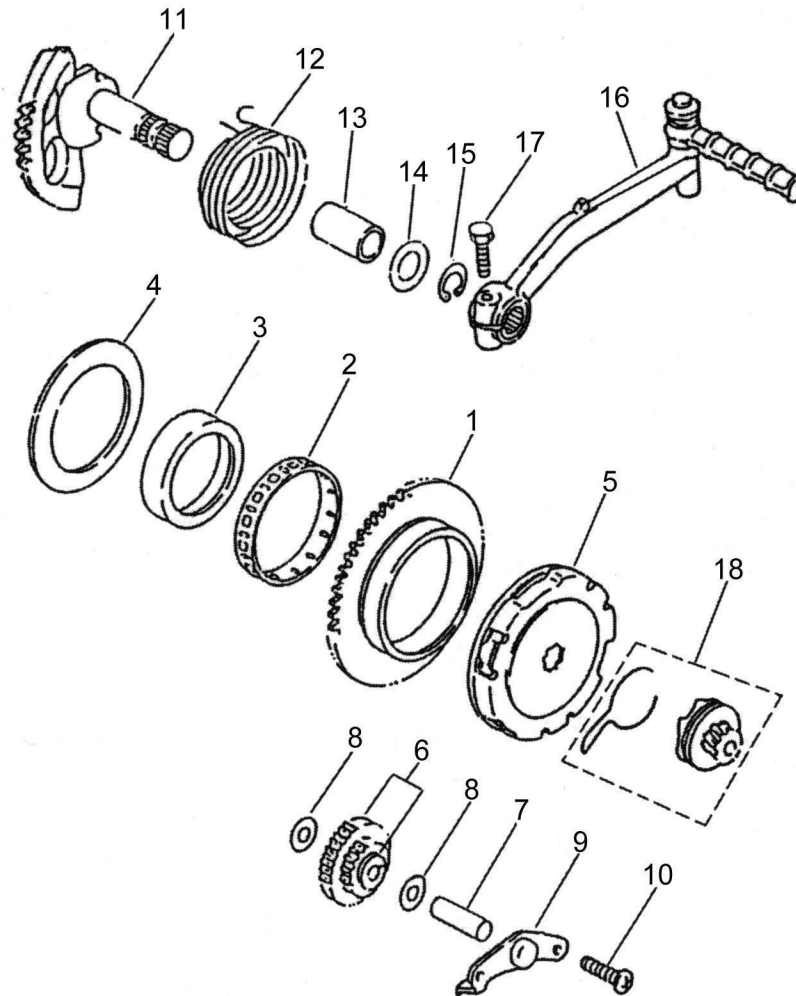


ITEM	PART NO.	NAME	QUANTITY
8		KICK SHAFT ASSY., STARTER CLUTCH ASSY.	
8-1	B8110-B00-0000	WHEEL STARTER	1
8-2	I1104-B00-0000	BEARING NEDDLE	1
8-3	B8115-B00-0000	BOSS, GEAR	1
8-4	B8116-B00-0000	WASHER, PLATE	1
8-5	B812A-B00-0000	STARTER CLUTCH ASSY.	1
8-6	B810A-B00-0000	IDLE GEAR ASSY.	1
8-7	B8102-B00-0000	SHAFT IDLE GEAR	1
8-8	I0441-B00-0000	WASHER, PLATE	2
8-9	B8105-B00-0000	PLATE, IDLE GEAR	1
8-10	I3500-06012	SCREW, PAN HEAD	2
8-11	B8250-B00-0000	KICK SHAFT ASSY.	1
8-12	B8281-B00-0000	SPRING, TORSION	1
8-13	B8254-B00-0000	BUSH, SOLID	1
8-14	I0451-B00-0000	WASHER, PLATE	1
8-15	I4510-15000	CIRCLIP	1
8-16	B8300-B00-0000	KICK CRANK ASSY.	1
8-17	I2101-06025	NO:34 BOLT, HEX.	1
8-18	B823A-B00-0000	KICK PINION ASSY.	1
8-19	A1000-5EA0-0000	RUBBER CAP, KICK SHAFT	1

 9. DRIVEN PULLEY

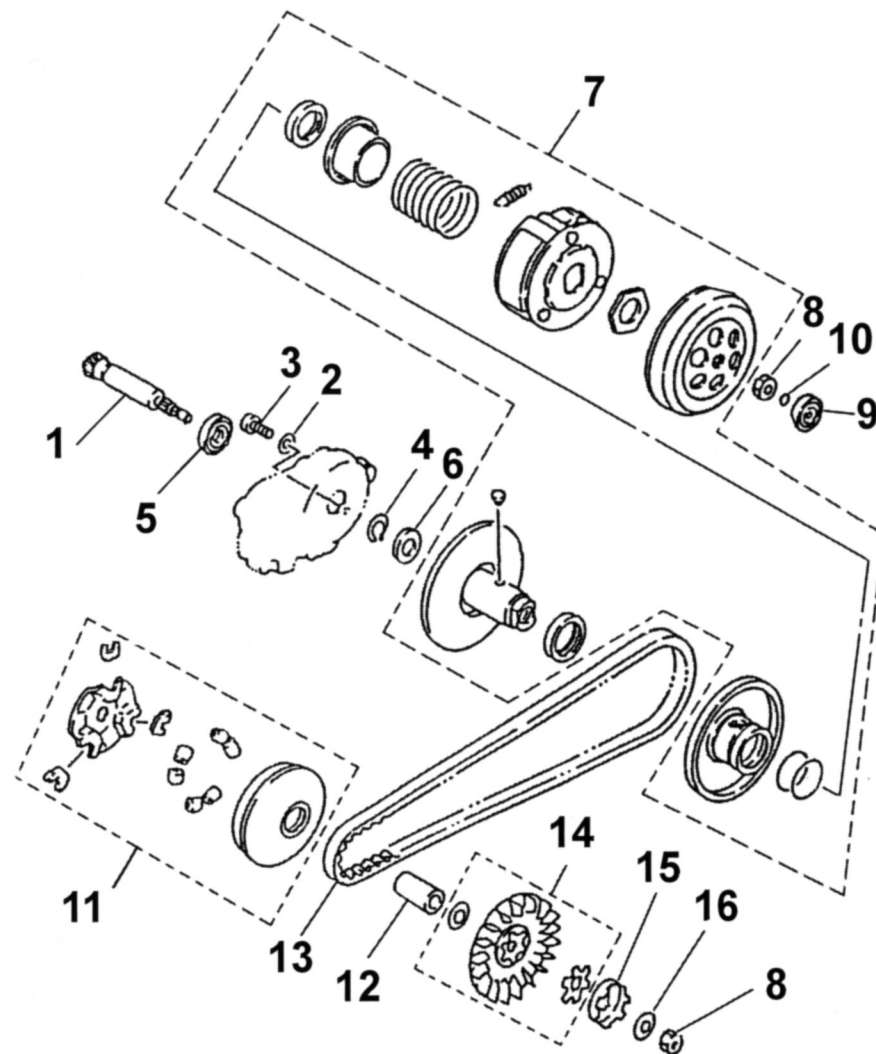


ITEM	PART NO.	NAME	QUANTITY
9		DRIVEN PULLEY	
9-1	B3411-B00-0000	GEAR, PRIMARY DRIVE	1
9-2	I4101-06193	WASHER, PLATE	1
9-3	I3500-06010	SCREW, PAN HEAD	1
9-4	I4510-17000	CIRCLIP	1
9-5	I6100-60030	BEARING RADIAL BALL	1
9-6	I1203-B00-0000	OIL SEAL	1
9-7	B301A-B00-0000	SECONDARY SHEAVE ASSY.	1
9-8	A4050- B00-0000	FLANGE NUT	1
9-9	I6100-638ZZ	BEARING RADIAL BALL	1
9-10	I1304-B00-0000	O-RING	1
9-11	B211A-B00-0000	PRIMARY SLIDING SHEAVE COMP.	1
9-12	B2105-B00-0000	COLLAR	1
9-13	B3100-B00-0000	V-BELT	1
9-14	B2102-B00-0000	SHEAVE, PRIMARY FIXED	1
9-15	B8211-B00-0000	CLUTCH, ONEWAY	1
9-16	I4102-10246	WASHER, CONICAL SPRING	1
9-17	I4001-10000	NUT	1

 10. TRANSMISSION

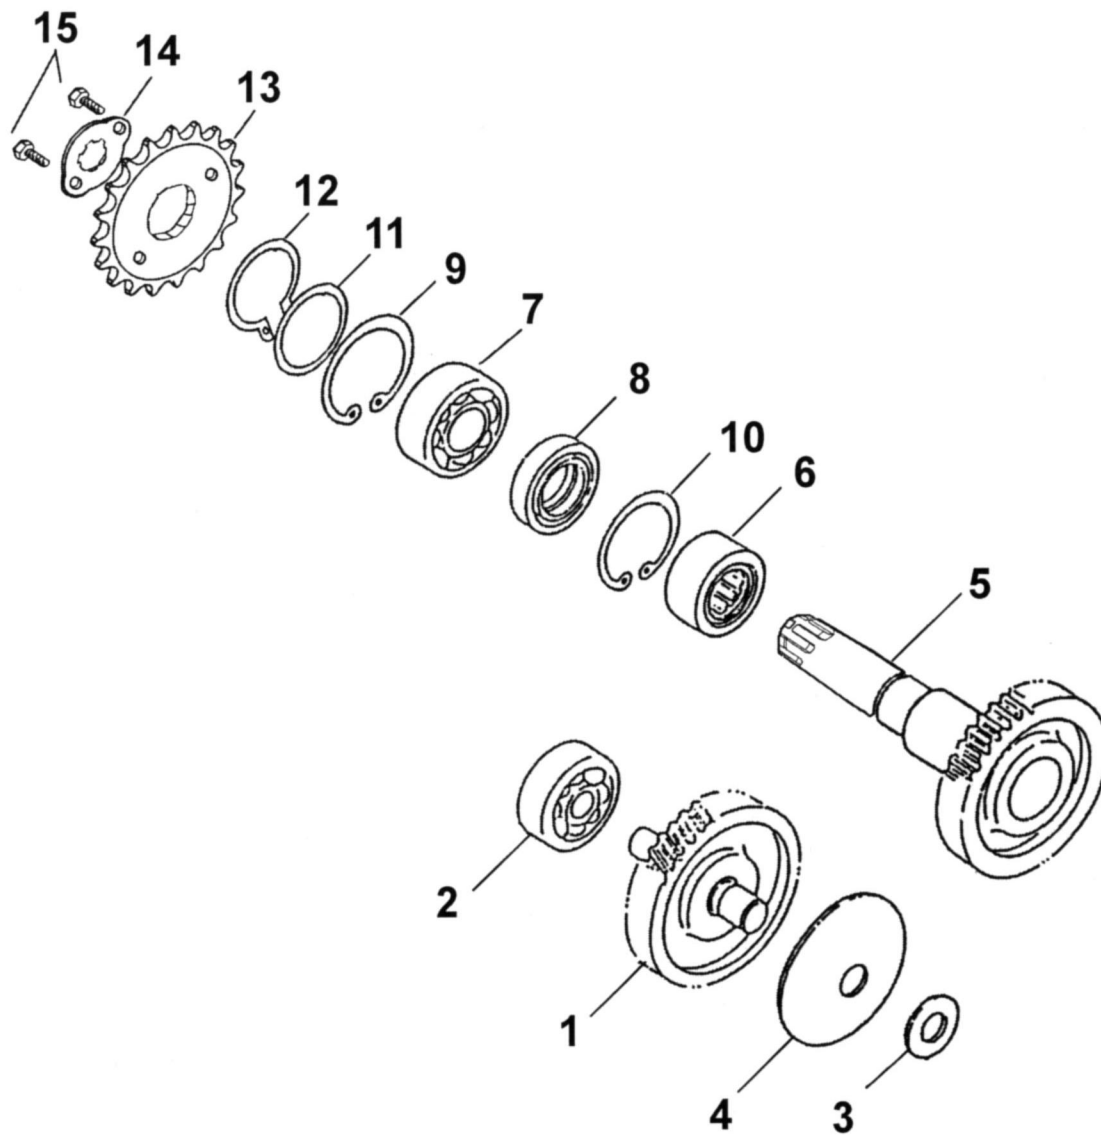



ITEM	PART NO.	NAME	QUANTITY
10		TRANSMISSION	
10-1	B3420-B00-0000	MAIN AXLE COMP.	1
10-2	I6100-62010	BEARING	1
10-3	I4101-12223	WASHER, PLATE	1
10-4	B3425-B00-0000	WASHER, CONICAL SPRING	1
10-5	B343A-B00-9000	DRIVE AXLE	1
10-6	I1106-25150	BEARING	1
10-7	I6100-6004LLUA	BEARING	1
10-8	I1204-B00-0000	OIL SEAL	1
10-9	I4520-B00-0000	CIRCLIP	1
10-10	I4530-B00-0000	CIRCLIP	1
10-11	I0454-20010	NO.35 WASHER THRUST	1
10-12	I4510-2000	CIRCLIP#20	1
10-13	B3801-B00-9000	DRIVE CHAIN SPROCKET	1
10-14	B3811-A00-0000	PLATE A2 FIXING	1
10-15	I2000-06010	NO.33 BOLT HEX.	2

 11. ENGINE BRACKET

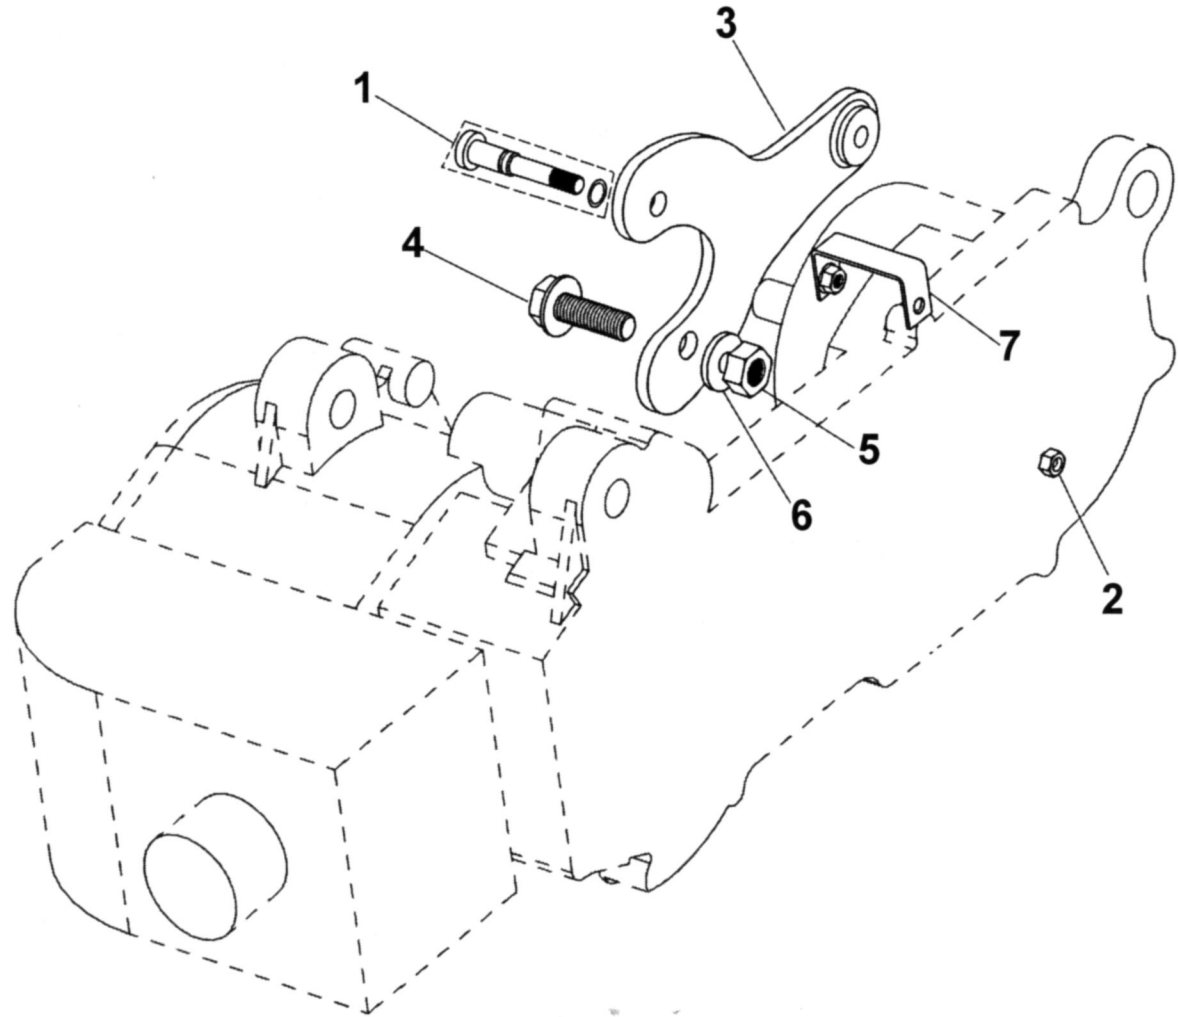


ITEM	PART NO.	NAME	QUANTITY
11		ENGINE BRACKET	
11-1	A1204-B00-9000	PIN, PIVOT	1
11-2	I0309-08008	FLANGE NUT	1
11-3	A1241-B00-0000	ENGINE BRACKET	1
11-4	I0190-12038	BOLT(M12×38)	1
11-5	I4001-12080	NUT(M12)	1
11-6	I0459-12010	WASHER	1
11-7	A1251- B00-0000	BRACKET, OIL TANK	1

  12. GENERATOR, START MOTOR

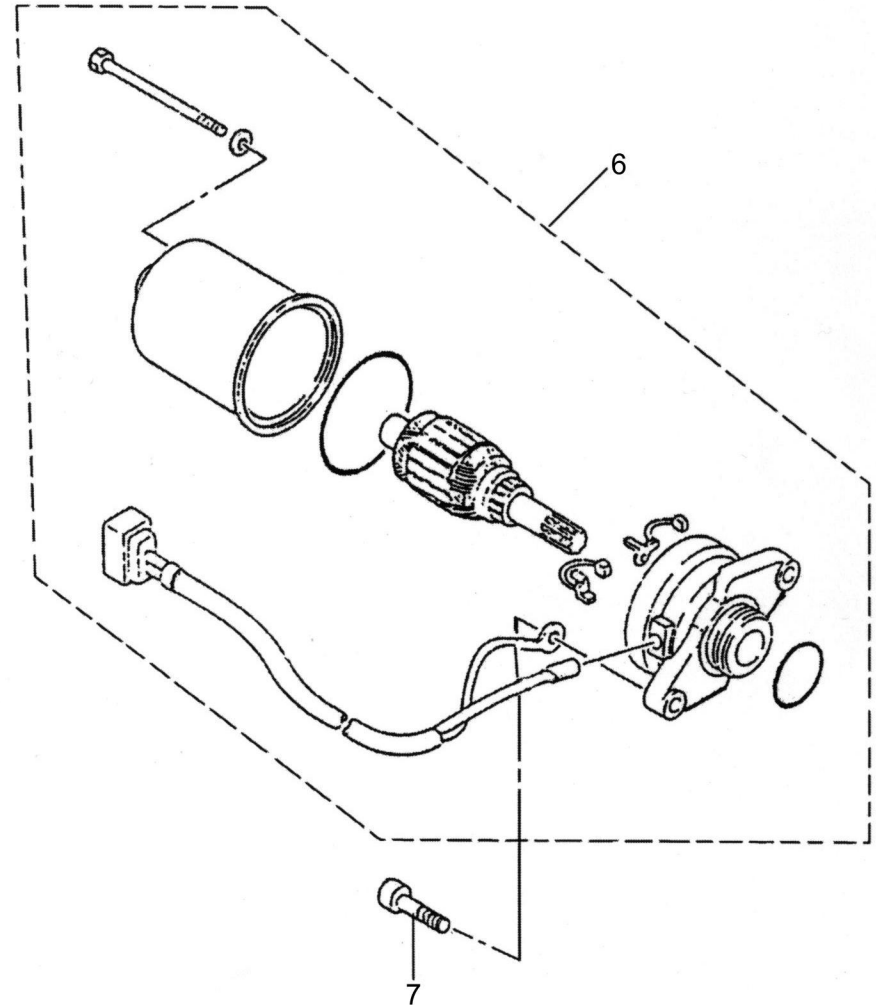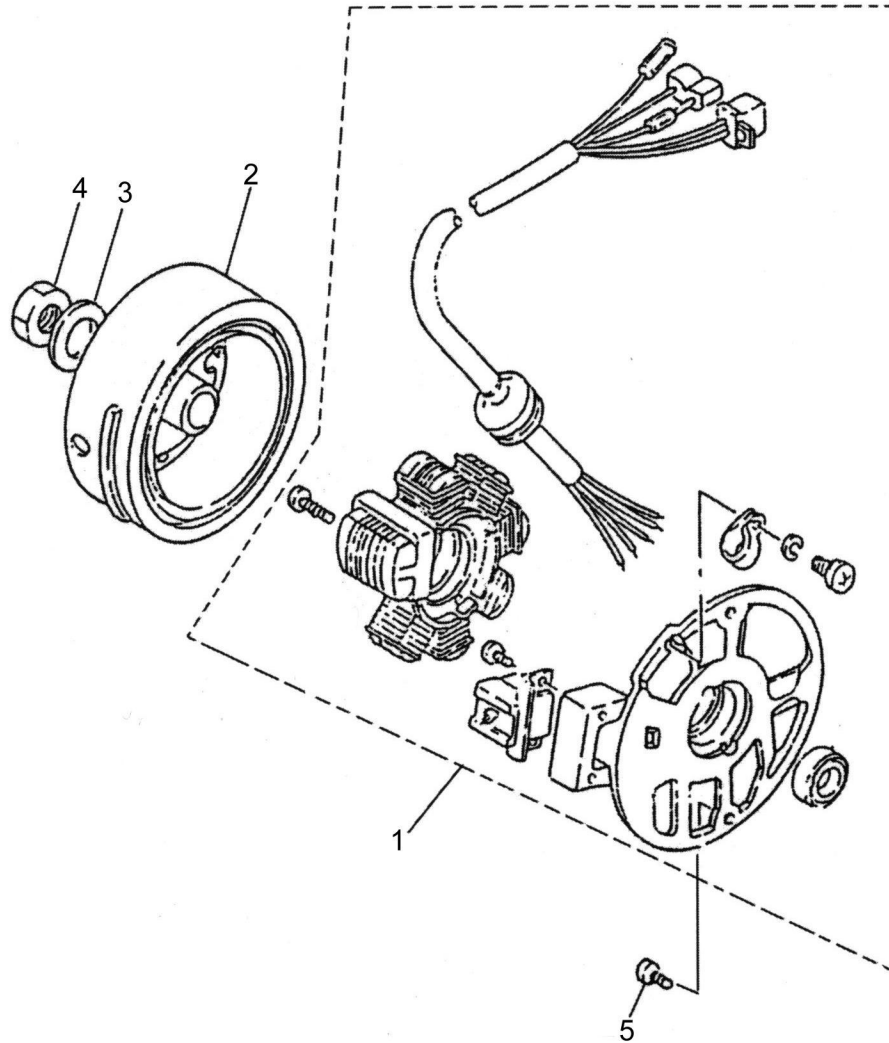


ITEM	PART NO.	NAME	QUANTITY
12		GENERATOR, START MOTOR	
12-1	C112A-B00-0000	A.C. GENERATOR ASSY.	1
12-2	C1110-B00-0000	FLYWHEEL COMP.	1
12-3	I0440-12522	WASHER, PLATE	1
12-4	I4050-12080	NUT FLG	1
12-5	I3500-06016	SCREW, PAN HEAD	2
12-6	C1200-B00-0000	STARTER MOTOR ASSY.	1
12-7	I6001-06020	NO: 11 BOLT FLG	2

 13. MUFFLER

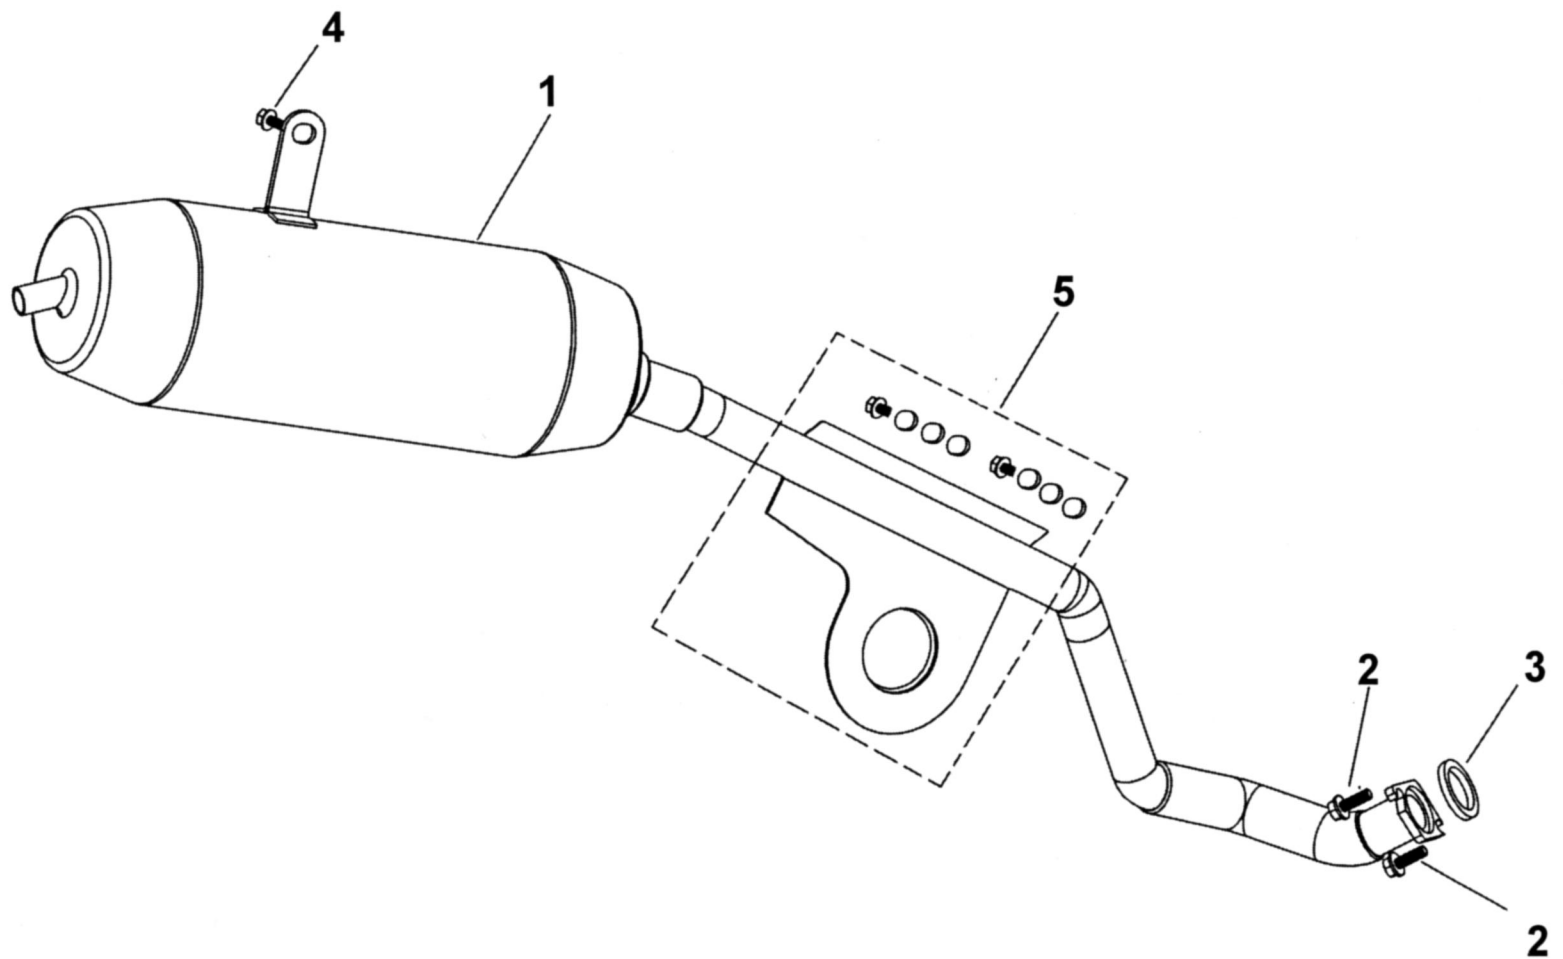

ITEM	PART NO.	NAME	QUANTITY
13		MUFFLER ASSY.	
13-1	A830A-5EA0-0000	EXHAUST PIPE ASSY.	1
13-2	I0149-06810	FLANGE BOLT (M6×18)	2
13-3	A8291-5AA0-0000	GASKET	1
13-4	I0149-10022	FLANGE BOLT (M10×22)	1
13-5	A830B-5EA0-0000	EXHAUST PIPE COVER	1

 
14. FRAME

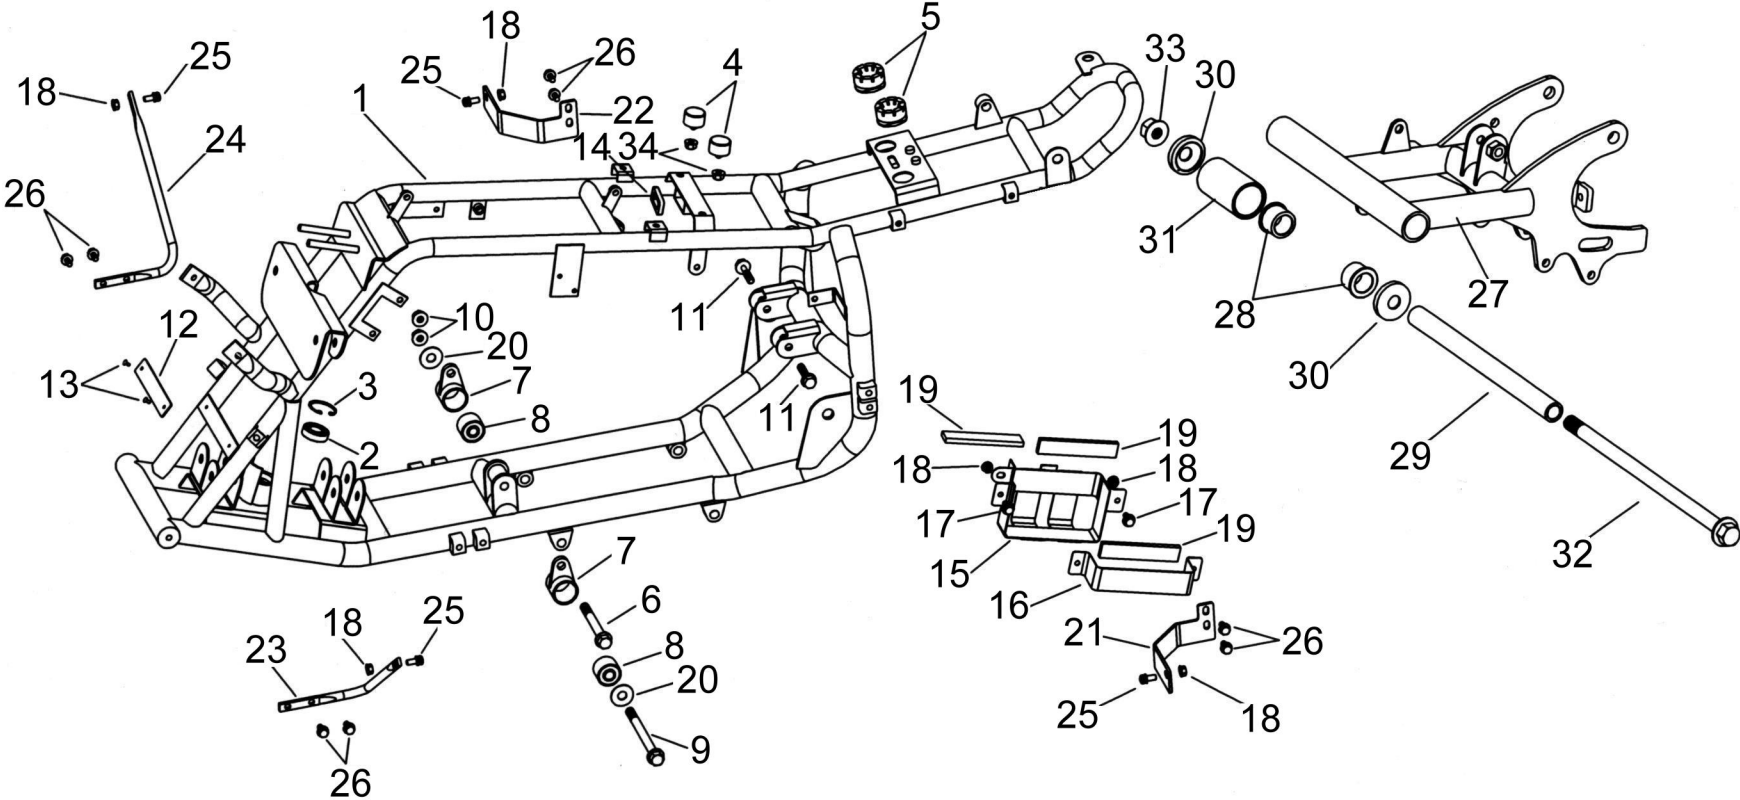

ITEM	PART NO.	NAME	QUANTITY
14		FRAME	
14-1	E0100-5EA0-0000	FRAME COMP.	1
14-2	I6100-6002ZZ	BEARING (6002ZZ)	1
14-3	I4510-32000	C CLIP	1
14-4	G7211-5EA0-0000	RUBBER(ψ 25×15)	2
14-5	G7212-5EA0-0000	RUBBER(ψ 37×ψ 13×23)	2
14-6	E0352-5EA0-0000	ENGINE SET BOLT(M10×85)	1
14-7	E0350-5EA0-0000	ENGINE SUSPENSION ASSY.	2
14-8	E0201-5EA0-0000	ENGINE SETTING BUSH	2
14-9	E0351-5EA0-0000	ENGINE SET BOLT(M10×115)	1
14-10	I5612-10200	FLANGE SELF-LOCK NUT(M10)	2
14-11	I0149-08036-01	FLANGE BOLT (M8×36)	2
14-12	E0101-5EA0-0000	FRAME NUMBER PLATE	1
14-13	H750A-5BA1-0000	FIX NAIL	2
14-14	G7213-5EA0-0000	PLUG RUBBER	1
14-15	E0102-5EA0-0000	BATTERY SEAT	1
14-16	E0103-5EA0-0000	BATTERY COVER	1
14-17	I0119-06802	BOLT WITH WASHER(M6×14)	2
14-18	I5702-06500	FLANGE NUT(M6)	6
14-19	E0104-5EA0-0000	BATTERY PAD	3
14-20	I9905-10100	WASHER(ψ 28×ψ 11×1.2)	2
14-21	E0105-9EA0-0000	LEFT FIXED PLATE,REAR FENDER	1
14-22	E0106-9EA0-0000	RIGHT FIXED PLATE,REAR FENDER	1
14-23	E0107-5EA0-0000	LEFT FIXED PLATE,FRONT FENDER	1
14-24	E0108-5EA0-0000	RIGHT FIXED PLATE,FRONT FENDER	1
14-25	E0117-9EA0-0000	BOLT(M6×23)	4


14-26	I0149-06012	FLANGE SCREW(M6×12)	8
14-27	E220A-5EA0-0000	SWING ARM SUB ASSY.	1
14-28	E2208-5EA0-0000	BUSHING CONTAIN OIL (ψ 20)	2
14-29	E2209-5EA0-0000	SWING ARM SPACER(ψ 20×ψ 14.1×254)	1
14-30	E2205-5EA0-0000	SWING ARM SEAL COVER	2
14-31	E2202-5EA0-0000	RUBBER SLEEVE	1
14-32	E2201-5EA0-0000	SWING ARM SET BOLT (M14×285)	1
14-33	I5611-14200	FLANGE SELF-LOCK NUT(M14)	1
14-34	I5611-08200	FLANGE SELF-LOCK NUT(M8)	2

 15. SWING ARM, FOOTREST FENDER BAR

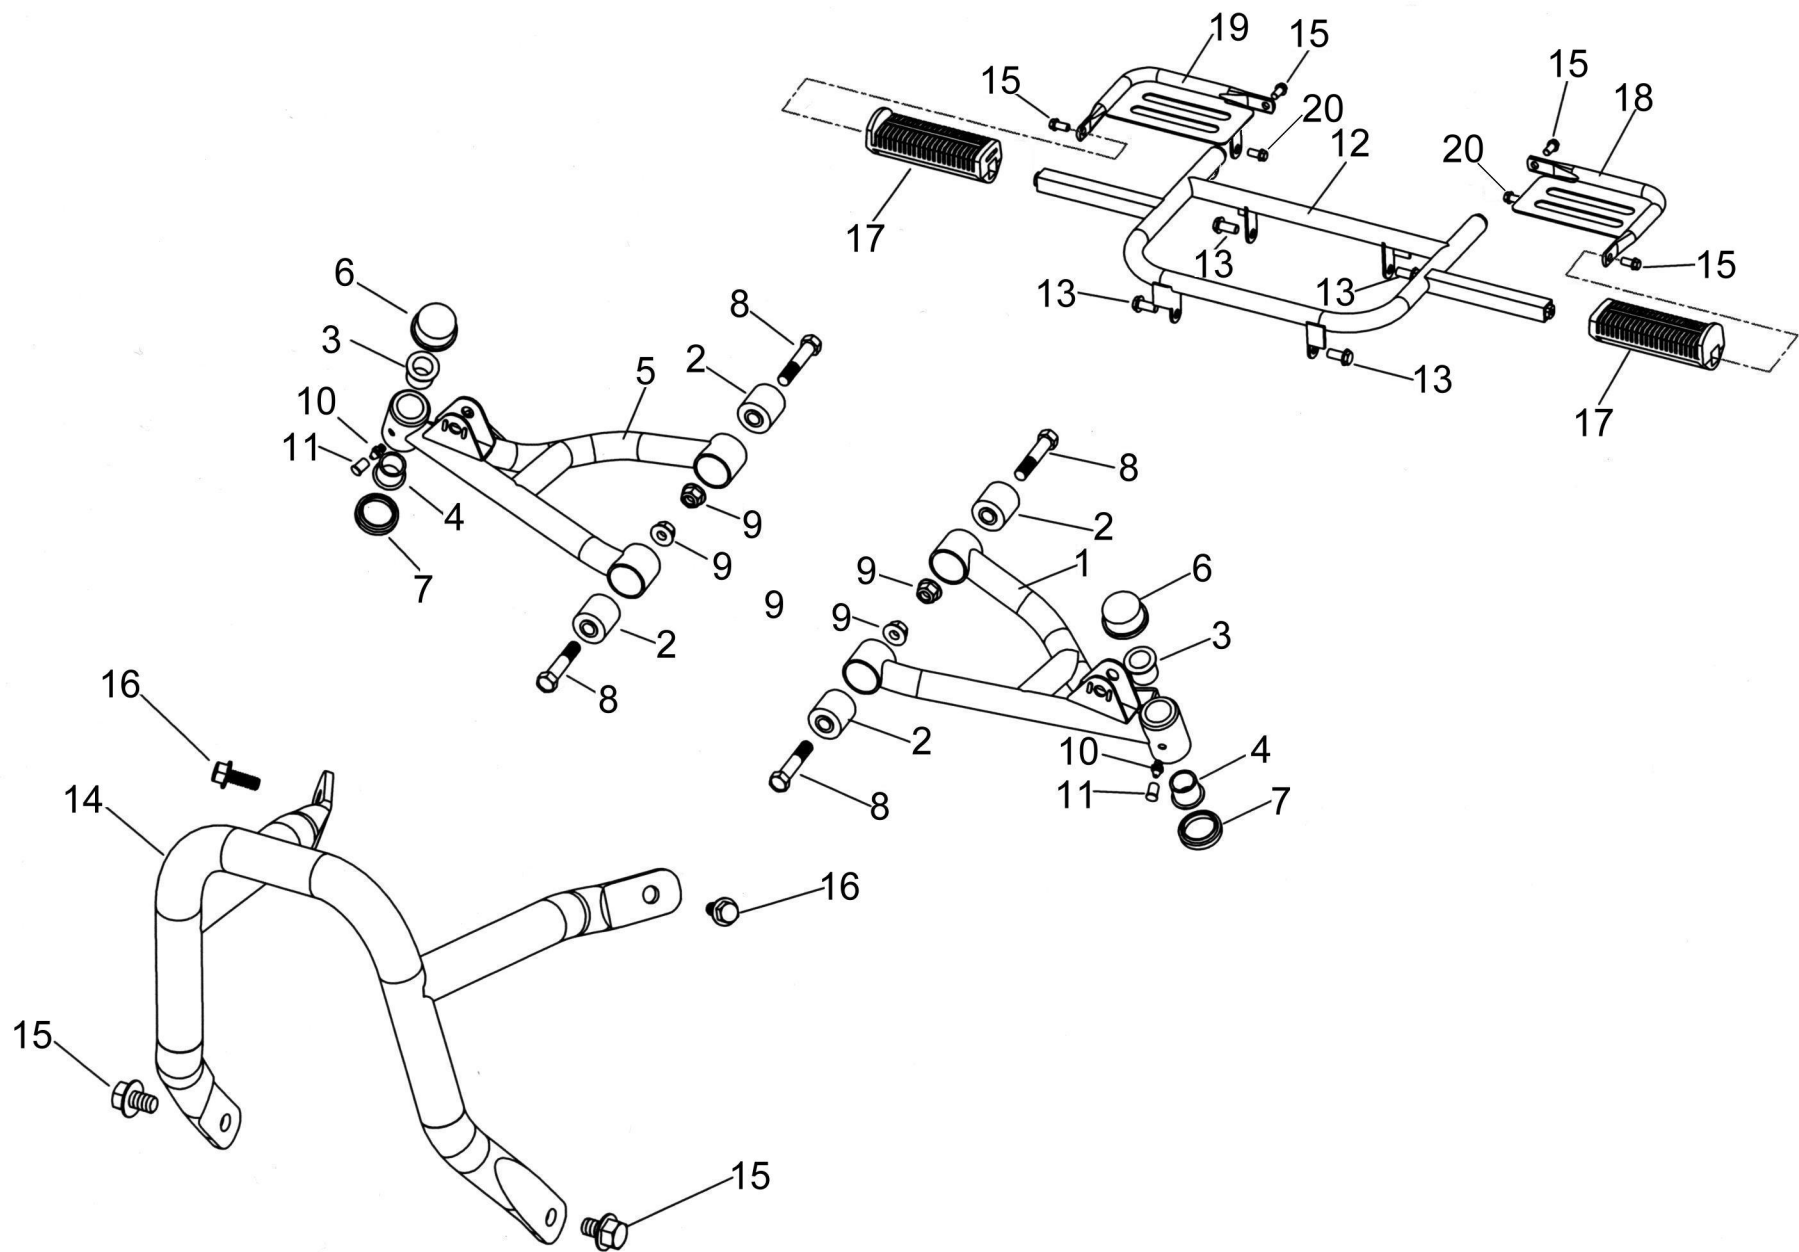


ITEM	PART NO.	NAME	QUANTITY
15		SWING ARM, FOOTREST, FEND BAR	
15-1	E0200-9EA0-0000	ARM, SUSPENSION, L.H.	1
15-2	E0201-5EA0-0000	BUSH, ARM SUSPENSION	4
15-3	E0207-5EA0-0000	BUSH, CONTAIN OIL(ψ 15.5)	2
15-4	E0206-5EA0-0000	BUSH, CONTAIN OIL(ψ 17)	2
15-5	E0210-9EA0-0000	ARM, SUSPENSION, R.H.	1
15-6	E0202-5EA0-0000	WATERPROOF COVER	2
15-7	E0203-5EA0-0000	DUSTPROOF RUBBER	2
15-8	I0102-10048	PIN HOLE BOLT(M10×48)	4
15-9	I5611-10200	FLANGE SELF-LOCK NUT(M10)	4
15-10	I6600-06000	GREASE VALVE	2
15-11	E0209-5EA0-0000	CAP, GREASE VALVE	2
15-12	E0700-9EA0-0000	FOOTREST ASSY.	1
15-13	I0149-10022	FLANGE SCREW(M10×22)	4
15-14	E0400-5EA0-0000	FEND BAR ASSY.	1
15-15	I0149-08016	FLANGE SCREW(M8×16)	6
15-16	I0149-06016	FLANGE SCREW(M6×16)	2
15-17	E0701-9EA0-0000	FOOTREST RUBBER	2
15-18	E0703-9EA0-0000	FOOTREST BAR, LEFT	1
15-19	E0705-9EA0-0000	FOOTREST BAR, RIGHT	1
15-20	I0140-06012	SCREW(M6×12)	2

 16. FENDER

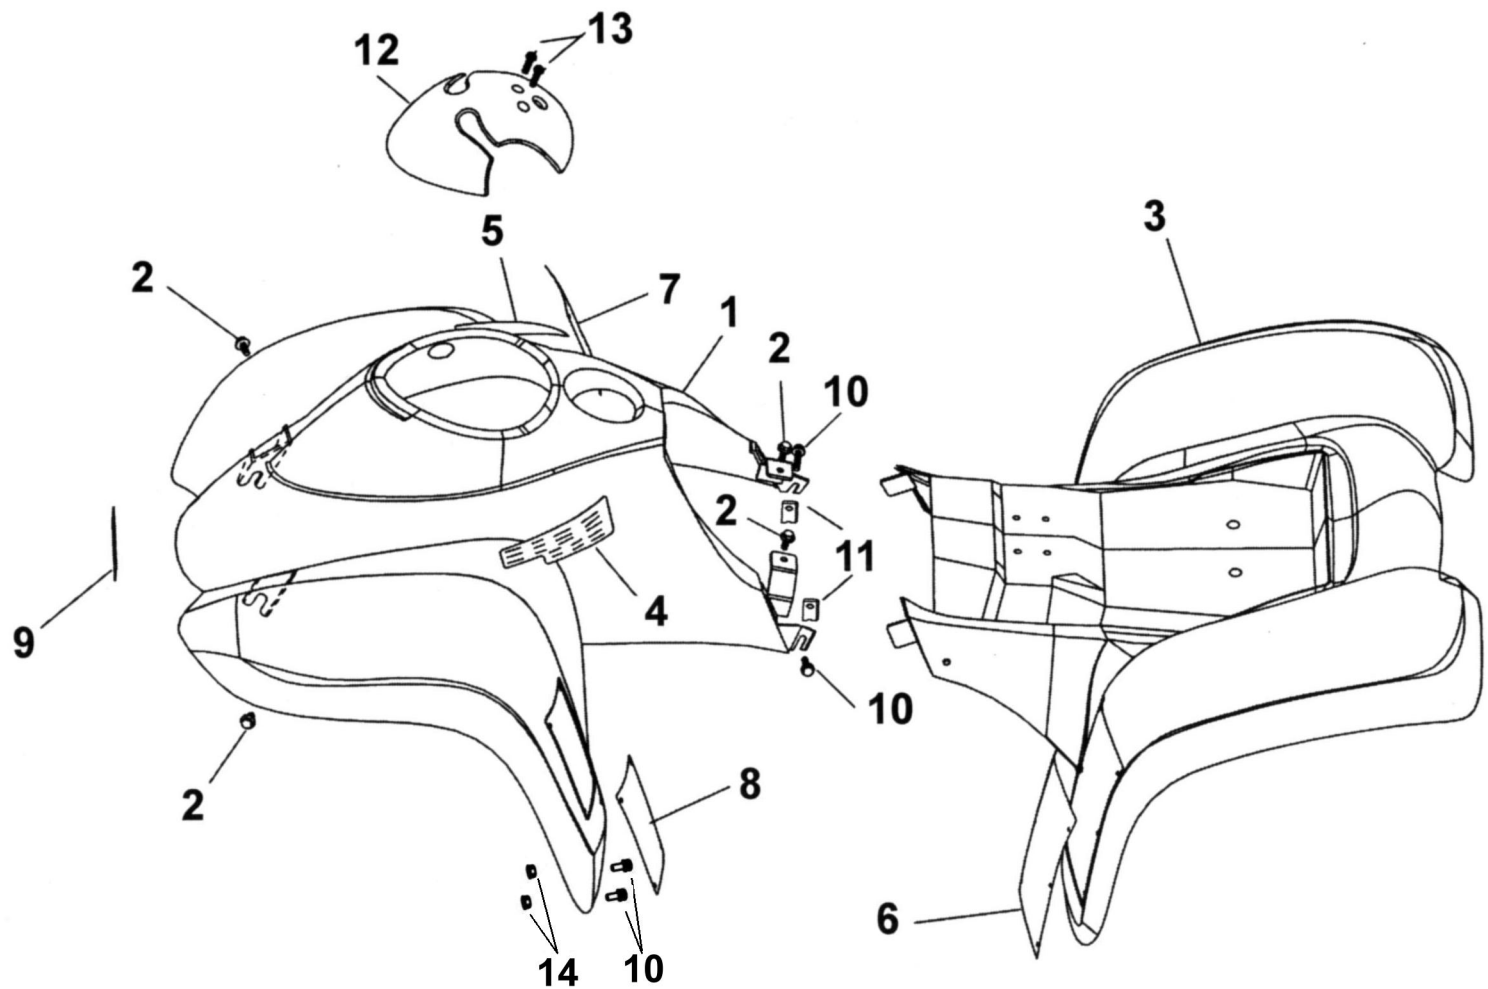



ITEM	PART NO.	NAME	QUANTITY
16		FENDER	
16-1	F4300-5EA0-0400	FRONT FENDER(BLUE)	1
	F4300-5EA0-0500	FRONT FENDER(GREEN)	1
16-2	I0119-06802	SCREW WITH WASHER(M6×14)	4
16-3	H3500-5EA0-0400	REAR FENDER(BLUE)	1
	H3500-5EA0-0500	REAR FENDER(GREEN)	1
16-4	F4304-9EA0-0000	STICKER 1,TYPE	1
16-5	F4305-9EA0-0000	STICKER 2,TYPE	1
16-6	F4306-5EA0-0000	STICKER, WARNING (PASSENGER)	1
16-7	F4307-5EA0-0000	STICKER, WARNING(Y-12)	1
16-8	F4308-5EA0-0000	STICKER, WARNING (TIRE psi)	1
16-9	F4309-5EA0-0000	STICKER, MFD.	1
16-10	E0117-9EA0-0000	BOLT(M6×23)	6
16-11	I5900-06400	NUT(M6)	2
16-12	E3205-5EA0-0400	COVER, HANDLE BAR(BLUE)	1
	E3205-5EA0-0500	COVER, HANDLE BAR(GREEN)	1
16-13	I8506-06012	SCREW(M6×12)	2
16-14	I5702-06500	FLANGE NUT(M6)	4

 17. SEAT

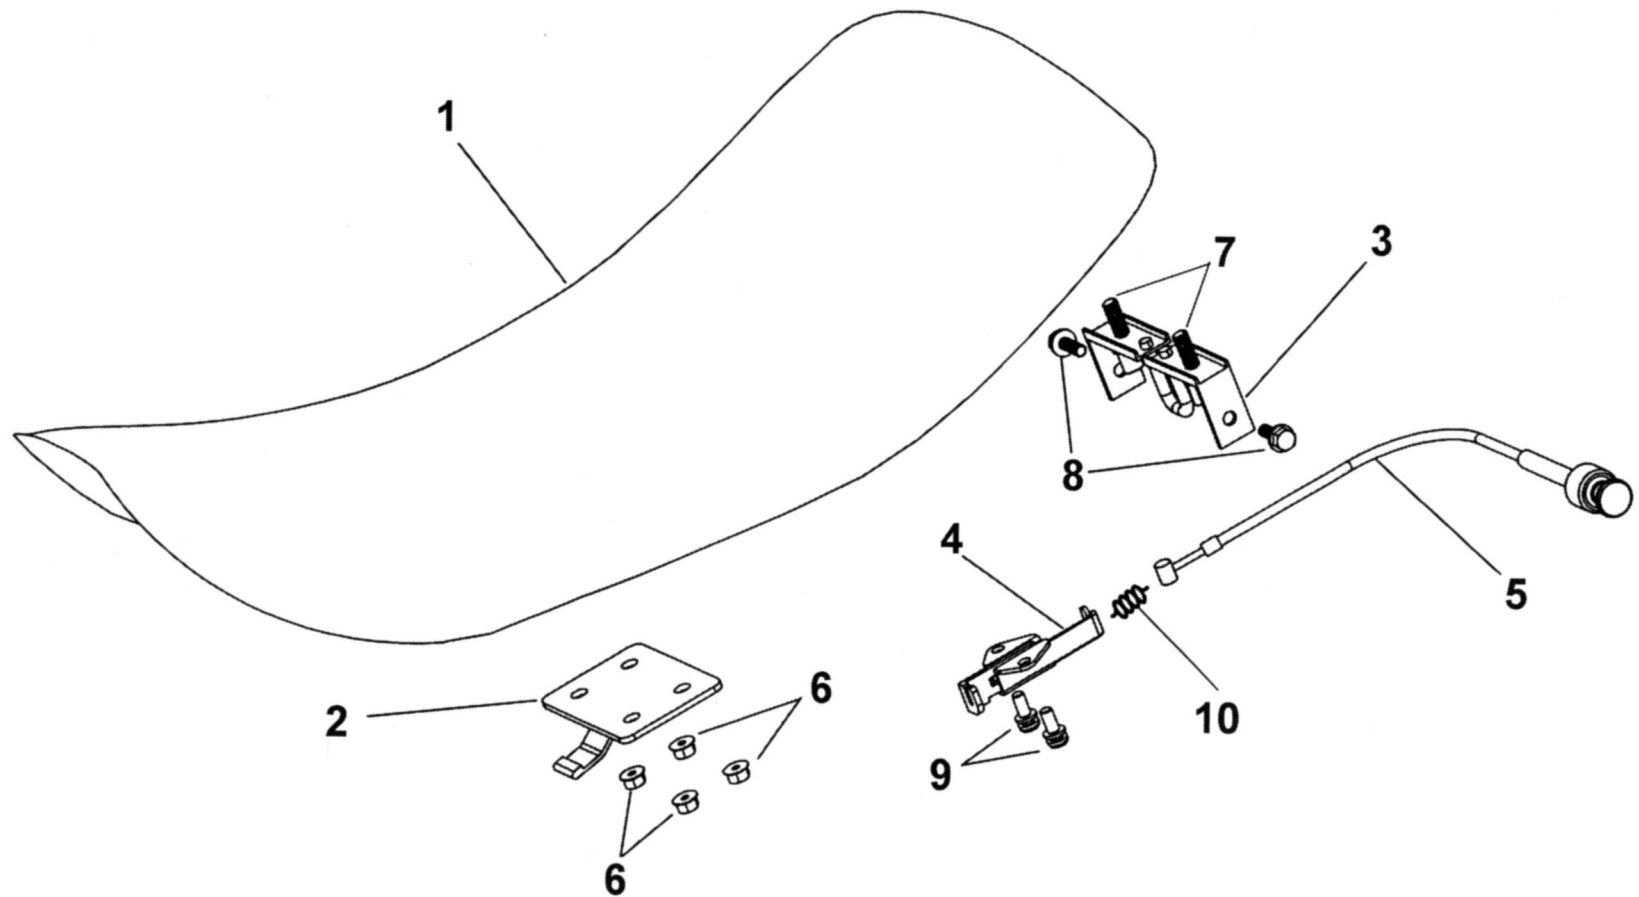


ITEM	PART NO.	NAME	QUANTITY
17		SEAT 座墊	
17-1	G7200-5EA0-0000	SEAT ASSY.	1
17-2	G7220-5EA0-0000	SEAT FIXED PLATE	1
17-3	G7221-5EA0-0000	SEAT FIXER	1
17-4	I5702-06500	FLANGE NUT(M6)	4
17-5	G7222-5EA0-0000	SEAT SCREW (M6×18)	2
17-6	I0240-06012	BOLT WITH WASHER	2

  18. OIL TANK, FUEL TANK

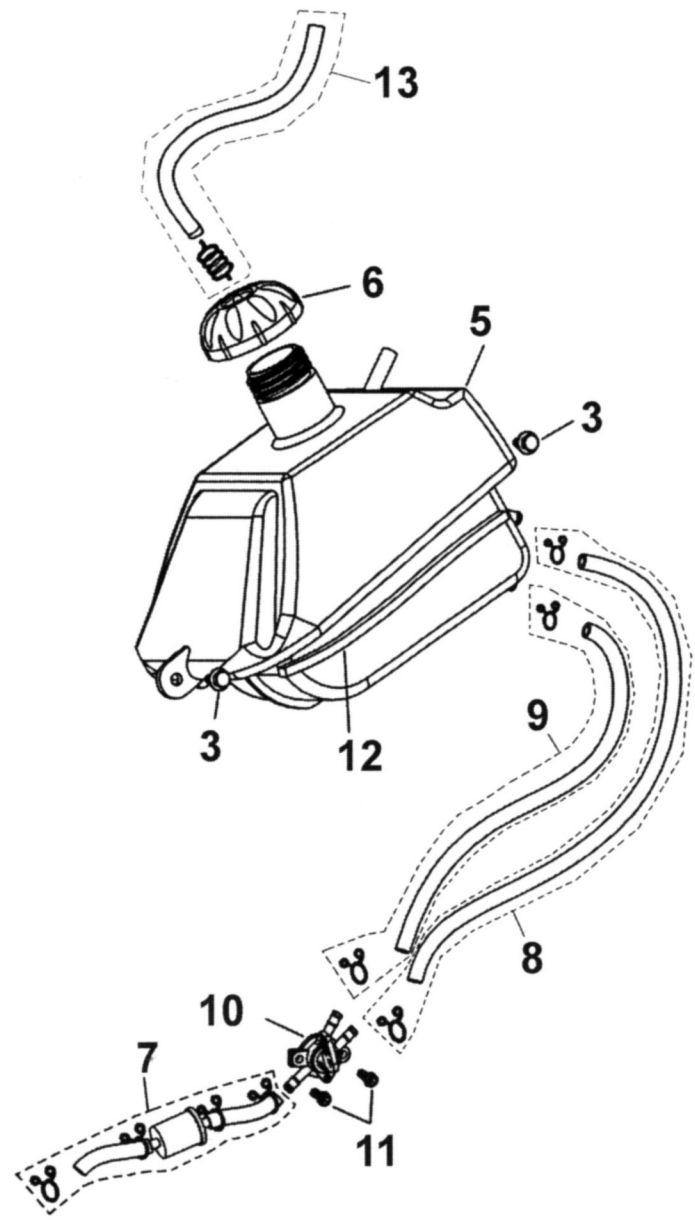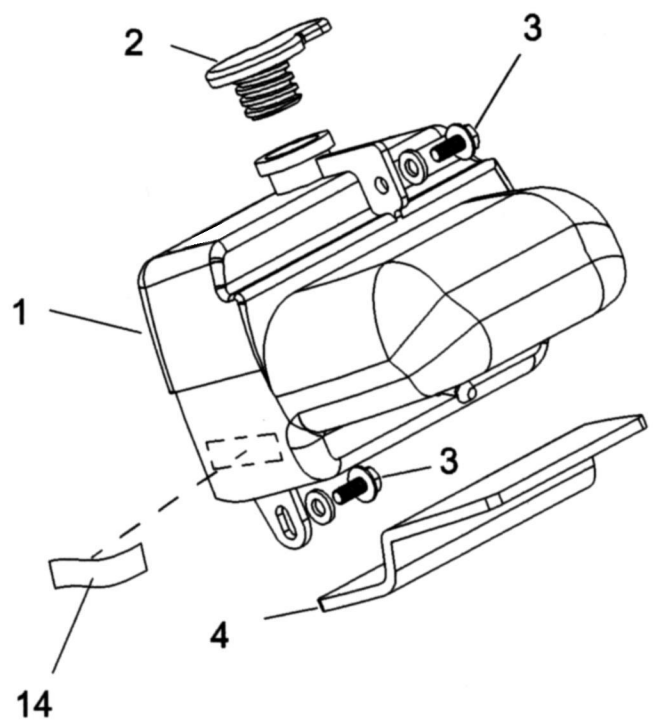


ITEM	PART NO.	NAME	QUANTITY
18		OIL TANK, FUEL TANK	
18-1	E5100-5EA0-0000	OIL TANK ASSY.	1
18-2	E5105-5EA0-0000	OIL TANK CAP	1
18-3	I0119-06802	SCREW WITH WASHER(M6×14)	4
18-4	E5101-5EA0-0000	PAD	1
18-5	A7500-5EA0-0000	FUEL TANK ASSY.	1
18-6	A7620-5EA0-0000	FUEL TANK CAP	1
18-7	A7510-5EA0-0000	FUEL FILTER ASSY.	1
18-8	A7501-5EA0-0000	FUEL TUBE	1
18-9	A7502-5EA0-0000	SPARE TUBE	1
18-10	A7520-5EA0-0000	MANUAL FUEL CUP ASSY.	1
18-11	I8506-05016	SCREW(M5×16)	2
18-12	A7509-5EA0-0000	PAD(5×10×200)	2
18-13	A7621-5EA0-0000	BREATHE TUBE	1
18-14	E5109-5EA0-0000	WARNING STICKER, OIL TANK	1

 19. SUSPENSION

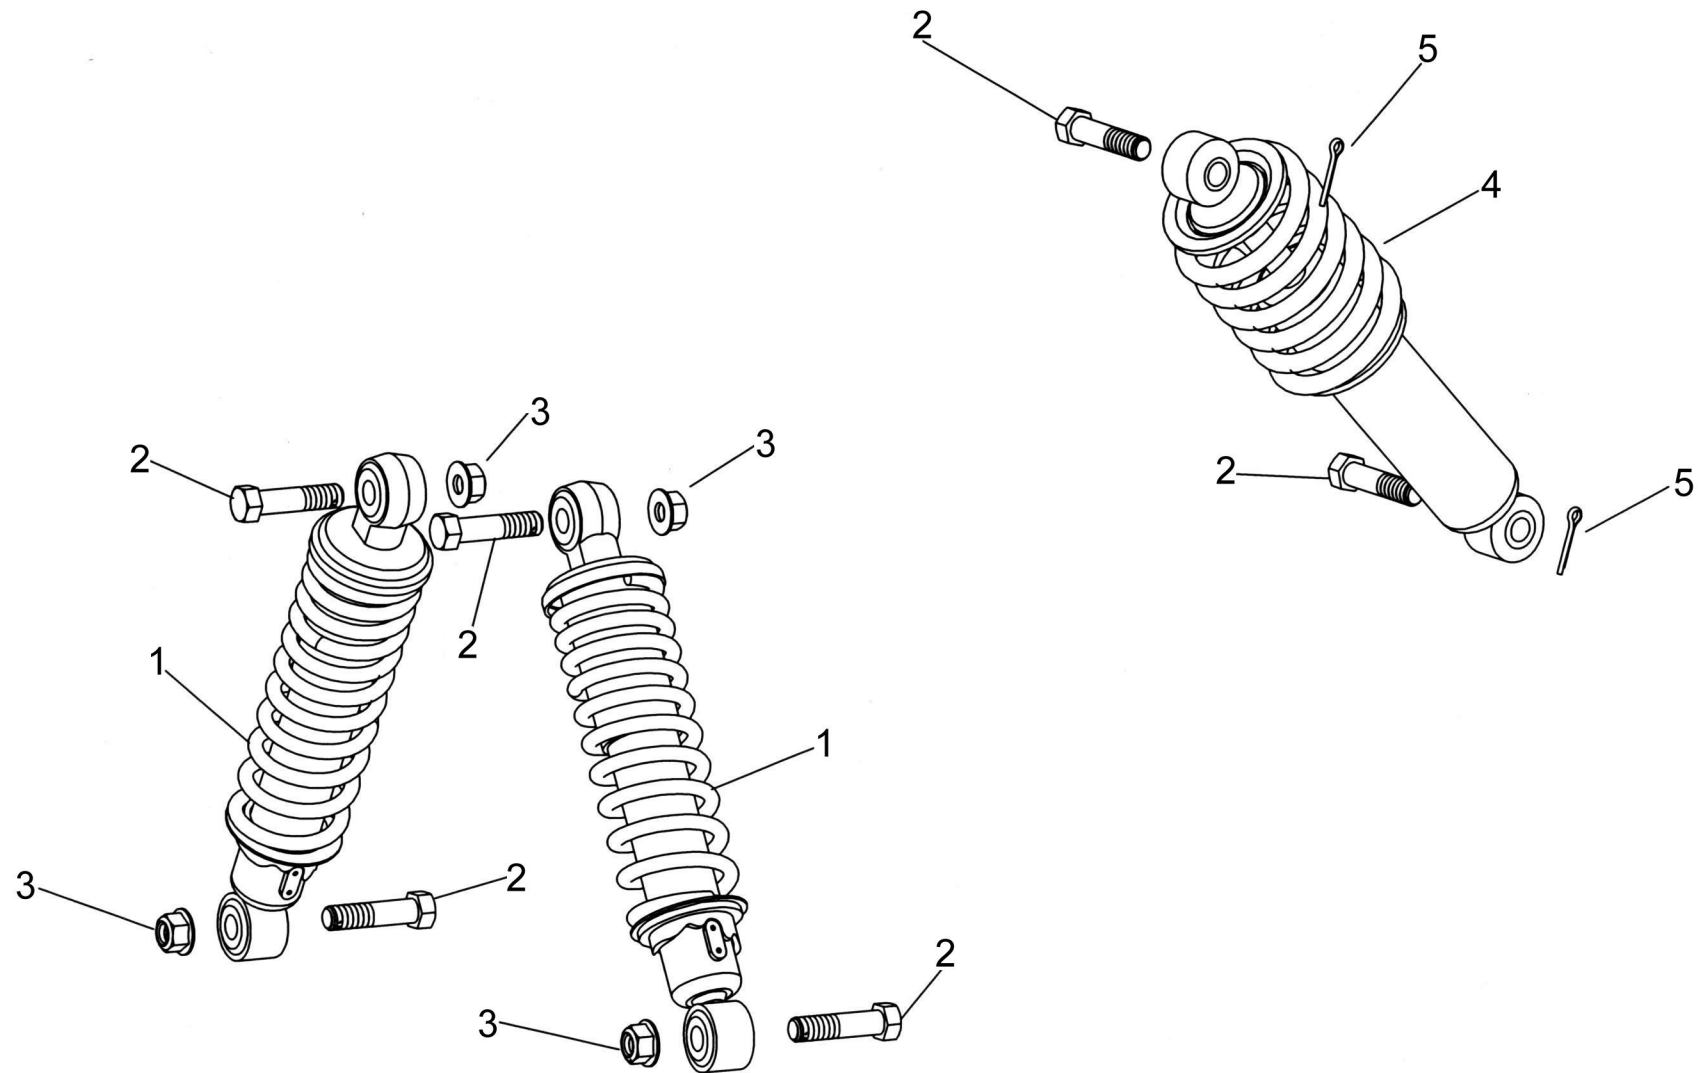


ITEM	PART NO.	NAME	QUANTITY
19		SUSPENSION	
19-1	E1105-9EA0-0000	SUSPENSION, FRONT	2
19-2	I0102-10040	PIN HOLE BOLT(M10×40)	6
19-3	I5701-10500	NUT(M10)	4
19-4	E2400-5EA0-0000	SUSPENSION, REAR	1
19-5	I9900-25019	COTTER PIN	6

 20. FRONT WHEEL

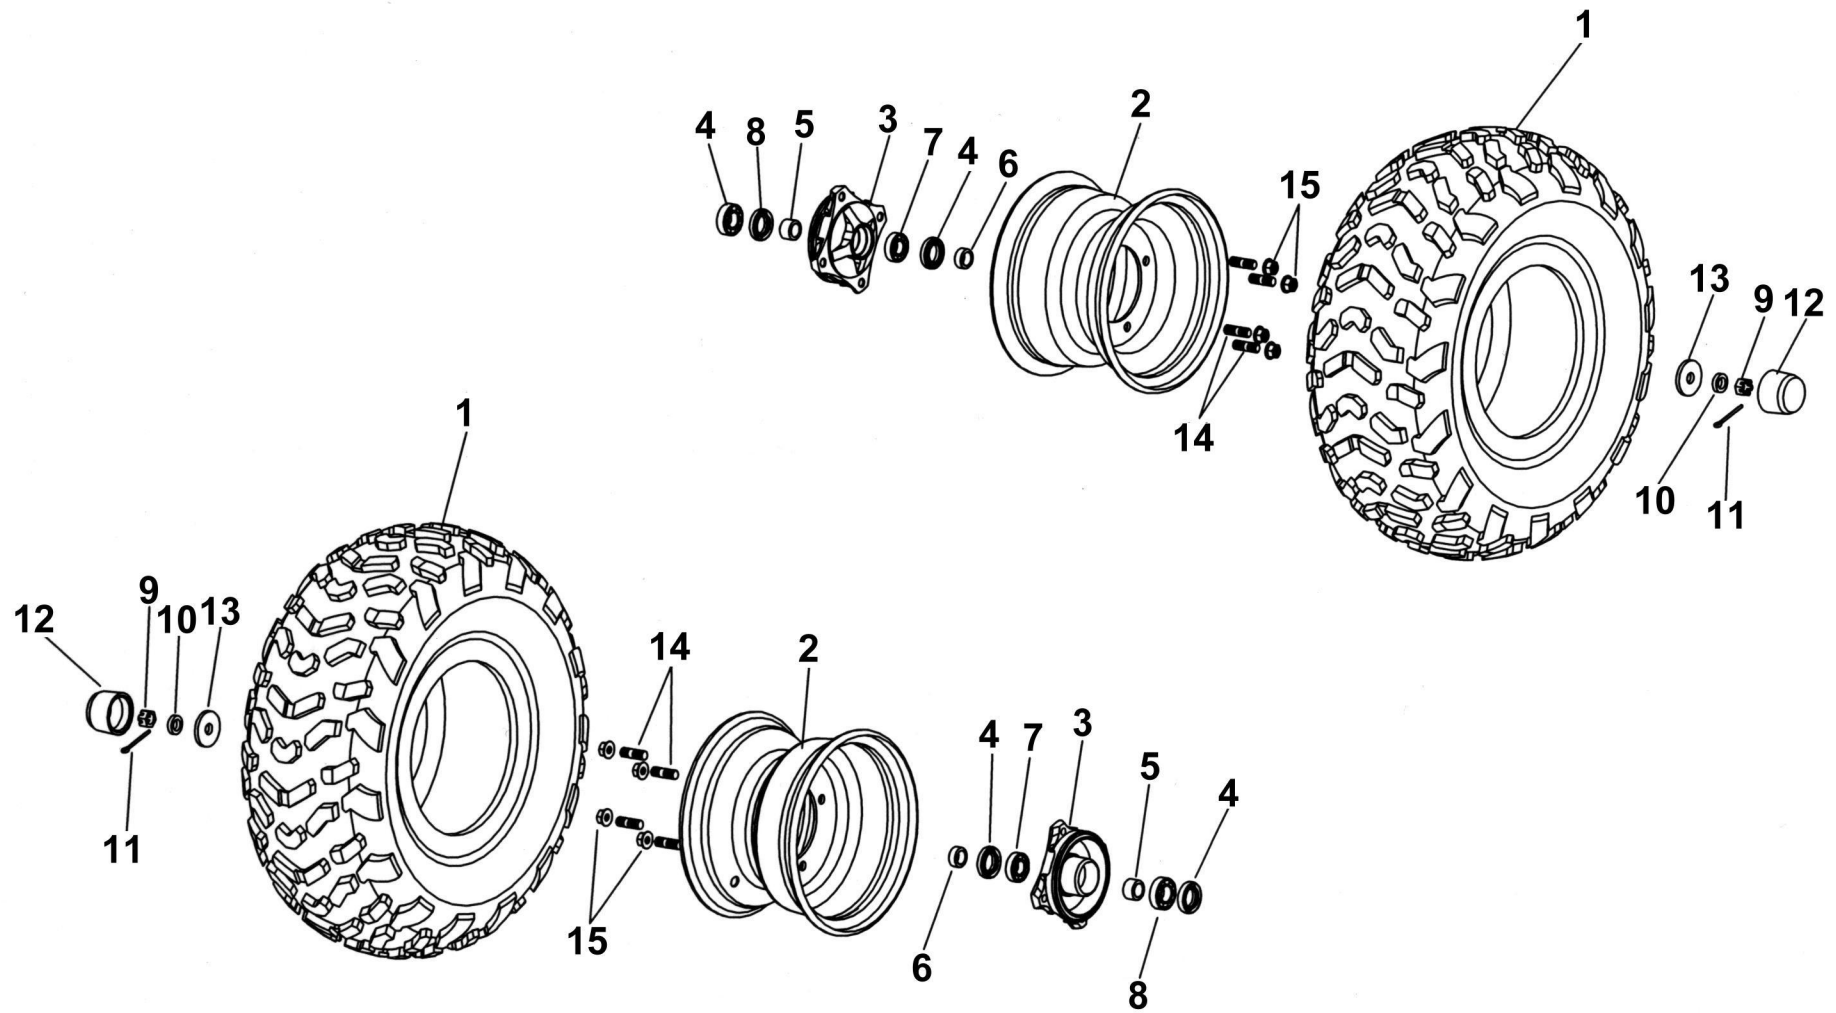



ITEM	PART NO.	NAME	QUANTITY
20		FRONT WHEEL	
20-1	D4710-5EB0-0000	WHEEL TIRE(19×8-7)	2
20-2	D4601-5EB0-0000	WHEEL RIM	2
20-3	D4610-9EA0-0000	BRAKE DRUM, FRONT	2
20-4	I3102-5AC0-0000	OIL SEAL(ψ 22×ψ 35×7)	4
20-5	D4620-5EA0-0000	INNER SPACER(ψ 15×ψ 21.7×15)	2
20-6	D4621-5EA0-0000	OUTER SPACER (ψ 15×ψ 21.7×10)	2
20-7	I6100-6002Z	BEARING(6002Z)	2
20-8	I6100-6003Z	BEARING(6003Z)	2
20-9	I5500-12000	CASTLE NUT(M12)	2
20-10	I9905-12100	WASHER(ψ 21×ψ 13×4t)	2
20-11	I9900-30032	COTTER PIN	2
20-12	D4609-5EA0-0000	RUBBER CAP	2
20-13	D4608-5EA0-0000	WHEEL AXLE WASHER,FRONT (ψ 40×ψ 12×4.5t)	2
20-14	D4612-9EA0-0000	STUD	8
20-15	D4611-9EA0-0000	FLANGE SELF-LOCK NUT(M10)	8

 21. REAR WHEEL

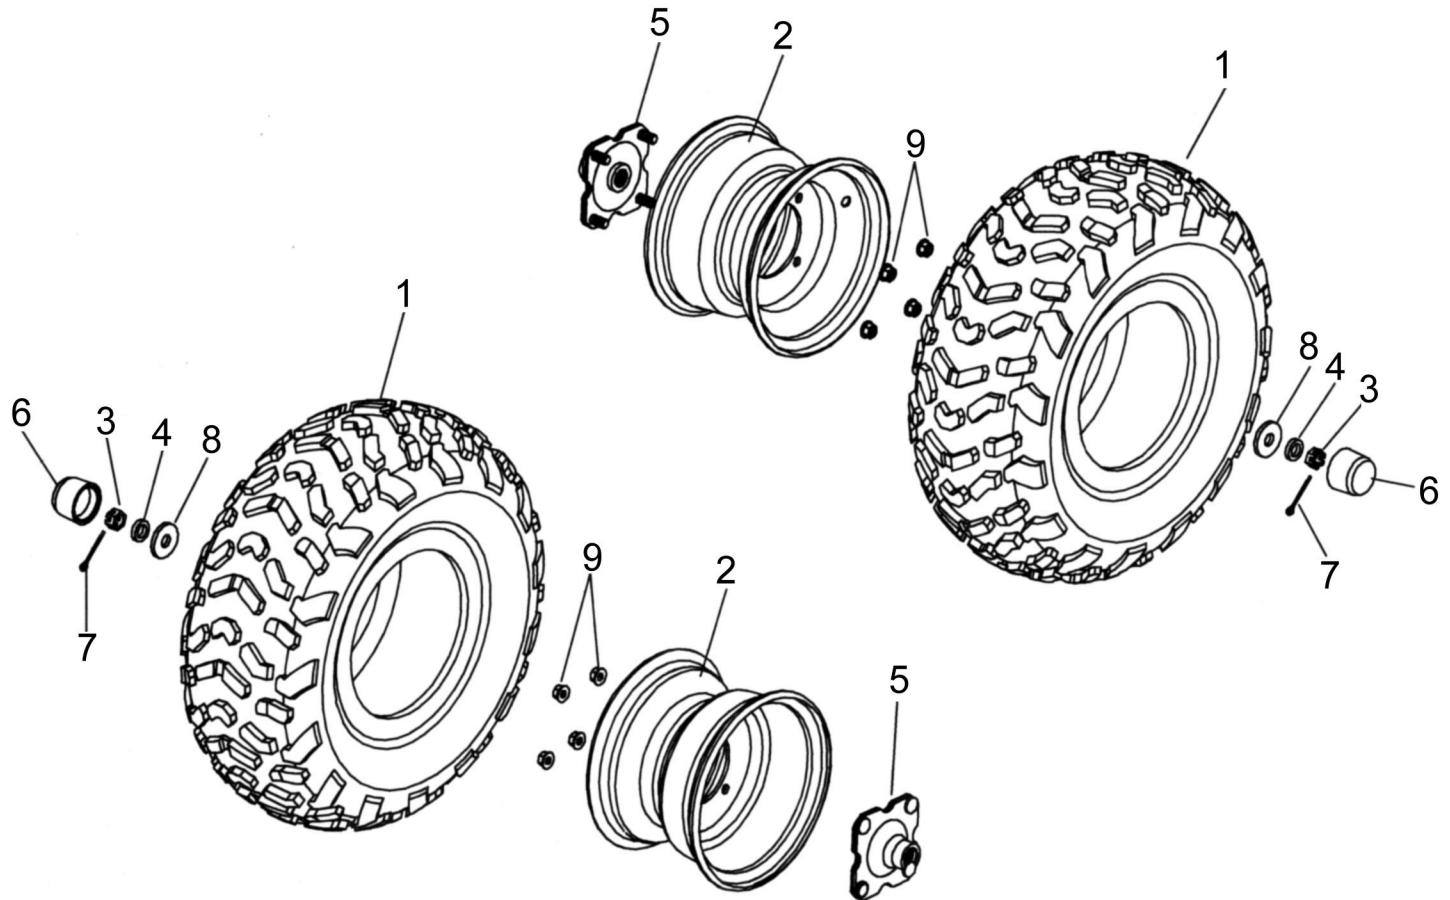


ITEM	PART NO.	NAME	QUANTITY
21		REAR WHEEL	
21-1	D4710-5EB0-0000	WHEEL TIRE(19×8-7)	2
21-2	D4601-5EB0-0000	WHEEL RIM	2
21-3	I5500-14000	CASTLE NUT(M14)	2
21-4	I9905-14100	WASHER(ψ 24×ψ 15×5t)	2
21-5	D2705-9EA0-0000	SHAFT CONNECTER WITH BOLTS	2
21-6	D4609-5EA0-0000	RUBBER COVER	2
21-7	I9900-30032	COTTER PIN	2
21-8	D2309-5EA0-0000	WHEEL AXLE WASHER, REAR (ψ 40×ψ 14 ×4.5t)	2
21-9	D4611-9EA0-0000	FLANGE SELF-LOCK NUT(M10)	8

  22. FRONT BRAKE

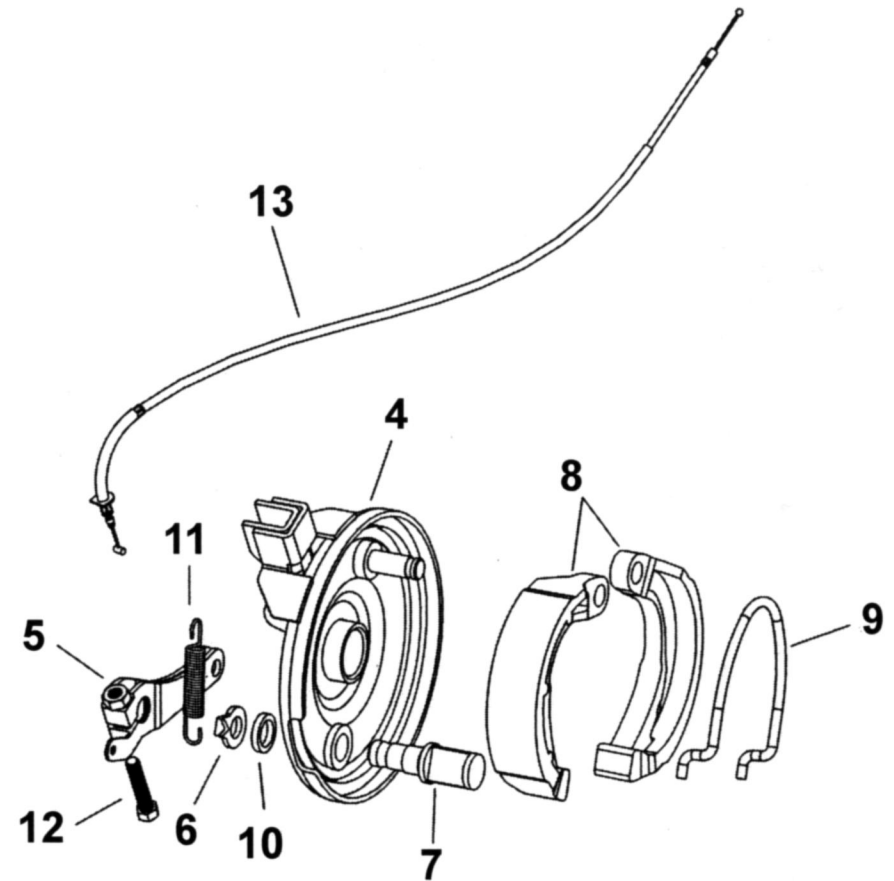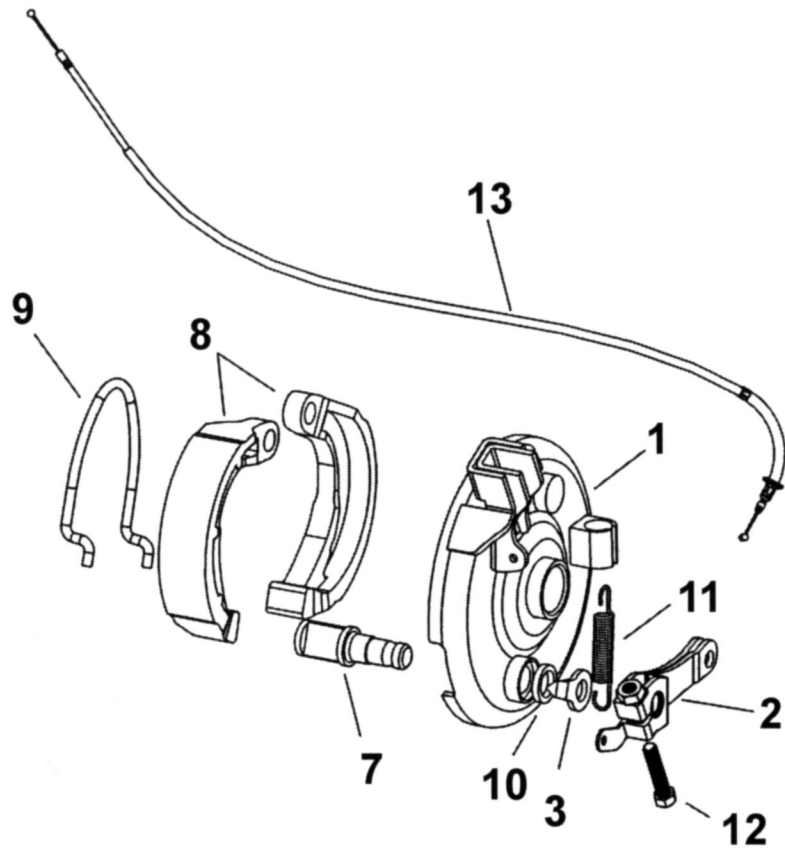

ITEM	PART NO.	NAME	QUANTITY
22		FRONT BRAKE	
22-1	D5351-5EA0-0000	FRONT BRAKE PANEL COMP., LEFT	1
22-2	D5410-5EA0-0000	FRONT BRAKE ARM, LEFT	1
22-3	D5145-5EA0-0000	FRONT BRAKE INDICATOR, LEFT	1
22-4	D5352-5EA0-0000	FRONT BRAKE PANEL COMP., RIGHT)	1
22-5	D5411-5EA0-0000	FRONT BRAKE ARM,RIGHT	1
22-6	D5146-5EA0-0000	FRONT BRAKE INDICATOR, RIGHT	1
22-7	D5141-5EA0-0000	FRONT BRAKE ARM CAM	2
22-8	D5120-5EA0-0000	FRONT BRAKE SHOE COMP.	2
22-9	D5125-5EA0-0000	SPRING	2
22-10	D5149-5EA0-0000	FELT SEAL	2
22-11	D5419-5EA0-0000	RETURN SPRING, FRONT	2
22-12	I0020-05024	BOLT(M5×24)	2
22-13	E5450-5EA0-0000	CABLE, FRONT BRAKE	2

 
23. REAR BRAKE

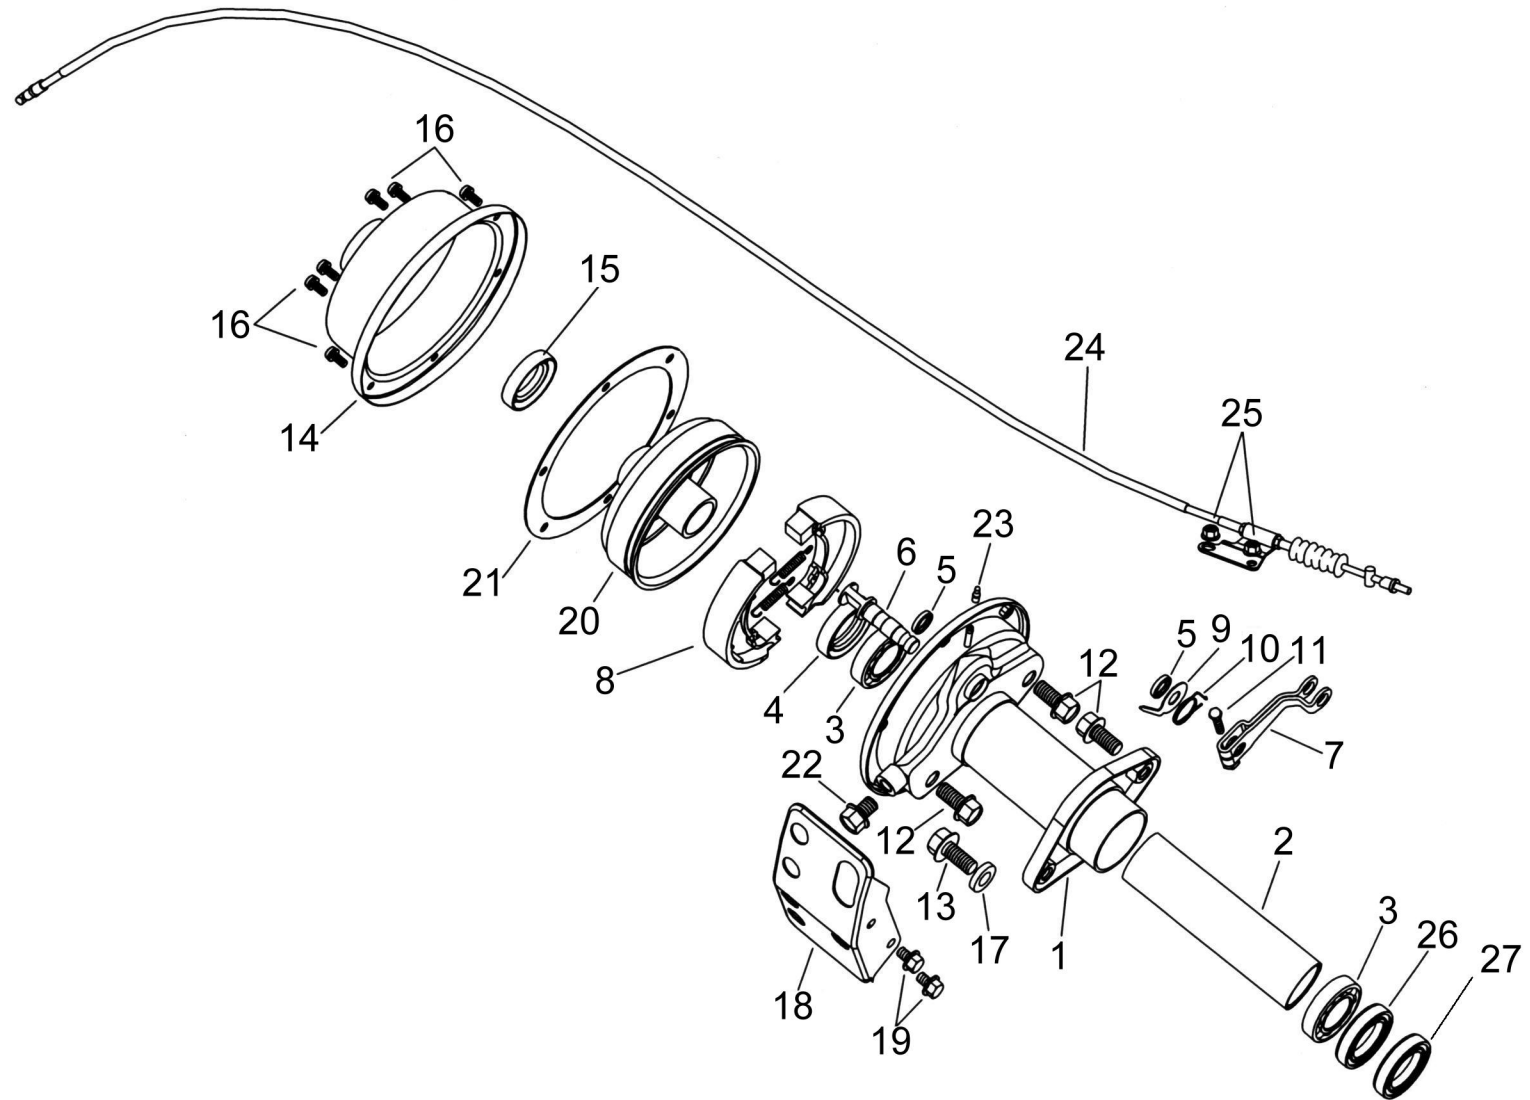

ITEM	PART NO.	NAME	QUANTITY
23		REAR BRAKE	
23-1	D2310-5EA0-0000	BEARING SEAT ASSY., REAR WHEEL 1 AXLE	
23-2	D2311-5EA0-0000	SPACER	1
23-3	I6100-6006ZZ	BEARING(6006Z)	2
23-4	D2313-9EA0-0000	OIL SEAL	1
23-5	D2314-5EA0-0000	OIL SEAL(ψ 14×ψ 20×4)	2
23-6	D3141-5EA0-0000	BRAKE ARM CAM, REAR	1
23-7	D3410-5EA0-0000	BRAKE ARM, REAR	1
23-8	D3120-5EA0-0000	BRAKE SHOE COMP., REAR(ψ 130)	1
23-9	D3145-5EA0-0000	BRAKE INDICATOR, REAR	1
23-10	D3419-5EA0-0000	RETURN SPRING, REAR	1
23-11	I0020-06030	BOLT(M6×30)	1
23-12	I0141-12025-01	FLANGE SCREW(M12×25)	3
23-13	I0141-12028-01	FLANGE SCREW(M12×28)	1
23-14	D3615-9EA0-0000	DRUM COVER, REAR	1
23-15	D3616-9EA0-0000	OIL SEAL	1
23-16	I8557-06012	BOLT WITH WASHER(M6×12)	6
23-17	D2203-5EA0-0000	WASHER(ψ 25×ψ 13×5)	1
23-18	D3617-5EA0-0000	REAR BRAKE COVER	1
23-19	I0149-08012	FLANGE SCREW(M8×12)	2
23-20	D3610-9EA0-0000	REAR DRUM	1
23-21	D3611-5EA0-0000	GASKET, REAR DRUM COVER	1
23-22	D2315-5EA0-0000	WATER RELEASE RUBE	1
23-23	D2319-5EA0-0000	PLUG, PURGE HOLE	1
23-24	E3450-5EA0-0000	CABLE, REAR BRAKE	1


23-25	I5611-08200	FLANGE SELF-LOCK NUT(M8)	2
23-26	D2315-9EAO-0000	OIL SEAL	1
23-27	D0114-9EAO-0000	SPACER	1

 24. HANDLE BAR

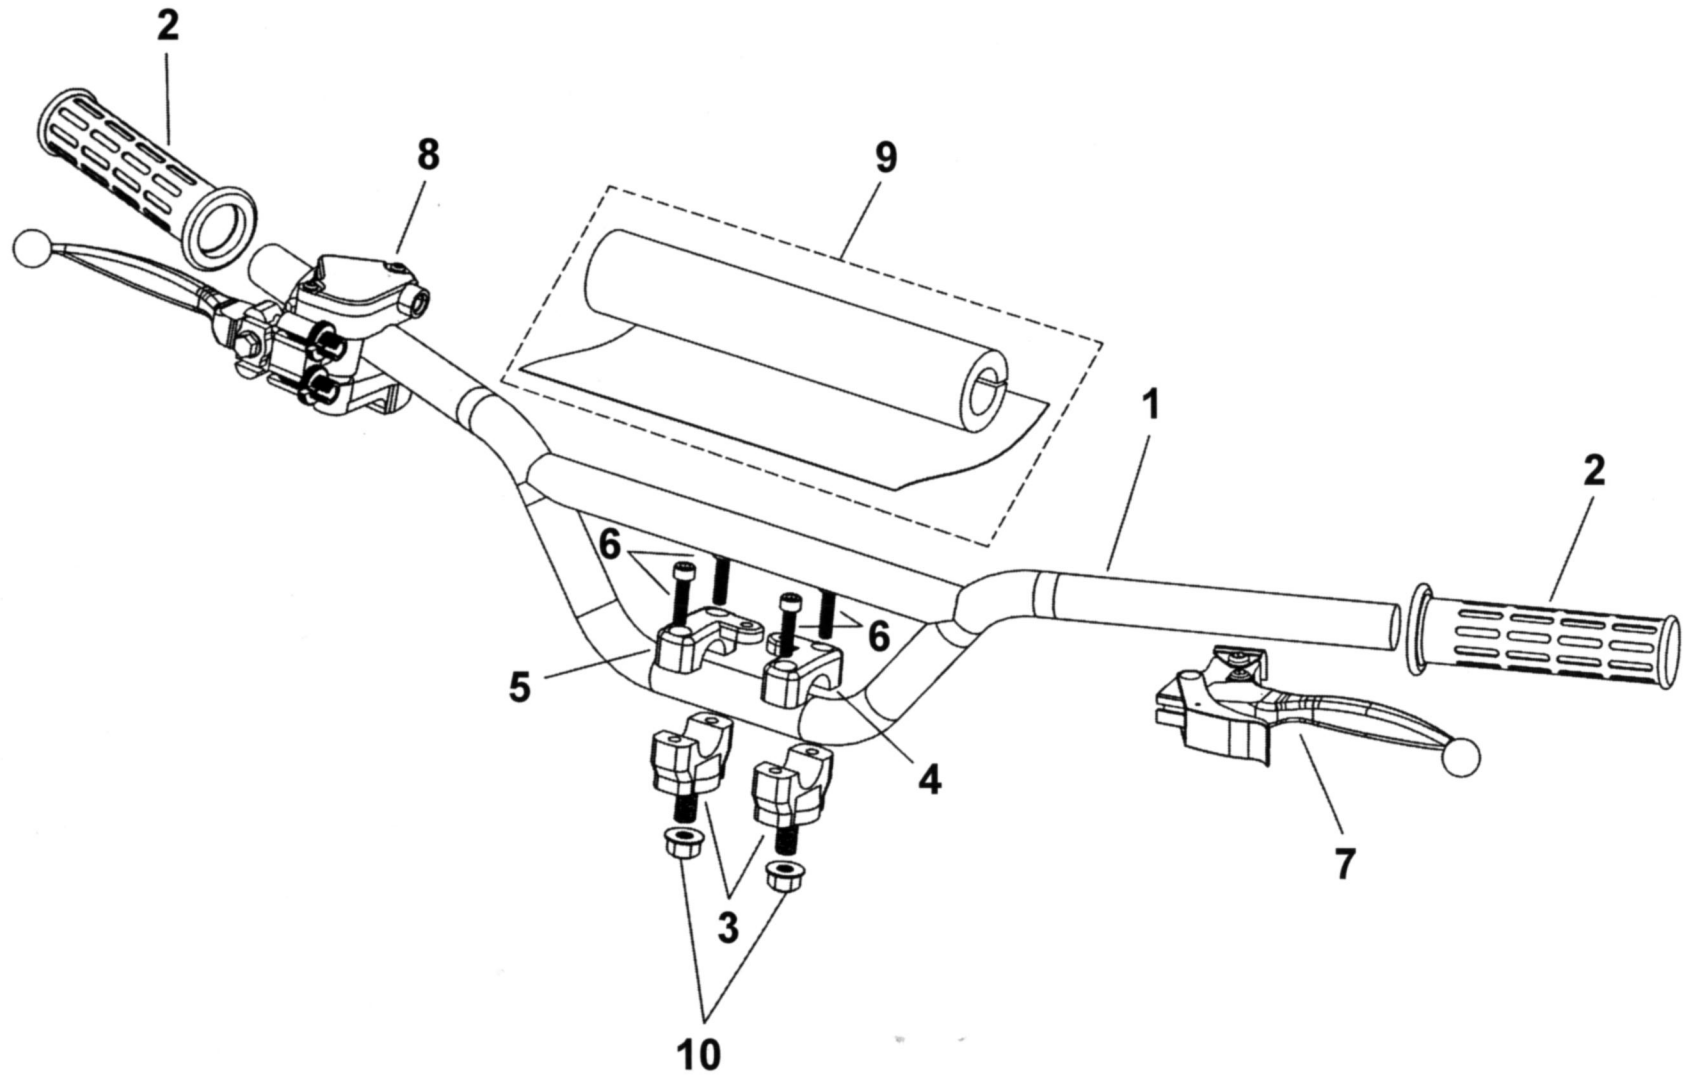


ITEM	PART NO.	NAME	QUANTITY
24		HANDLE BAR	
24-1	E3100-5EA0-0000	HANDLE BAR ASSY.	1
24-2	E3166-5EA0-0000	GRIP HANDLE	2
24-3	E3112-5EA0-0000	HANDLE BAR CLAMP, BOTTOM	2
24-4	E3110-5EA0-0000	HANDLE BAR CLAMP, CAP, LEFT	1
24-5	E3111-5EA0-0000	HANDLE BAR CLAMP, CAP, RIGHT	1
24-6	I0050-06025	SOCKET SCREW(M6×25)	4
24-7	E3170-9EA0-0000	LEVEL ASSY., LEFT	1
24-8	E3180-5EA0-0000	LEVEL ASSY., RIGHT	1
24-9	E3101-5EA0-0000	HANDLE BAR PROTECT FOAM	1
24-10	I5611-10200	FLANGE SELF-LOCK NUT (M10)	2

 25. REAR WHEEL AXLE

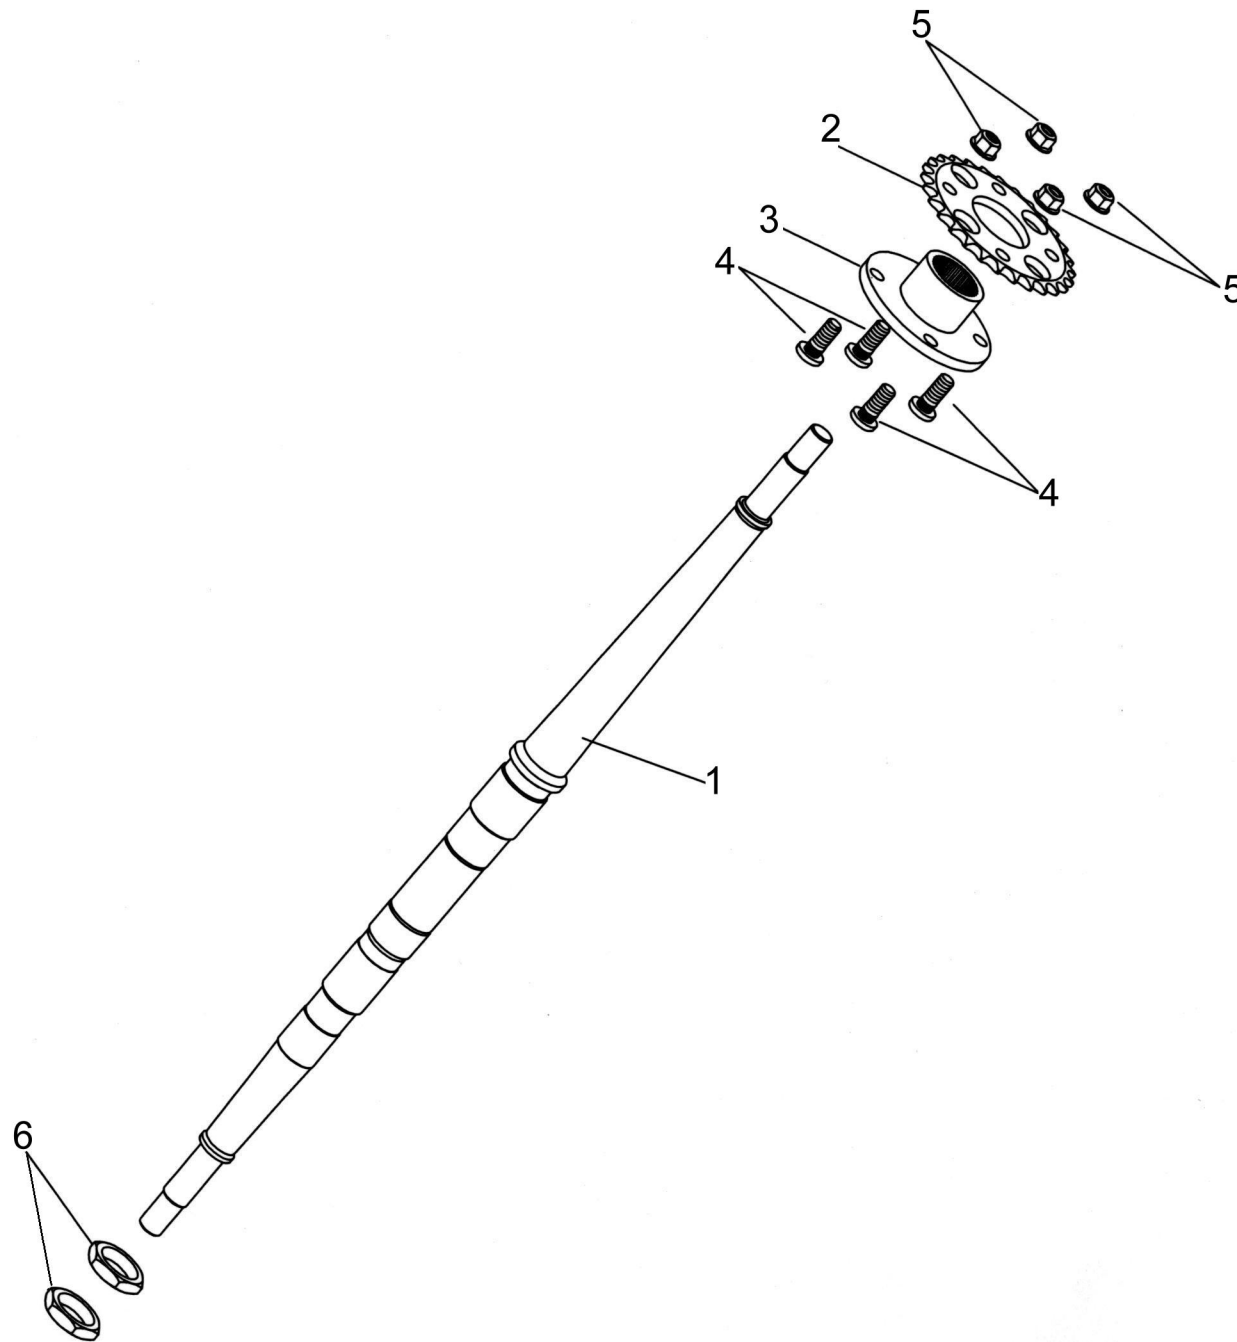


ITEM	PART NO.	NAME	QUANTITY
25		REAR WHEEL AXLE	
25-1	D2301-9EA0-0000	AXLE, REAR	1
25-2	D0110-9EA0-0000	SPROCKET, REAR(28T)	1
25-3	D0111-9EA0-0000	SPROCKET HOLDER, REAR	1
25-4	D2706-9EA0-0000	FLANGE SCREW	4
25-5	I5611-10200	LOCK-SELF NUT	4
25-6	D2302-9EA0-0000	NUT,REAR WHEEL AXLE	2

 26. CHAIN

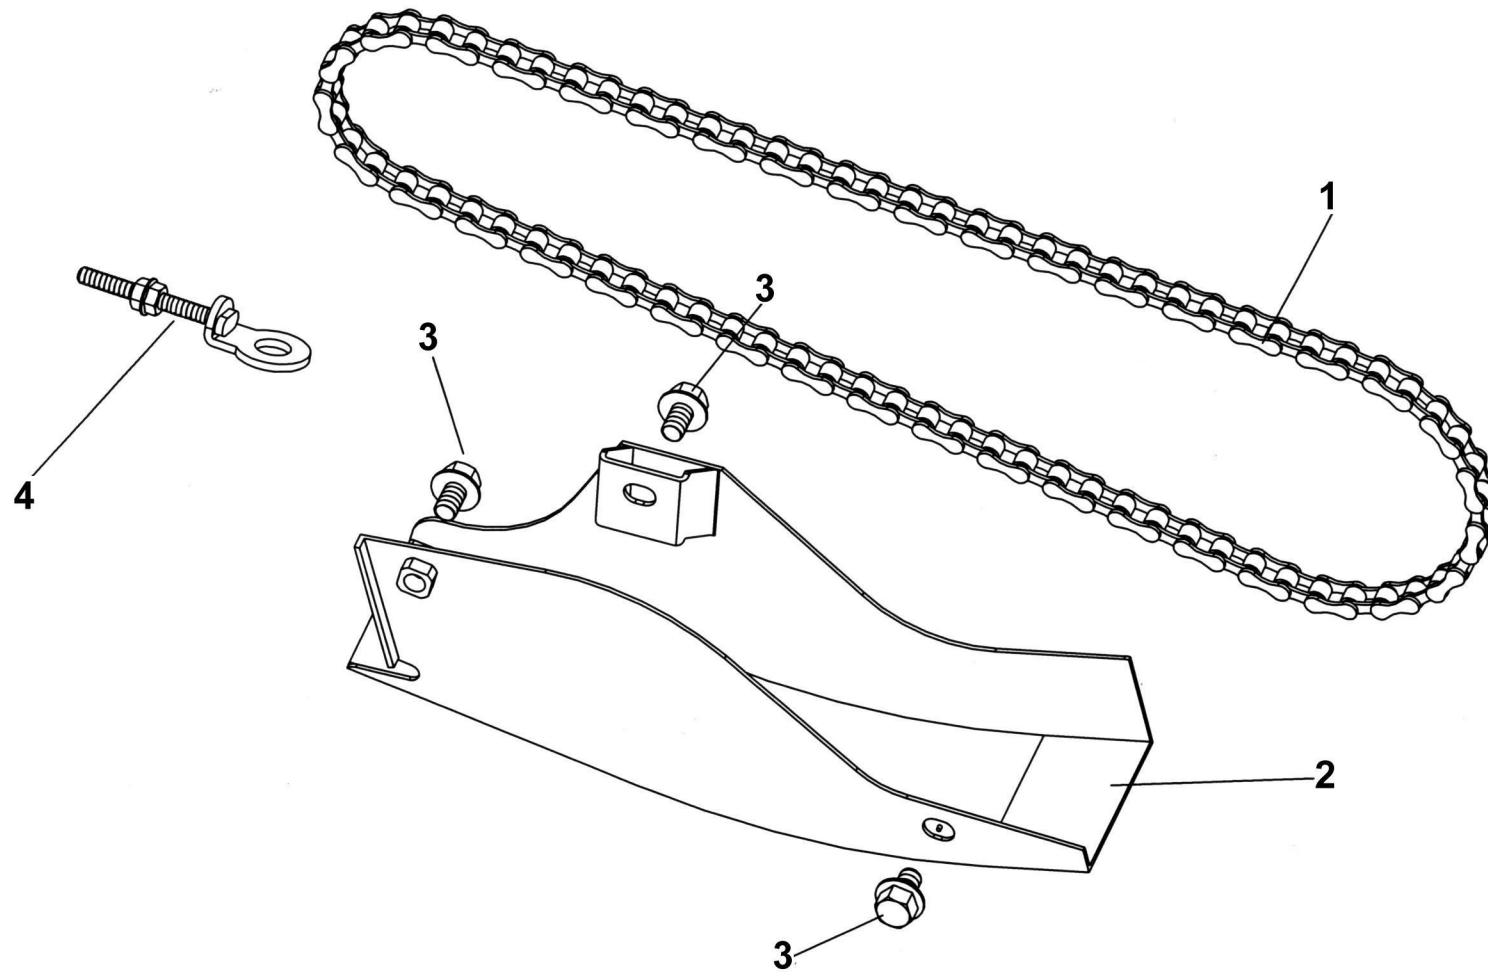


ITEM	PART NO.	NAME	QUANTITY
26		CHAIN	
26-1	D0100-9EAO-0000	DRIVE CHAIN ASSY.	1
26-2	D0101-5EAO-0000	PROTECT COVER	1
26-3	I0149-08012	FLANGE SCREW(M8×12)	3
26-4	D0120-9EAO-0000	ADJUSTER, CHAIN	1

 27. STEERING

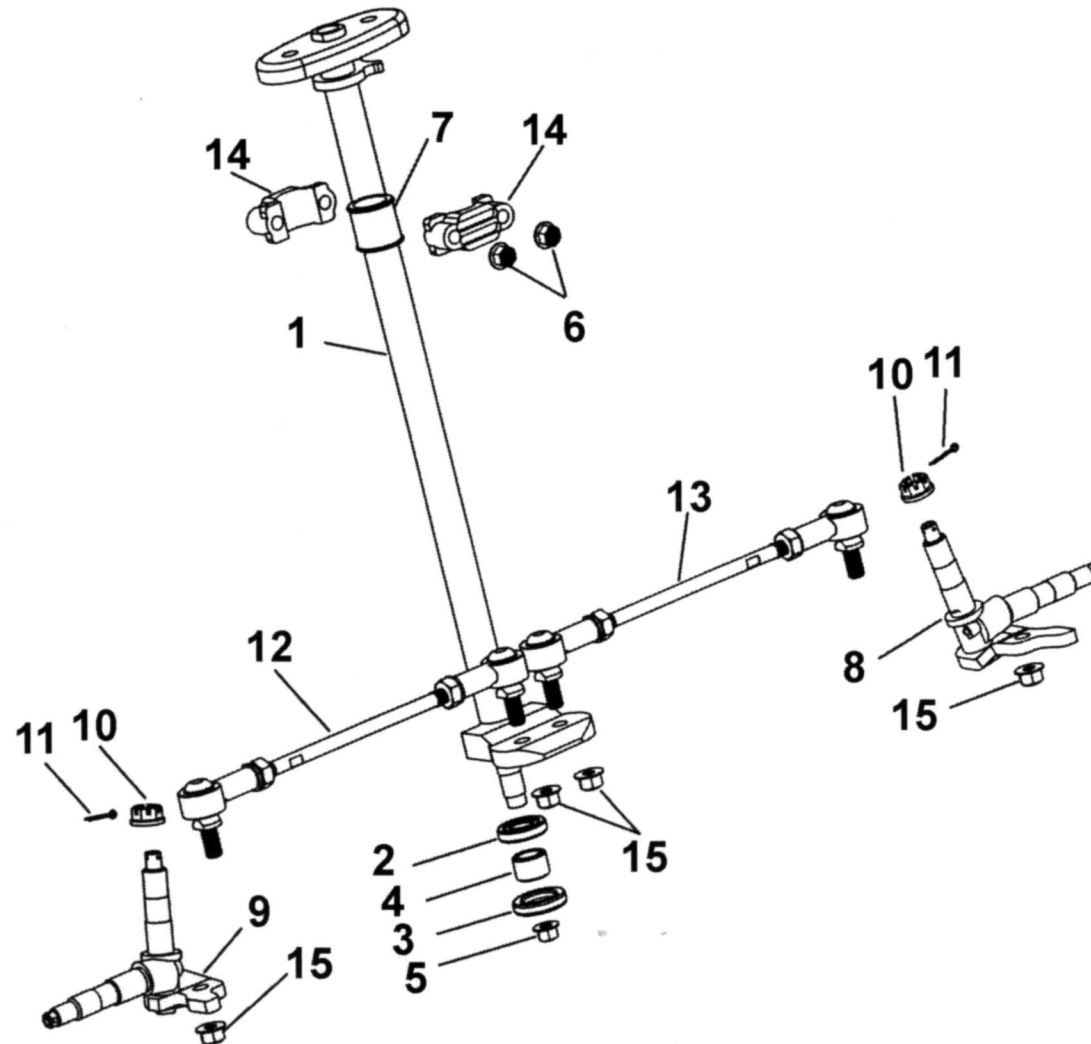


ITEM	PART NO.	NAME	QUANTITY
27		STEERING	
27-1	E3200-5EA0-0000	SHAFT ASSY., STEERING	1
27-2	E3201-5EA0-0000	OIL SEAL(ψ 18×ψ 32×7)	1
27-3	I3102-5AC0-0000	OIL SEAL(ψ 22×ψ 35×7)	1
27-4	D4620-5EA0-0000	INNER SPACER(ψ 15×ψ 21.7×15)	1
27-5	I5611-14200	FLANGE SELF-LOCK NUT (M14)	1
27-6	I5611-08200	FLANGE SELF-LOCK NUT (M8)	2
27-7	E3225-5EA0-0000	PU BUSH SLEEVE, STEERING SHAFT	1
27-8	E0205-5EA0-0000	KNUCKLE, LEFT	1
27-9	E0215-5EA0-0000	KNUCKLE, RIGHT	1
27-10	I5550-10000	CASTLE FLANGE NUT (M10)	2
27-11	I9900-20019	COTTER PIN	2
27-12	E0258-5EA0-0000	STEERING TIE-ROD ASSY., LEFT	1
27-13	E0259-5EA0-0000	STEERING TIE-ROD ASSY., RIGHT	1
27-14	E3202-5EA0-0000	HOLDER, STEERING SHAFT	2
27-15	I5611-10200	FLANGE SELF-LOCK NUT (M10)	4

 28. ELECTRIC PARTS

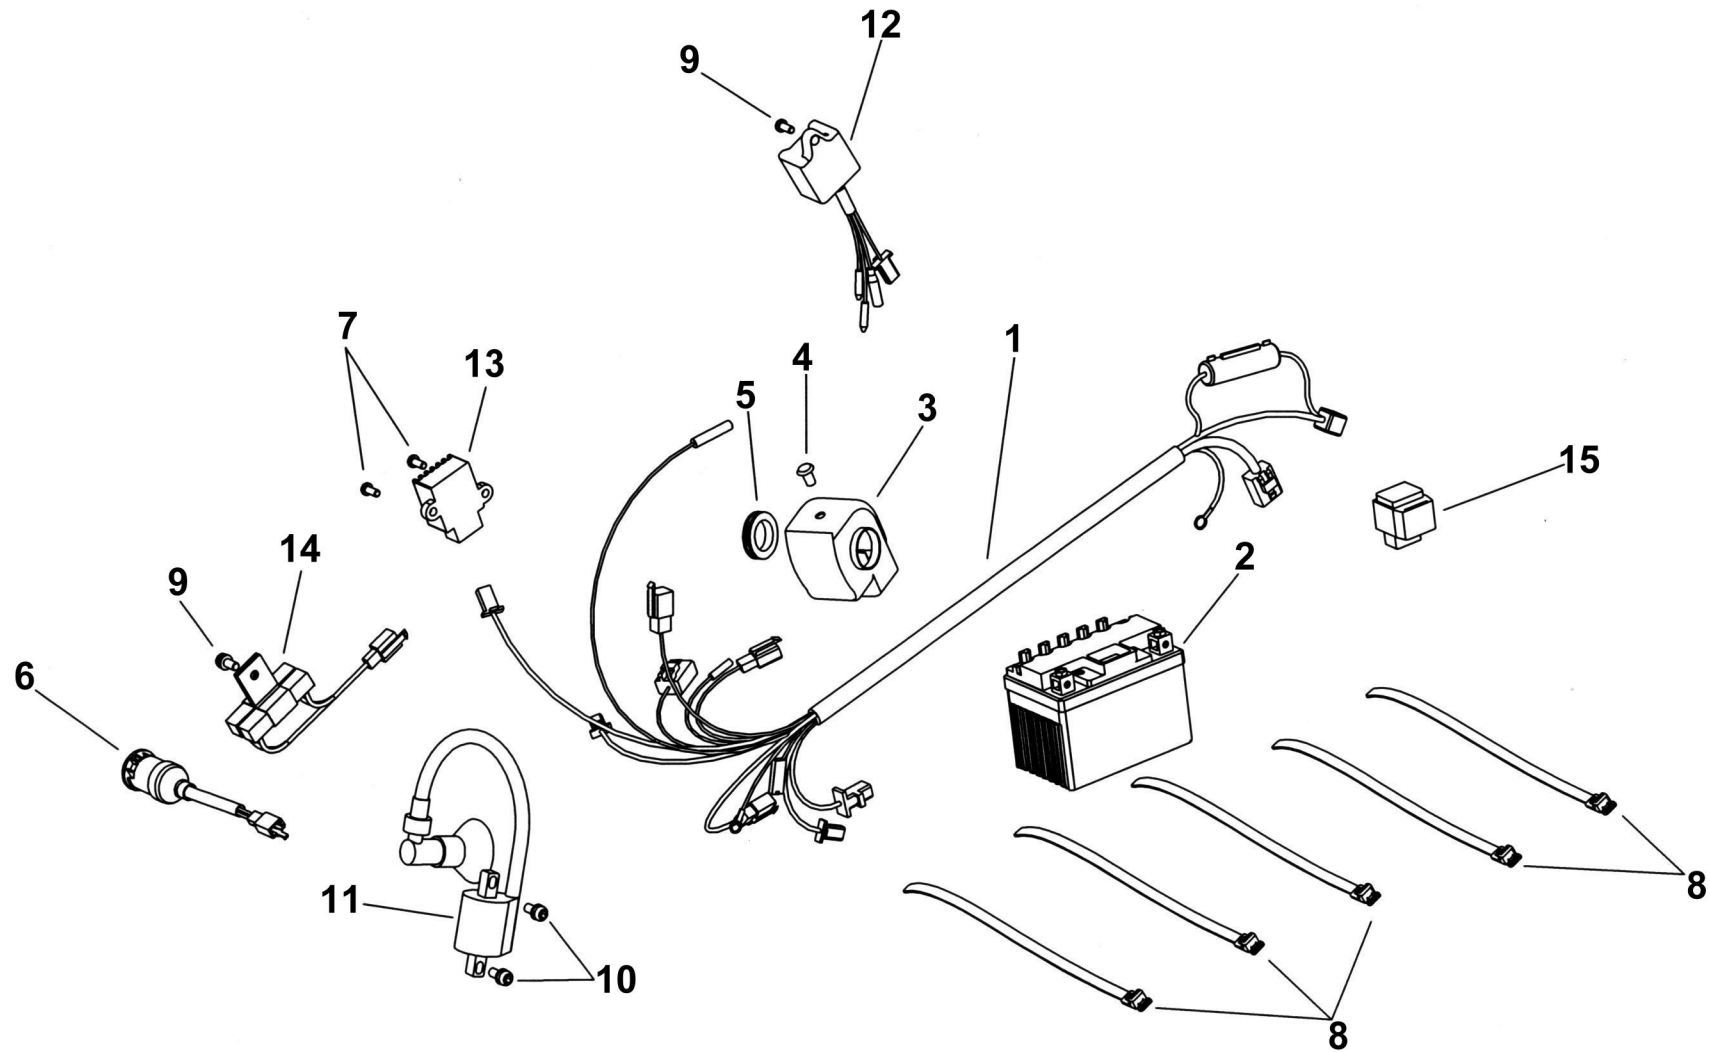

ITEM	PART NO.	NAME	QUANTITY
28		ELECTRICAL PARTS	
28-1	C2100-9EA0-0000	MAIN WIRE ASSY.	1
28-2	C1500-5EA0-0000	BATTERY	1
28-3	C5200-5EA0-0000	LEVER HOLDER ASSY., LEFT	1
28-4	C5205-5EA0-0000	PLUG	1
28-5	C5202-5EA0-0000	RUBBER PLUG	1
28-6	C501A-5EA0-0000	MAIN SWITCH ASSY.	1
28-7	I8506-05012	SCREW(M5×12)	2
28-8	H3936-5AA0-0000	WIRE CLAMP	6
28-9	I8556-06016	SCREW WITH WASHER(M6×16)	2
28-10	I8556-06020	SCREW WITH WASHER(M6×20)	2
28-11	C051A-B00-0000	IGNITION COIL ASSY.	1
28-12	C1500-B00-0000	C.D.I. UNIT ASSY.	1
28-13	C1600-B00-0000	RECTIFIER & REGULATOR	1
28-14	C5400-B00-0000	RESISTOR ASSY.	1
28-15	C5850-B00-0000	STARTER RELAY ASSY.	1

 29. TOOL BOX

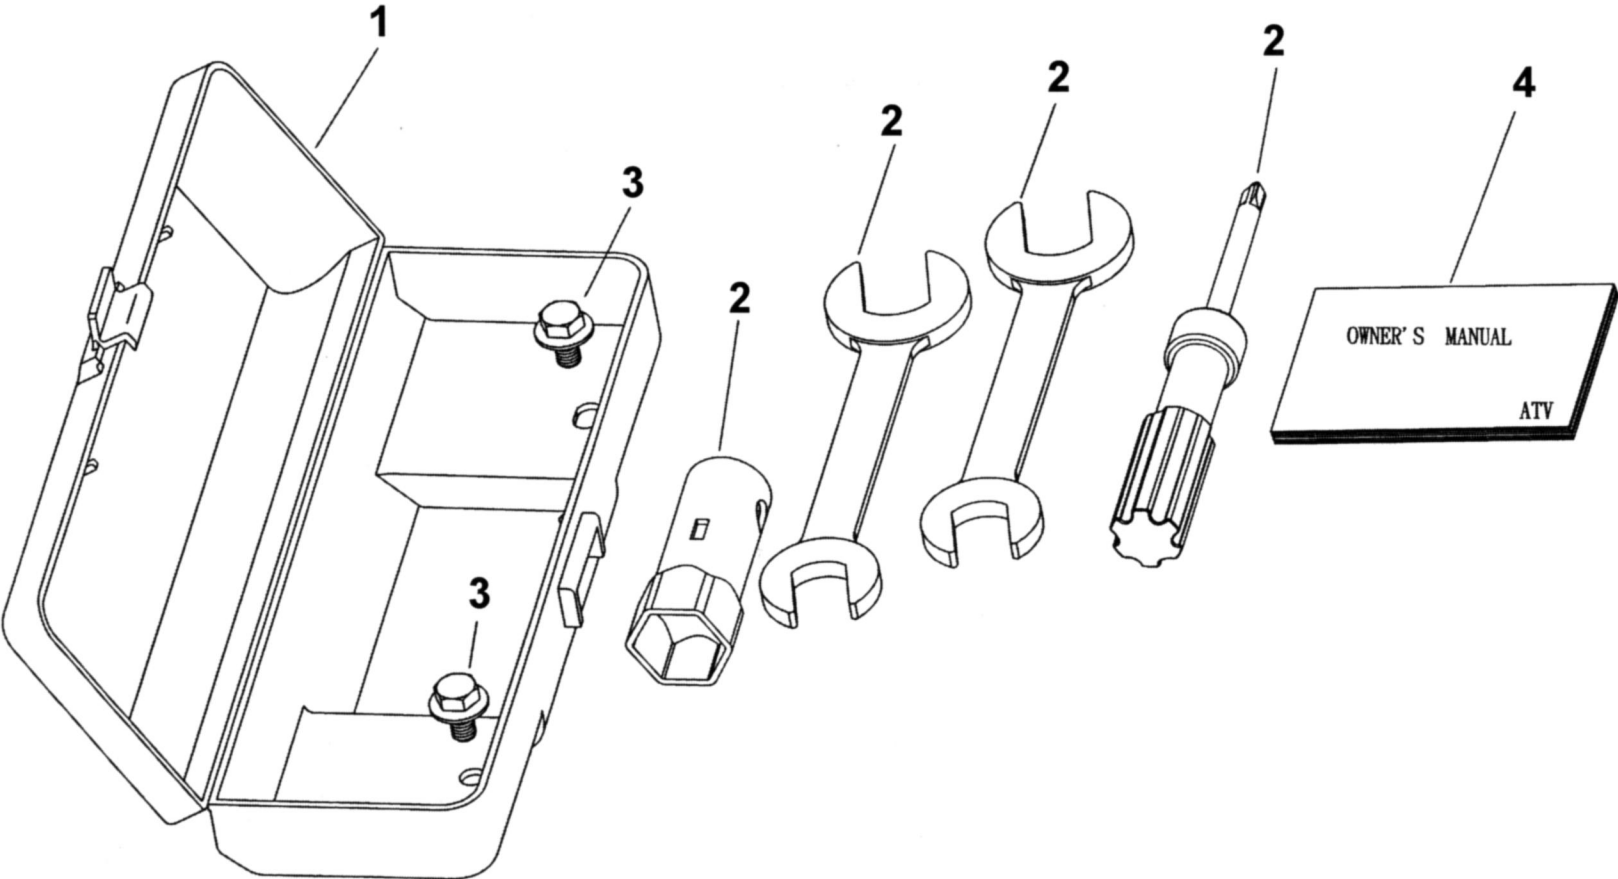

ITEM	PART NO.	NAME	QUANTITY
29		TOOL BOX	
29-1	H9010-5EA0-0000	TOOL BOX	1
29-2	H9020-5EA0-0000	TOOLS	1
29-3	I0140-06012	SCREW WITH WASHER(M6×12)	2
29-4	H9901-5EA0-0000	OWNER'S MANUAL	1