

PARTS CATALOGUE

VIPER 90R RXL-90R



CONTENTS

 
PARTS ITEM:

- 01 CYLINDER, HEAD
- 02 CRANKSHAFT, PISTON
- 03 FAN COVER, AIR SHROUD
- 04 AIR CLEANER, REED VALVE , CARBURETOR
- 05 CRANK CASE, COVER, OIL PUMP
- 06 TRANSMISSION
- 07 KICK SHAFT ASSY., STARTER CLUTCH ASSY.
- 08 DRIVEN PULLEY (CVT)
- 09 ENGINE ATV
- 10 GENERATOR, START MOTOR
- 11 PREARRANGE
- 12 PREARRANGE
- 13 MUFFLER
- 14 FRAME
- 15 SWING ARM,FOOTREST, FEND BAR
- 16 FENDER
- 17 SEAT
- 18 FUEL TANK , OIL TANK
- 19 SUSPENSION
- 20 FRONT WHEEL
- 21 REAR WHEEL
- 22 FRONT BRAKE
- 23 REAR BRAKE
- 24 HANDLE BAR
- 25 REAR WHEEL AXLE
- 26 SWING ARM SUB,PROTECT COVER
- 27 STEERING

- 28 ELECTRICAL EQUIPMENT
- 29 PACKING CASE,EXTERNAL
- 30 MANUAL CHOKE KIT
- 31 ACCESSORIES
- 32 SERVICE KITS,BRAKE CALLIPER
- 33 PISTON / CYLINDER TOP END KIT
- 34 CYLINDER+PISTON TOP END KIT
- 35 MAINTENANCE KIT 1 (MJ # 85)
- 36 MAINTENANCE KIT 2 (MJ # 85)
- 37 TOOL


N & sign meaning: not available to sale

1. CYLINDER, HEAD

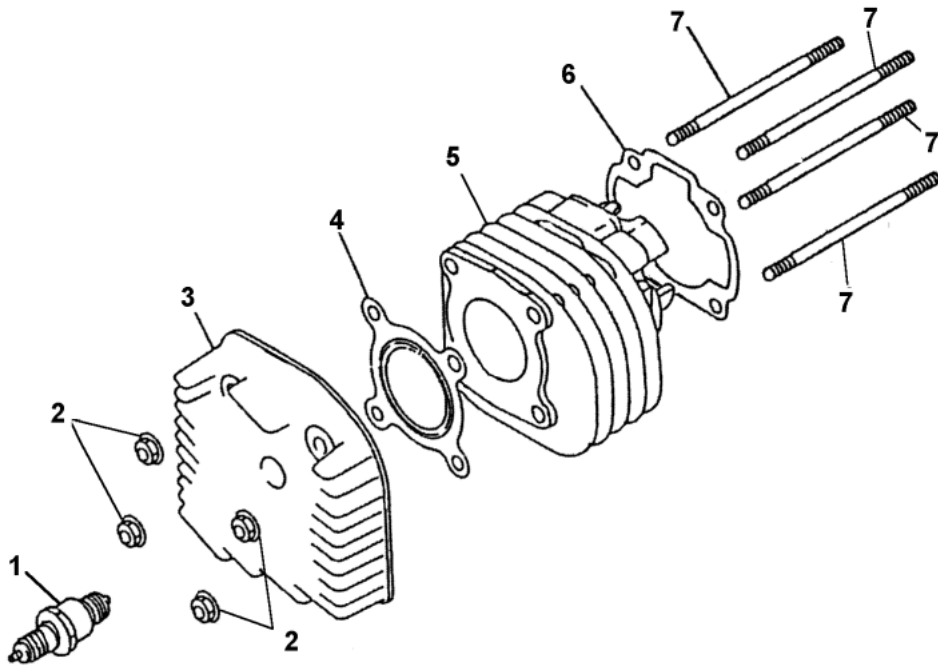


ITEM	AVAIL	PART NO.	NAME	QTY
01			CYLINDER, HEAD	
01-1		I8000-B00-0000	SPARK PLUG	1
01-2		I4050-07070-0H	NUT FLANGE	4
01-3		A2200-B00-0000	HEAD CYLINDER	1
01-4		A2251-B00-0000	GASKET CYLINDER HEAD	1
01-5		A2100-B00-0000	CYLINDER	1
01-6		A2191-B00-0000	GASKET CYLINDER	1
01-7		I0031-07124-0H	STUD BOLT (A)	4

 2. CRANKSHAFT, PISTON

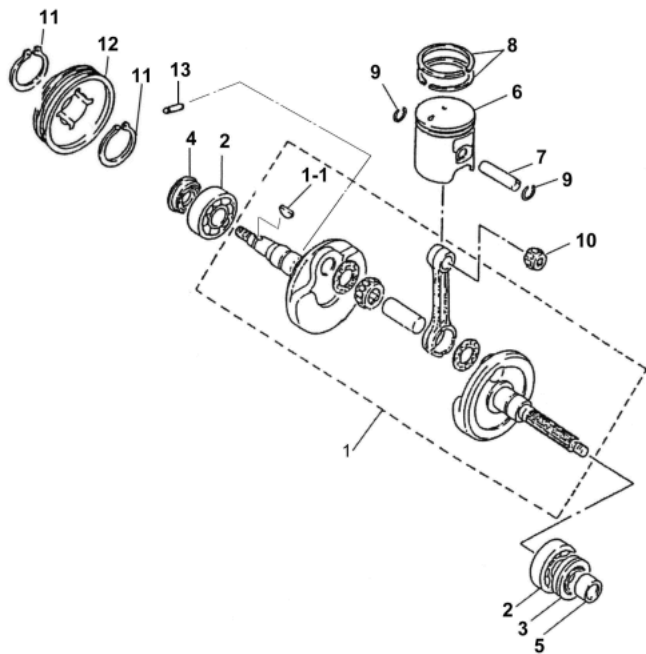


ITEM	AVAIL	PART NO.	NAME	QTY
02			CRANKSHAFT, PISTON	
02-1		A3000-B00-8001	CRANKSHAFT COMP	1
02-1-1		I4401-13050	WOODRUFF KEY	1
02-2		I6100-62044-10	BEARING, BALL, RADIAL	2
02-3		I1202-B00-0000	OIL SEAL	1
02-4		I1201-B00-0000	OIL SEAL	1
02-5		B8117-B00-0000	BOSS	1
02-6		A3101-B00-0000	PISTON	1
02-7		A3111-B00-0000	PIN PISTON (12×40)	1
02-8		A3011-B00-0000	PISTON RING SET (50)	1
02-9		I4601-12000	CLIP, PISTON PIN	2
02-10		I1100-1215165	BEARING, NEEDLE	1
02-11		I4510-19000	CIRCLIP EX	2
02-12		A5131-B00-0000	GEAR PUMP DRIVE	1
02-13		I4303-03118	KNOCK PIN	1

 3. FAN COVER, SHROUD

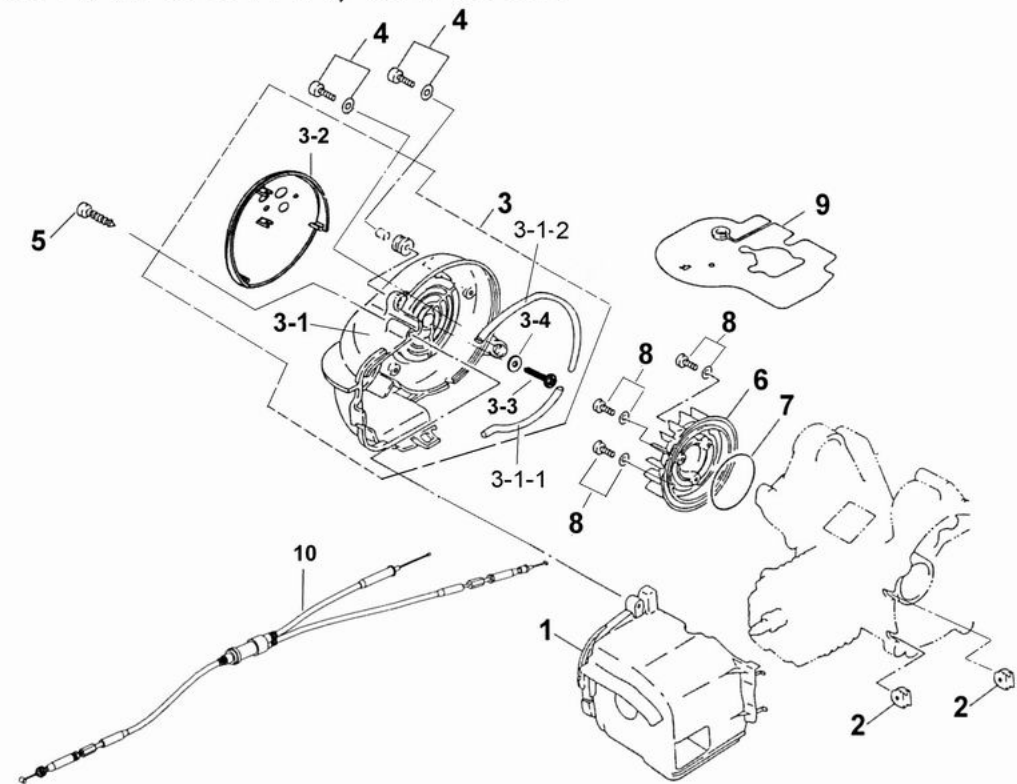

ITEM	AVAIL	PART NO.	NAME	QTY
03			FAN COVER, AIR SHROUD	
03-1		A9620-B00-0001	AIR SHROUD, CYLINDER	1
03-2		A1207-B00-0000	GROMMET	2
03-3		A961A-B00-0000	COVER FAN COMP	1
03-3-1		A9610-B00-0000	COVER COMP FAN	1
03-3-1-1		A9617-B00-0000	SEAL SHROUD 1	1
03-3-1-2		A9618-B00-0000	SEAL SHROUD 2	1
03-3-2		A9616-B00-0000	CAP FAN COVER	1
03-3-3		I3903-416B0	TRUSS	1
03-3-4		I4104-05316	WASHER	1
03-4		I3891-06020-0C	SCREW WASHER	2
03-5		I3901-240C0	SCREW TAPPING	1
03-6		A9510-B00-0000	FAN	1
03-7		I4608-64431	O-RING	1
03-8		I3893-06016-0H	SCREW WASHER	3
03-9		H0153-B00-0000	DEFLECTOR	1
03-10		A7910-5EE0-0000	CABLE ASSY., THROTTLE	1

 
4. AIR CLEANER, REED VALVE, CARBURETOR

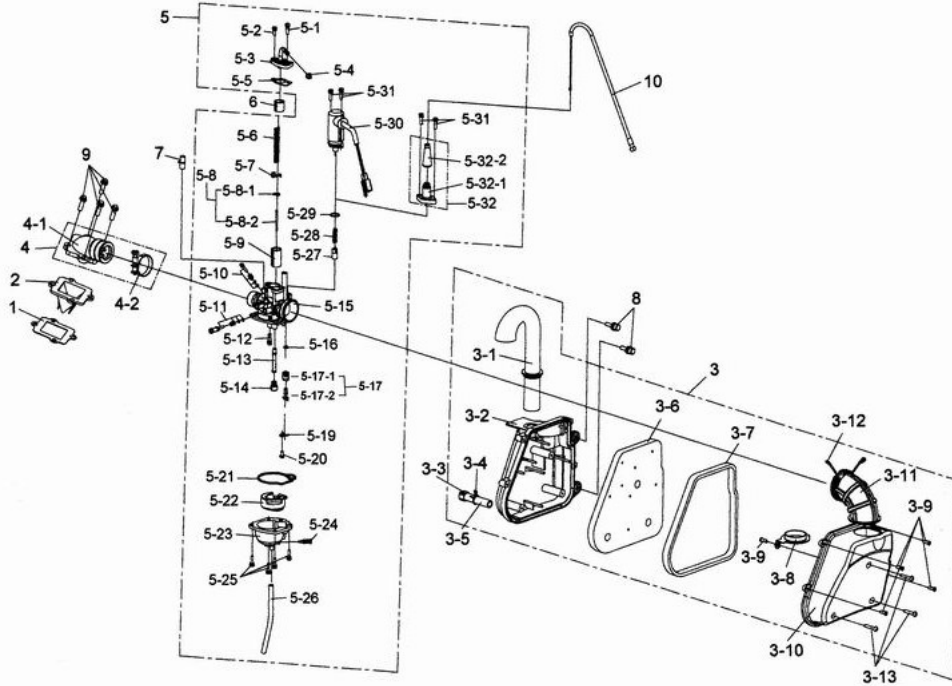

ITEM	AVAIL	PART NO.	NAME	QTY
04			AIR CLEANER, REED VALVE , CARBURETOR	
04-1		A6201-B00-0000	GASKET VALVE SEAT	1
04-2		A410A-B00-0000	REED VALVE ASSY	1
04-3		A720A-B00-7000	AIR CLEANER ASSY	1
04-3-1		A7257-B00-7000	DUCT	1
04-3-2		A7230-B00-0000	CASE AIR/C	1
04-3-3		A7232-B00-0000	CAP	1
04-3-4		I5002-12312	TUBE CLIP	1
04-3-5		A7234-B00-0000	TUBE DRAIN	1
04-3-6		A7205-B00-0000	WEB AIR/C	1
04-3-7		A7214-B00-0000	SEAL	1
04-3-8		A7233-B00-0000	PLATE FIXING CONNECTING TUBE	1
04-3-9		I3903-312B0	TRUSS	5
04-3-10		A7231-B00-0000	COVER AIR/C	1
04-3-11		A7253-B00-0000	JOIN PIPE AIR CLEANER	1
04-3-12		I5002-43022	TUBE CLIP	1
04-3-13		I3901-425C0	SCREW TAPPING	3
04-4		A711A-B00-0000	PIPE INLET ASSY	1
04-4-1		A7110-B00-0000	PIPE COMP INLET	1
04-4-2		A7256-B00-0000	BAND CONNECTING TUBE	1
04-5		A610A-B00-0001	CARBURETOR ASSY. (MJ #85)	1
04-5-1		A6111-B00-0000	BOLT WASHER	1
04-5-2		A6109-B00-0000	BOLT WASHER	1
04-5-3		A6102-B00-0000	CARBURETOR COVER	1
04-5-4		A6112-B00-0000	NUT HEX	1
04-5-5		A6103-B00-0000	CARBURETOR COVER WASHER	1
04-5-6		KAC31810	THROTTLE VALVE SPRING	1
04-5-7		KAC30310	V CLIP	1
04-5-8		KAC30220	JET NEEDLE ASSY. (#3CR1)	1
04-5-8-1	N	KAC30222	E CLIP	1
04-5-8-2	N	KAC30221	JET NEEDLE (#3CR1)	1
04-5-9		KAC30110	THROTTLE VALVE (#3.0)	1
04-5-10		A6105-B00-0000	AIR FLOW ADJUSTING SCREW	1
04-5-11		KAC30840	THROTTLE ADJUSTING SCREW	1
04-5-12		KAC30510	SLOW JET (*20)	1
04-5-13		KAC30610	NEEDLE JET (*426 E-1)	1
04-5-14		KAC30410	MAIN JET # 85	1
04-5-15		A6104-B00-0000	CARBURETOR BODY	1


04-5-16		A6118-B00-0000	O-RING	1
04-5-17		A0001-B00-0000	NEEDLE VALVE SEAT COMP	1
04-5-17-1		A6119-B00-0000	NEEDLE VALVE SEAT	1
04-5-17-1	N	A6119-B00-0000	NEEDLE VALVE SEAT	1
04-5-17-2		KAC31120	NEEDLE VALVE ASSY.	1
04-5-17-2	N	KAC31120	NEEDLE VALVE ASSY.	1
04-5-19		A6120-B00-0000	PLATE FIXING	1
04-5-20		A6115-B00-0000	BOLT	1
04-5-21		KAC30910	CHAMBER O-RING	1
04-5-22		KAC31210	FLOAT ASSY	1
04-5-23		A6108-B00-0000	CARBURETOR CHAMBER	1
04-5-24		KAC31410	DRAIN SCREW	1
04-5-25		A6117-B00-0000	BOLT WASHER	4
04-5-26		A6106-B00-0000	RUBBER TUBE	1
04-5-27		A6153-B00-0000	MANUAL CHOKE VALVE	1
04-5-28		A6152-B00-0000	SPRING	1
04-5-29		A6113-B00-0000	O-RING	1
04-5-30		KAC31910	AUTO-BY STARTER	1
04-5-31		A6114-B00-0000	BOLT WASHER	2
04-6		A6022-5EC9-0000	RESTRICTOR CARBURETOR	1
04-7		A6101-B02-0000	CRAB RUBBER CAP	1
04-8		I6706-06020-0C	SCREW WASHER	2
04-9		I6001-06020-0H	FLANGE BOLT, HEX.	4

 5. CRANK CASE 、COVER 、OIL PUMP

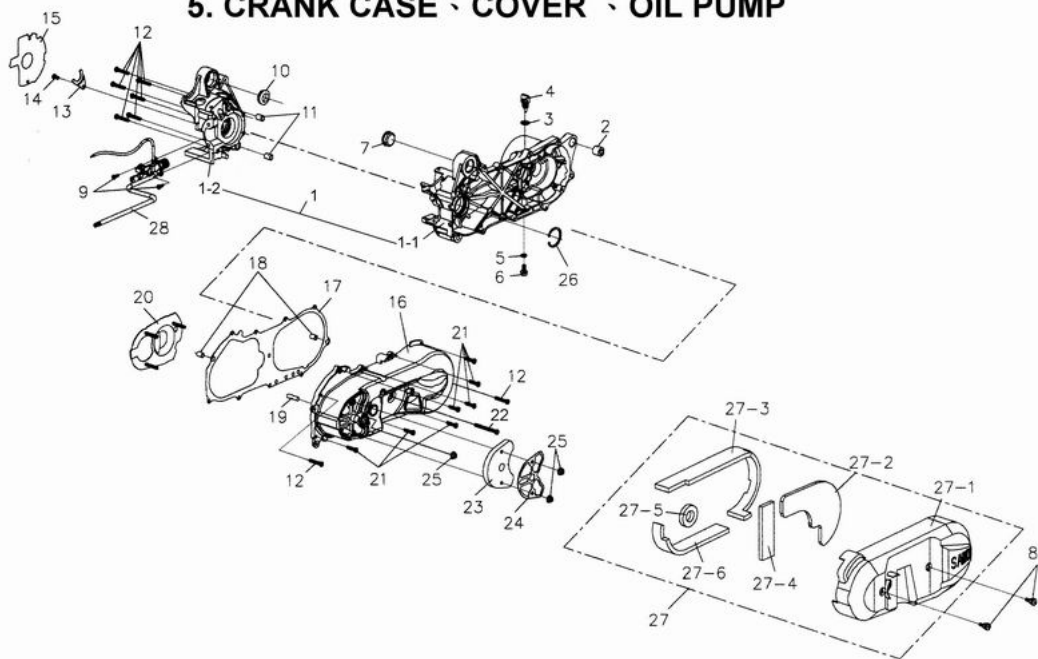

ITEM	AVAIL	PART NO.	NAME	QTY
05			CRANK CASE, COVER, OIL PUMP	
05-1		A1000-B07-0000	R L CRANK CASE COMP	1
05-1-1	N	A1200-B07-0900	CRANK CASE LEFT	1
05-1-2	N	A1100-B07-0900	CRANK CASE RIGHT	1
05-2		A1203-B00-0000	RUBBER BUSH RR CUSHION	1
05-3		I4608-13825	O-RING	1
05-4		A5651-B00-0000	PLUG, OIL	1
05-5		I4104-08015	WASHER	1
05-6		I5701-08016-0H	BOLT FLANGE	1
05-7		A1205-B00-0000	RUBBER CAP LEFT	1
05-8		A137A-B00-0000	BOLT,FLANGE(M6×23.5)	2
05-9		I3500-05014-0A	SCREW PAN HEAD	2
05-10		A1105-B00-0000	CAP RUBBER R	1
05-11		I4301-12160	KNOCK PIN	2
05-12		I3500-06035-0A	SCREW PAN	8
05-13		A1121-B00-0000	HOLDER	1
05-14		I3500-06012-0A	SCREW, PAN	1
05-15		A1393-B00-0000	GASKET R CRANK CASE	1
05-16		A1341-B00-0000	COVER CRANK CASE L	1
05-17		A1395-B00-0000	GASKET L COVER	1
05-18		I4301-10140	KNOCK PIN	2
05-19		A1342-B00-0000	SHAFT	1
05-20		A1361-B00-0000	PLATE	1
05-21		I3500-06025-0A	SCREW PAN	8
05-22		I3500-06065-0A	SCREW PAN	1
05-23		A1362-B00-0000	ELEMENT	1
05-24		A1363-B00-0000	GUIDE, ELEMENT	1
05-25		I4050-06060-0H	FLANGE NUT, HEX.	3
05-26		I4520-42000	CIRCLIP IN	1
05-27		A135A-B00-0000	COVER, CRANKCASE ASSY(L)	1
05-27-1		A1351-B00-0000	COVER, CRANKCASE (L)	1
05-27-2		A1352-B00-0000	DAMPER ENGINE MOUT 1	1
05-27-3		A1354-B00-0000	DAMPER ENGINE MOUT 3	1
05-27-4		A1353-B00-0000	DAMPER ENGINE MOUT 2	1
05-27-5		A1356-B00-0000	DAMPER ENGINE MOUT 5	1
05-27-6		A1355-B00-0000	DAMPER ENGINE MOUT 4	1
05-28		A510A-B00-9000	OIL PUMP ASSY.	1

 
6. TRANSMISSION

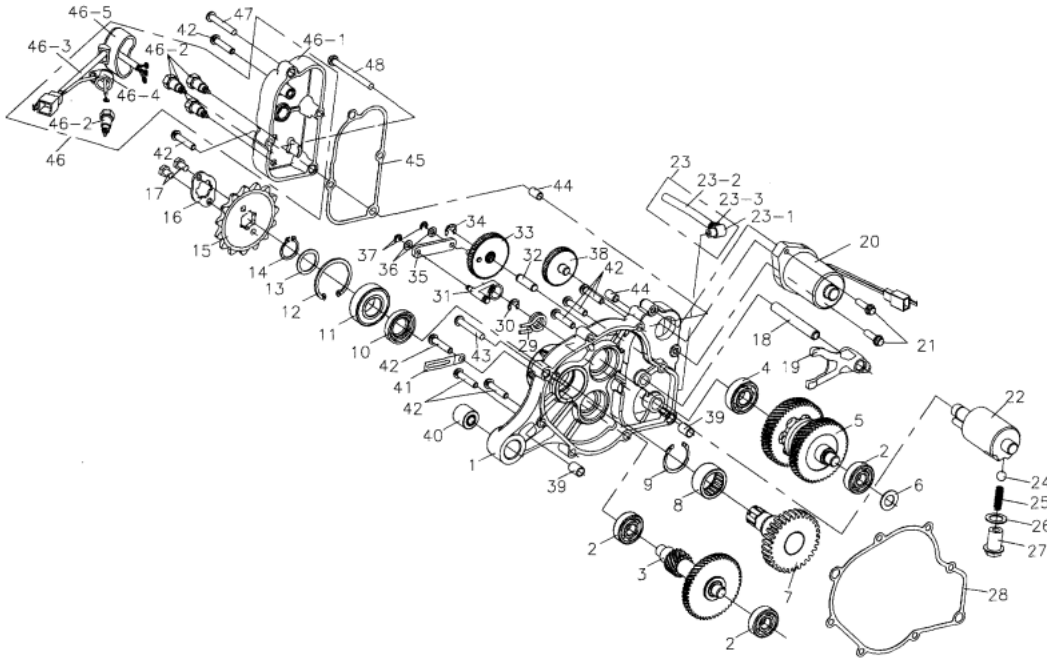

ITEM	AVAIL	PART NO.	NAME	QTY
06			TRANSMISSION	
06-1		B1300-B07-0900	MISSION COVER	1
06-2		I6100-62013-10	BEARING, BALL, RADIAL	3
06-3		B3250-B07-0000	REVERSE SHAFT COMP	1
06-4		I6100-62020	BEARING, BALL, RADIAL	1
06-5		B3420-B07-0000	COUNTER SHAFT COMP	1
06-6		I4104-12310	WASHER	1
06-7		B3430-B07-0000	FINAL SHAFT COMP	1
06-8		I1130-253316	BEARING, NEEDLE	1
06-9		I4530-32000	CIRCLIP	1
06-10		I1204-B00-0000	OIL SEAL	1
06-11		I6150-60040-10	BEARING, BALL, RADIAL	1
06-12		I4520-42000	CIRCLIP IN	1
06-13		I4104-20210	WASHER	1
06-14		I4510-20000	CIRCLIP EX	1
06-15		B3801-B00-9000	DRIVE CHAIN SPROCKET	1
06-16		B3811-A00-0000	PLATE FIXING	1
06-17		I2201-06010-0H	BOLT, HEX.	2
06-18		B4241-B07-0000	SHAFT GEAR SHIFT	1
06-19		B4231-B07-0000	FORK	1
06-20		C2300-B07-0000	MOTOR COMP SHIFT	1
06-21		I6001-06020-0H	FLANGE BOLT, HEX.	2
06-22		B4300-B07-0000	DRUM COMP GEAR SHIFT	1
06-23		A1220-B00-0000	BREATHER COMP	1
06-23-1	N	A1206-B00-0000	BREATHER JOINT	1
06-23-2	N	A1221-B00-0000	HOSE, BREATHER	1
06-23-3		I5002-06008	TUBE CLIP	1
06-24		B4307-V30-0000	BALL BEARING	1
06-25		B4306-V30-0000	SPRING FIXING	1
06-26		I4104-14210	WASHER	1
06-27		B4305-B07-0000	SCREW FIXING	1
06-28		B1395-B07-0000	GASKET MISSION COVER	1
06-29		B4303-B07-0000	SPRING GEAR SHAFT RETURN	1
06-30		I4540-1001G	CIRCLIP	1
06-31		B4600-B07-0000	DRIVEN ARM	1
06-32		B4463-B07-0000	SHAFT GEAR B	1
06-33		B4460-B07-0000	GEAR B COMP	1
06-34		I4540-0701G	CIRCLIP	1
06-35		B4500-B07-0000	CONNECT PLATE	1


06-36		I4101-05210	WASHER	2
06-37		I4540-0401A	CIRCLIP	2
06-38		B4450-B07-0000	GEAR A COMP	1
06-39		I4301-10140	KNOCK PIN	2
06-40		A1203-B00-0000	RUBBER BUSH RR CUSHION	1
06-41		C2963-A09-0000	CLAMPER PULSER CORD	1
06-42		I3500-06030-0A	SCREW PAN	8
06-43		I3500-06040-0A	SCREW PAN	1
06-44		I4301-08140	KNOCK PIN	2
06-45		B1396-B07-0000	GASKET MISSION SIDE COVER	1
06-46		B132A-B07-0000	SIDE COVER MISSION	1
06-46-1		B1320-B07-0900	SIDE COVER MISSION	1
06-46-2		C5750-B07-0000	SENSOR, SHIFT	4
06-46-3		C5760-B07-0000	SHIFT SWITCH LINE	1
06-46-4		B1321-B07-0000	DUST COVER A	1
06-46-5		B1322-B07-0000	DUST COVER B	1
06-47		I3500-06035-0A	SCREW PAN	1
06-48		I3500-06065-0A	SCREW PAN	1

 7.KICK SHAFT ASSY., STARTER CLUTCH ASSY.

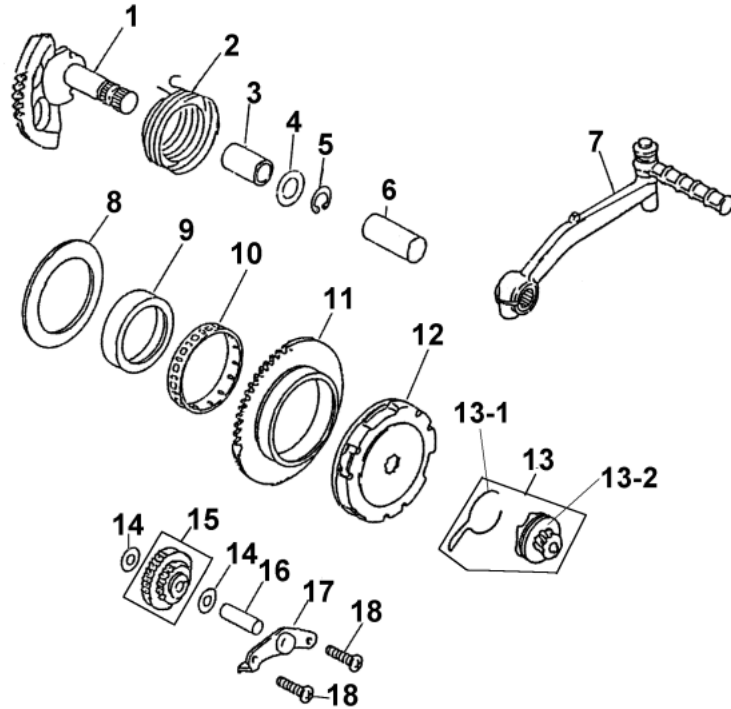

ITEM	AVAIL	PART NO.	NAME	QTY
07			KICK SHAFT ASSY., STARTER CLUTCH ASSY.	
07-1		B8250-B00-9000	SPINDLE COMP KICK START	1
07-2		B8281-B00-0000	SPRING KICK RETURN	1
07-3		B8254-B00-0000	BOSS KICK SPINDLE	1
07-4		I4104-15010	WASHER	1
07-5		I4510-15000	CIRCLIP EX	1
07-6		A1000-5EA0-0000	RUBBER CAP KICK SHAFT	1
07-7		B8300-B00-9001	ARM COMP KICK STARTER	1
07-8		I4104-55506	WASHER	1
07-9		B8115-B00-0000	BOSS GEAR	1
07-10		I1100-555913	BRARING, NEEDLE	1
07-11		B8110-B00-0000	GEAR COMP STARTING CLUTCH	1
07-12		B8120-B00-0000	OUTER COMP ST CLUTCH	1
07-13		B823A-B00-0000	GEAR ASSY STARTER IDLE	1
07-13-1		B8223-B00-0000	SPG KICK DRIVEN GEAR	1
07-13-2		B8230-B00-0000	GEAR COMP KICK DRIVEN	1
07-14		I4104-08218	WASHER	2
07-15		B8100-B00-0000	GEAR COMP STARTER REDUCTION	1
07-15-1		B8101-B00-0000	GEAR STARTER REDUCTION	1
07-15-2		I1130-081210	BEARING, NEEDLE	1
07-16		B8102-B00-0000	SHAFT START REDUCTION	1
07-17		B8105-B00-0000	PLATE START REDUCTION	1
07-18		I3892-06014-0H	SCREW, PAN	2

 
8.DRIVEN PULLEY (CVT)

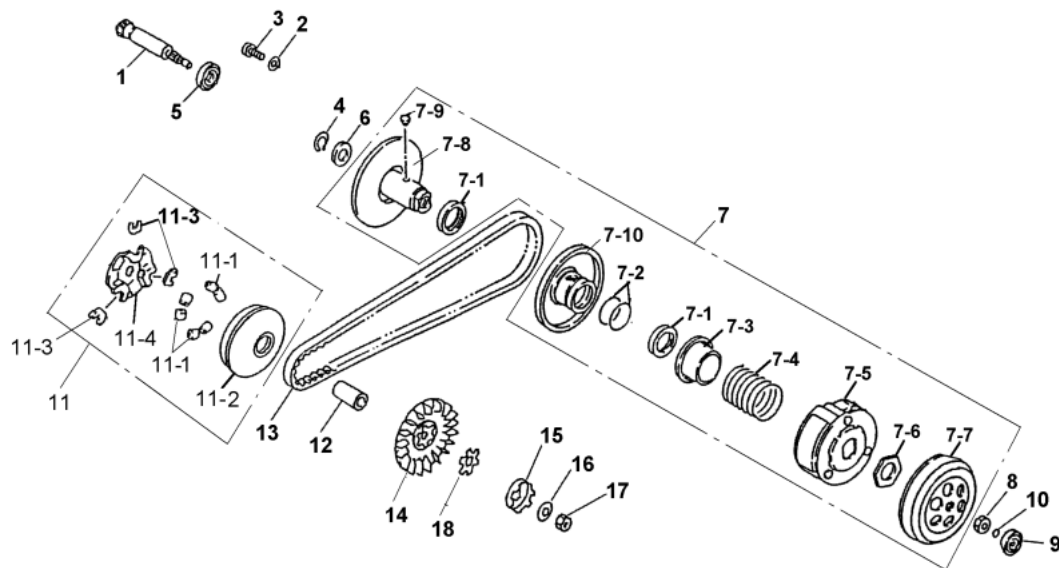

ITEM	AVAIL	PART NO.	NAME	QTY
08			DRIVEN PULLEY (CVT)	
08-1		B3411-B07-0000	SHAFT DRIVE	1
08-2		I4104-06512A	WASHER	1
08-3		I3500-06010-0A	SCREW, PAN	1
08-4		I4510-17000	CIRCLIP EX	1
08-5		I6100-60030	BEARING, BALL, RADIAL	1
08-6		I1203-B00-0000	OIL SEAL	1
08-7		B301A-B00-0000	PLATE SUB ASSY DRIVE	1
08-7-1		I1211-B00-0000	OIL SEAL	2
08-7-1		I1211-B00-0000	OIL SEAL	2
08-7-2		I4608-36719	O-RING	2
08-7-2		I4608-36719	O-RING	2
08-7-3		B3237-B00-0000	COLLAR SEAL	1
08-7-3		B3237-B00-0000	COLLAR SEAL	1
08-7-4		B3233-B02-0000	SPG DRIVEN FACE	1
08-7-4		B3233-B00-0000	SPG DRIVEN FACE	1
08-7-5		B2300-B00-0000	PLATE COMP DRIVE	1
08-7-5		B2300-B00-0000	PLATE COMP DRIVE	1
08-7-6		I4002-281A0	NUT HEX	1
08-7-6		I4002-281A0	NUT HEX	1
08-7-7		B2101-B00-0000	OUTER CLUTCH	1
08-7-7		B2101-B00-0000	OUTER CLUTCH	1
08-7-8		B3210-B00-0000	FACE COMP DRIVEN	1
08-7-8		B3210-B00-0000	FACE COMP DRIVEN	1
08-7-9		B3220-B00-0000	FACE COMP MOVABLE DRIVE	1
08-7-9		B3225-B00-0000	PIN GUIDE	2
08-7-10		B3225-B00-0000	PIN GUIDE	2
08-7-10		B3220-B00-0000	FACE COMP MOVABLE DRIVE	1
08-8		I4050-10080-0H	NUT FLANGE	1
08-9		I6130-60380-10	BEARING, BALL, RADIAL	1
08-10		I4608-64531	O-RING	1
08-11		B211A-B00-0000	FACE ASSY MOVABLE DRIVE	1
08-11-1		B2121-B00-0000	ROLLER COMP WEIGHT	6
08-11-2		B2110-B00-0000	FACE COMP MOVABLE DRIVE	1
08-11-3		B2132-B00-0000	PIECE SLIDE	3
08-11-4		B2131-B00-0000	PLATE RAMP	1
08-12		B2105-B00-0000	BOSS DRIVE FACE	1
08-13		B3100-B00-0000	BELT DRIVE	1
08-14		B2102-B00-0000	FACE DRIVE	1


08-15		B8211-B00-0000	CLUTCH, ONEWAY	1
08-16		I700W-10126	SPOKE NIPPLE WASHER	1
08-17		I4001-100C0	NUT HEX	1
08-18		B2103-B00-0000	WASHER DRIVE FACE	1

 9.ENGINE BRACKET

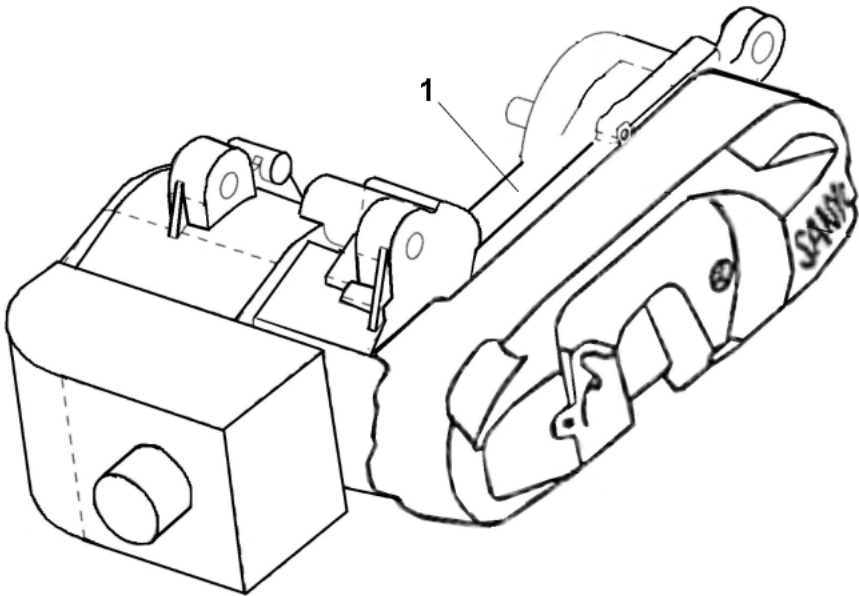

ITEM	AVAIL	PART NO.	NAME	QTY
09			ENGINE ATV	
09-1		AB000-B07-9000	ENG ATV	1

 10. GENERATOR / START MOTOR

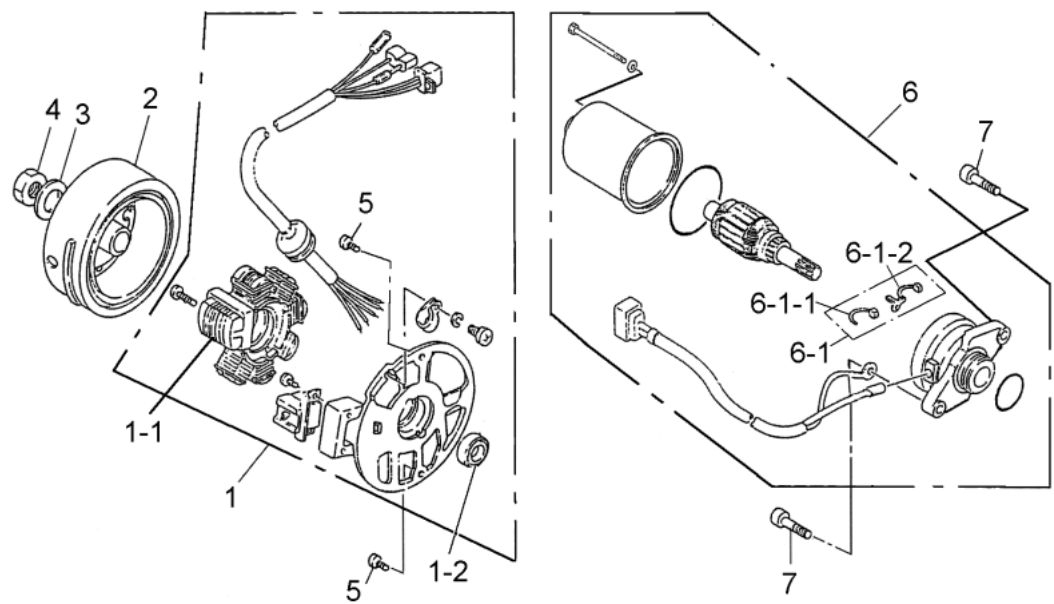

ITEM	AVAIL	PART NO.	NAME	QTY
10			GENERATOR, START MOTOR	
10-1		C1120-B07-0000	STARTER COMP	1
10-1-1	N	C1121-B07-0000	STARTER	1
10-1-2	N	I1205-B00-0000	OIL SEAL	1
10-2		C1110-B00-0000	FLYWHEEL COMP.	1
10-3		I4104-12522	WASHER	1
10-4		I4050-12110-0H	FLANGE NUT, HEX.	1
10-5		I3500-06016-0A	SCREW, PAN	2
10-6		C1200-B00-0000	MOTOR START COMP	1
10-6-1		C1220-B00-0000	CARBON BRUSH COMP	1
10-6-1-1	N	C1221-B00-0000	POSITIVE CARBON BRUSH	1
10-6-1-2	N	C1222-B00-0000	NEGATIVE CARBON BRUSH	1
10-7		I6001-06020-0H	FLANGE BOLT, HEX.	2


No picture.

ITEM	AVAIL	PART NO.	NAME	QTY
11			PREARRANGE	

No picture.


ITEM	AVAIL	PART NO.	NAME	QTY
12			PREARRANGE	

 13.MUFFLER

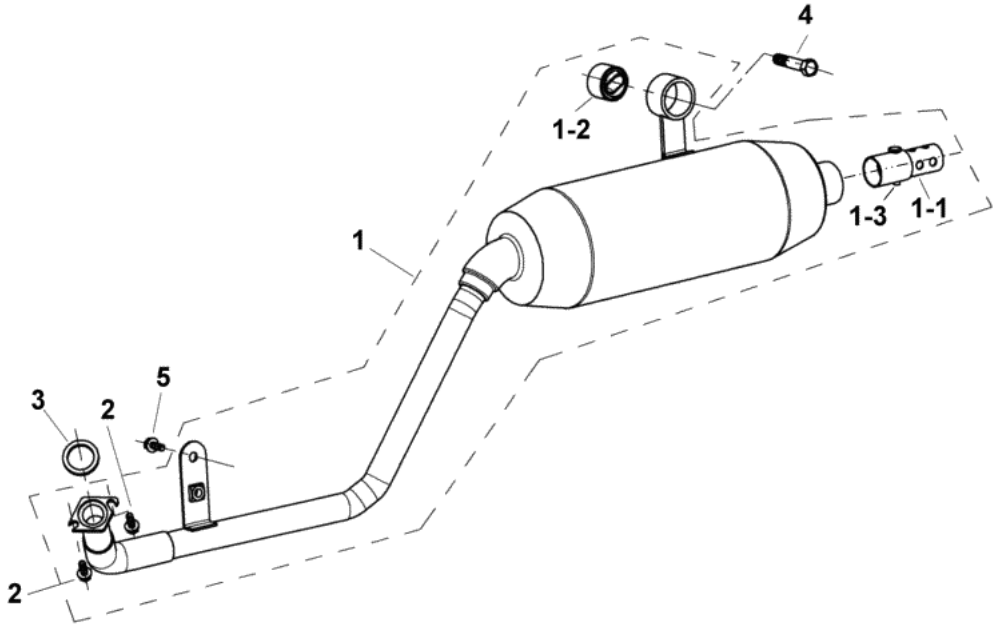


ITEM	AVAIL	PART NO.	NAME	QTY
13			MUFFLER	
13-1		A830A-9EF9-0000	MUFFLER PIPE ASSY.	1
13-1-2		A8304-5EE0-0000	BUFFER RUBBER	1
13-2		I0149-06810	BOLT ,FLANGE	2
13-3		A8291-5AA0-0000	GASKET (34×25.4×4)	1
13-4		I0102-10048	FLANGE BOLT, HEX.	1
13-5		I0149-08016	FLANGE BOLT, HEX.	1

 14. FRAME

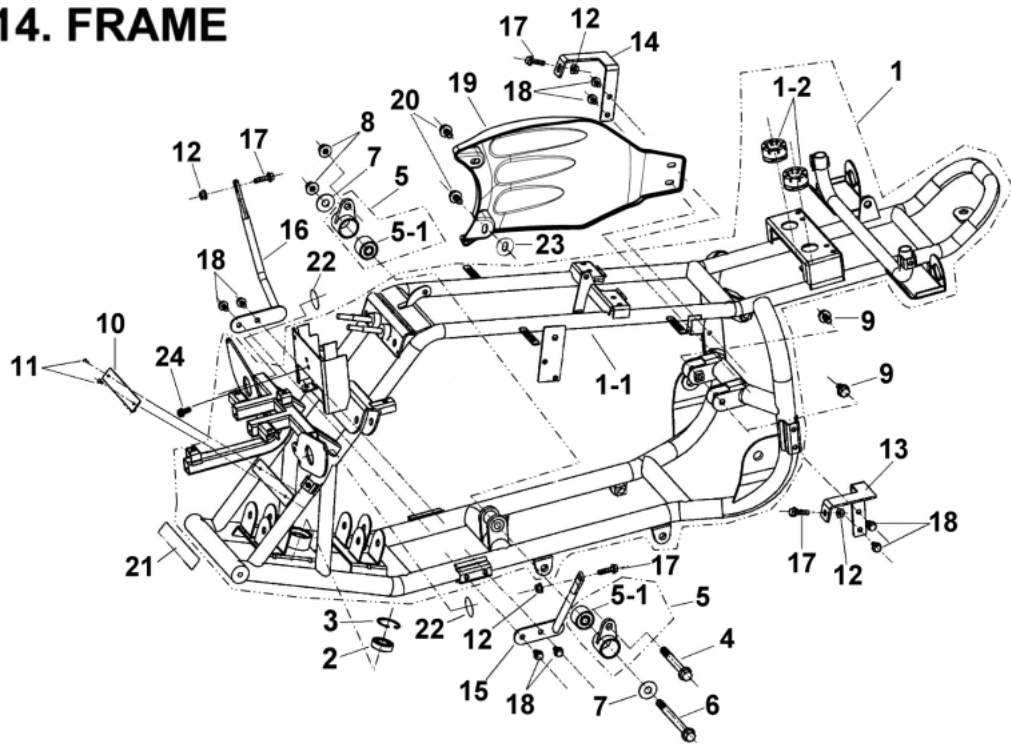


ITEM	AVAIL	PART NO.	NAME	QTY
14			FRAME	
14-1		E010A-5EE0-9000	FRAME ASSY	1
14-1-1	N	E0100-5EE0-9000	FRAME	1
14-1-2		G7212-5EA0-0000	RUBBER DAMPER	2
14-2		I6100-6002ZZ	BEARING (6002ZZ)	1
14-3		I4510-32000	C CLIP EX 32	1
14-4		E0352-5EA0-0000	ENGINE SET BOLT(M10×85)	1
14-5		E0350-5EA0-0000	ENGINE SUSPENSION ASSY.	2
14-5-1		E0201-5EA0-0000	BUSH	2
14-6		E0351-5EA0-0000	FLANGE BOLT, HEX.	1
14-7		I9905-10100	WASHER	2
14-8		I5612-10200	HEX. FLANGE NUT, SAFETY	2
14-9		I0149-08036-01	BOLT,FLANGE	2
14-10	N	E0101-5EA0-0000	FRAME NUMBER PLATE	1
14-11		H750A-5BA1-0000	NAIL, PULL	2
14-12		I5611-06200-0G	HEX. FLANGE NUT, SAFETY	4
14-13		E0105-5EE0-0000	LEFT, FIXED PLATE, REAR FENDER	1
14-14		E0106-5EE0-0000	RIGHT, FIXED PLATE, REAR FENDER	1
14-15		E0107-5EE0-0000	LEFT, FIXED PLATE, FRONT FENDER	1
14-16		E0108-5EE0-0000	RIGHT, FIXED PLATE, FRONT FENDER	1
14-17		I0149-06823-01	BOLT, FLANGE(M6×23)	4
14-18		I0149-06012	FLANGE BOLT, HEX.	8
14-19		D0103-9EF0-0000	FRONT PROTECT COVER	1
14-20		I0149-08016	FLANGE BOLT, HEX.	2
14-21		F4309-5EA0-0000	STICKER, MFD.	1
14-23		A830D-9EF0-0000	WASHER, HEAT INSULATION	1
14-24		I0153-06012	SCREW	1

 15.SWING ARM,FOOTREST,FENDER BAR

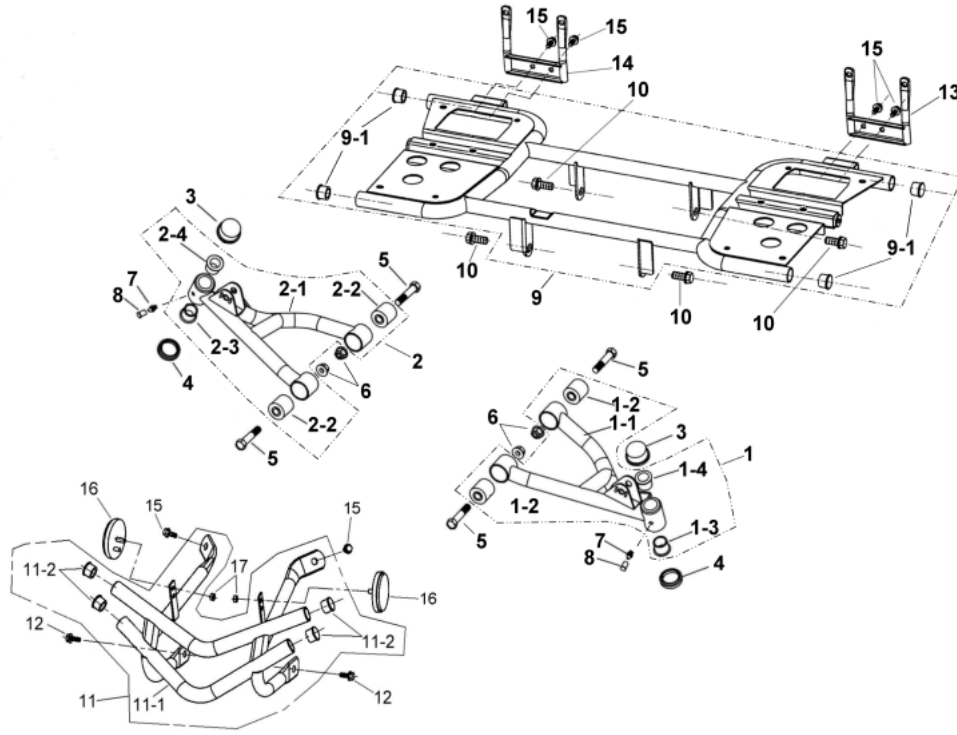

ITEM	AVAIL	PART NO.	NAME	QTY
15			SWING ARM,FOOTREST, FEND BAR	
15-1		E020A-5EE0-0700	ARM, SUSPENSION, L.H. ASSY	1
15-1-1		E0200-5EE0-0700	ARM, SUSPENSION, L.H.	1
15-1-2		E0201-5EA0-0000	BUSH	2
15-1-3		E0206-5EA0-0000	OIL LINER(17)	1
15-1-4		E0207-5EA0-0000	OIL LINER(15.5)	1
15-2		E021A-5EE0-0700	ARM, SUSPENSION, R.H. ASSY	1
15-2-1		E0210-5EE0-0700	ARM, SUSPENSION, R.H.	1
15-2-2		E0201-5EA0-0000	BUSH	2
15-2-3		E0206-5EA0-0000	OIL LINER(17)	1
15-2-4		E0207-5EA0-0000	OIL LINER(15.5)	1
15-3		E0202-5EA0-0000	WATERPROOF SEAL	2
15-4		E0203-5EA0-0000	DUST SEAT	2
15-5		I0102-10048	FLANGE BOLT, HEX.	4
15-6		I5611-10200	HEX. FLANGE NUT, SAFETY	4
15-7		I6600-06000	GREASE VALVE	2
15-8		E0209-5EA0-9000	CAP, GREASE VALVE	2
15-9		E0700-5EE0-9000	FOOTREST BAR ASSY	1
15-9-1		E0707-5EE0-0000	RUBBER PLUG	4
15-10		I0149-10022	SCREW,FLANGE	4
15-11		E040A-5EE0-0700	FEND BAR ASSY FRONT ASSY	1
15-11-1		E0400-5EE0-0700	FEND BAR ASSY FRONT	1
15-11-2		E0707-5EE0-0000	RUBBER PLUG	4
15-12		I0149-08016	FLANGE BOLT, HEX.	2
15-13		E0703-5EE0-0000	FOOTREST REAR BAR (L)	1
15-14		E0705-5EE0-0000	FOOTREST REAR BAR (R)	1
15-15		I0149-06012	FLANGE BOLT, HEX.	6

 
16.FENDER

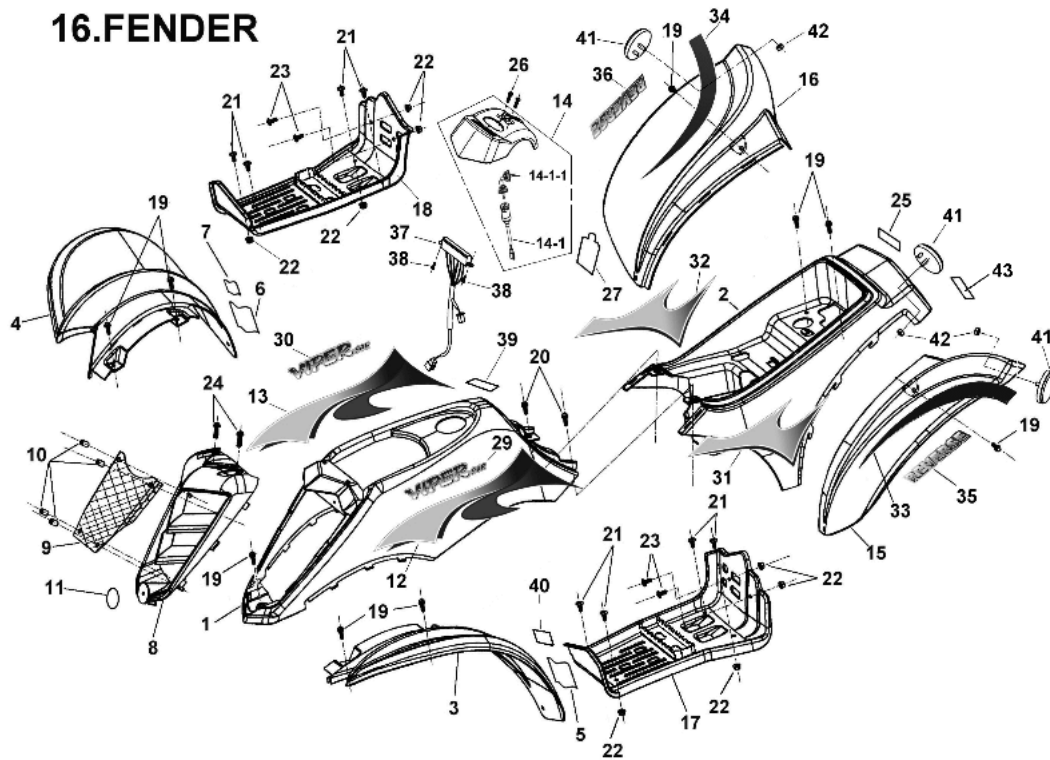

ITEM	AVAIL	PART NO.	NAME	QTY
16			FENDER	
16-1		F4300-5EE0-5400	FRONT BODY COVER(BLUE)	1
16-1		F4300-5EE0-4200	FRONT BODY COVER(RED)	1
16-1		F4300-5EE0-0800	FRONT BODY COVER(BLACK)	1
16-1		F4300-5EE0-1100	FRONT BODY COVER (YELLOW)	1
16-2		H3500-5EE0-1100	REAR BODY COVER (YELLOW)	1
16-2		H3500-5EE0-4200	REAR BODY COVER (RED)	1
16-2		H3500-5EE0-0800	REAR BODY COVER (BLACK)	1
16-2		H3500-5EE0-5400	REAR BODY COVER (BLUE)	1
16-3		F3520-5EE0-5400	FRONT FENDER (L) (BLUE)	1
16-3		F3520-5EE0-0800	FRONT FENDER (L) (BLACK)	1
16-3		F3520-5EE0-1100	FRONT FENDER (L) (YELLOW)	1
16-3		F3520-5EE0-4200	FRONT FENDER (L) (RED)	1
16-4		F3620-5EE0-0800	FRONT FENDER (R) (BLACK)	1
16-4		F3620-5EE0-4200	FRONT FENDER (R) (RED)	1
16-4		F3620-5EE0-1100	FRONT FENDER (R) (YELLOW)	1
16-4		F3620-5EE0-5400	FRONT FENDER (R) (BLUE)	1
16-5		H7101-9FA0-9000	STICKER,WARNING PASSENGER	1
16-6		H7102-9FA0-9000	STICKER,WARNING (Y12)	1
16-7		H7102-5EA1-9000	STICKER,CE	1
16-8		F4301-5EE0-4200	FRONT CENTER COVER(RED)	1
16-8		F4301-5EE0-1100	FRONT CENTER COVER(YELLOW)	1
16-8		F4301-5EE0-5400	FRONT CENTER COVER(BLUE)	1
16-9		E0415-5EE0-0000	FILTER NET	1
16-10		E0417-5EE0-0000	FILTER NET PLUG	4
16-11		H7107-5EB0-0000	EMBLEM, E-TON LOGO(SILVER)	1
16-12		H7124-5EE0-1100	FRONT BODY STICKER (YELLOW)(L)	1
16-12		H7124-5EE0-4200	FRONT BODY STICKER (RED) (L)	1
16-13		H7125-5EE0-1100	FRONT BODY STICKER (YELLOW) (R)	1
16-13		H7125-5EE0-4200	FRONT BODY STICKER (RED)(R)	1
16-14		E3205-9EF0-5401	COVER,HANDLE BAR(BLUE)	1
16-14		E3205-9EF0-1101	COVER,HANDLE BAR(YELLOW)	1
16-14		E3205-9EF0-4201	COVER,HANDLE BAR(RED)	1
16-14		E3205-9EF0-0801	COVER,HANDLE BAR(BLACK)	1
16-14-1		C5010-9FA0-0001	MAIN SWITCH COMP	1
16-14-1		C5010-9FA0-0000	MAIN SWITCH	1
16-14-1-1		C5013-9FA0-0000	MATERIAL KEY (RIGHT CUT)	1


16-14-1-1		C5013-9FA0-0000	MATERIAL KEY (RIGHT CUT)	1
16-14-1-1		C5013-9FA0-0000	MATERIAL KEY (RIGHT CUT)	1
16-14-1-2		C5018-9FA0-0000	MATERIAL KEY (LEFT CUT)	1
16-14-1-2		C5018-9FA0-0000	MATERIAL KEY (LEFT CUT)	1
16-14-1-2		C5018-9FA0-0000	MATERIAL KEY (LEFT CUT)	1
16-15		H3720-5EE0-1100	REAR FENDER (L)(YELLOW)	1
16-15		H3720-5EE0-4200	REAR FENDER (L)(RED)	1
16-15		H3720-5EE0-0800	REAR FENDER (L)(BLACK)	1
16-15		H3720-5EE0-5400	REAR FENDER (L)(BLUE)	1
16-16		H3820-5EE0-1100	REAR FENDER (R)(YELLOW)	1
16-16		H3820-5EE0-4200	REAR FENDER (R)(RED)	1
16-16		H3820-5EE0-5400	REAR FENDER (R)(BLUE)	1
16-16		H3820-5EE0-0800	REAR FENDER (R)(BLACK)	1
16-17		H3520-5EE0-0000	FOOTREST,(L)	1
16-18		H3620-5EE0-0000	FOOTREST,(R)	1
16-19		I0119-06802	BOLT, HEX.	9
16-20		I0119-06821	BOLT, HEX.	2
16-21		I8310-06020-01	SCREW, OVAL	8
16-22		I5611-06200-0G	HEX. FLANGE NUT, SAFETY	8
16-23		E0117-9EA0-0000	SCREW, TRUSS	4
16-24		I8310-FIA0-0000	PLASTIC SCREW	2
16-25		H7106-5ED0-0000	WARNING STICKER,MUFFLER	1
16-26		I3500-06012-1A	SCREW PAN	2
16-27		H7101-5EA1-0000	STICKER WARNING,CE	1
16-29		H7103-9EF0-0000	STICKER, VIPER-90R (L)	1
16-30		H7104-9EF0-0000	STICKER, VIPER-90R (R)	1
16-31		H7128-5EE0-1100	STICKER,REAR BODY (YELLOW))(L)	1
16-32		H7129-5EE0-1100	STICKER,REAR BODY (YELLOW))(R)	1
16-33		H7126-5EE0-0000	STICKER,REAR FENDER(L)	1
16-34		H7127-5EE0-0000	STICKER,REAR FENDER(R)	1
16-35		H7131-9EF0-0000	STICKER,REVERSE (L)	1
16-36		H7132-9EF0-0000	STICKER,REVERSE (R)	1
16-37		C7202-9EF0-0000	FUEL METER ASSY.	1
16-38		I7707-04016	TAPPING SCREW, TRUSS	2
16-39		H7129-9EF0-0000	STICKER,INDICATE GEAR	1

 17. SEAT

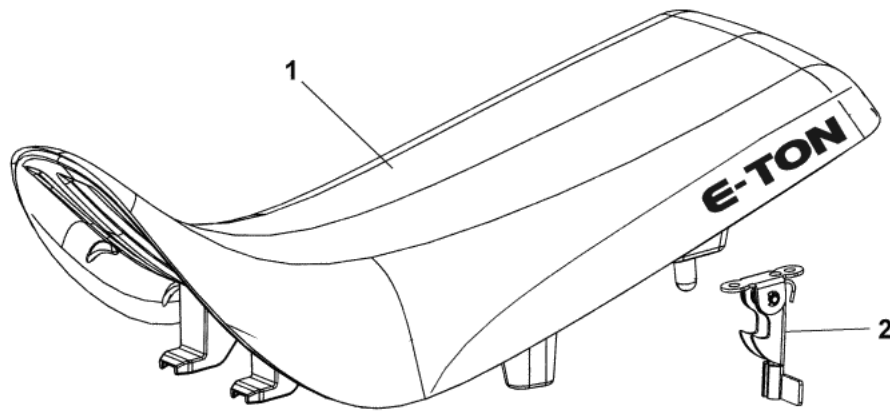


ITEM	AVAIL	PART NO.	NAME	QTY
17			SEAT	
17-1		G7200-5EE0-1100	SEAT ASSY.(BLACK/YELLOW)	1
17-1		G7200-5EE0-4200	SEAT ASSY.(BLACK/RED)	1
17-2		G7201-9ED0-0000	SEAT FIXER,ASSY	1

 18. OIL TANK, FUEL TANK

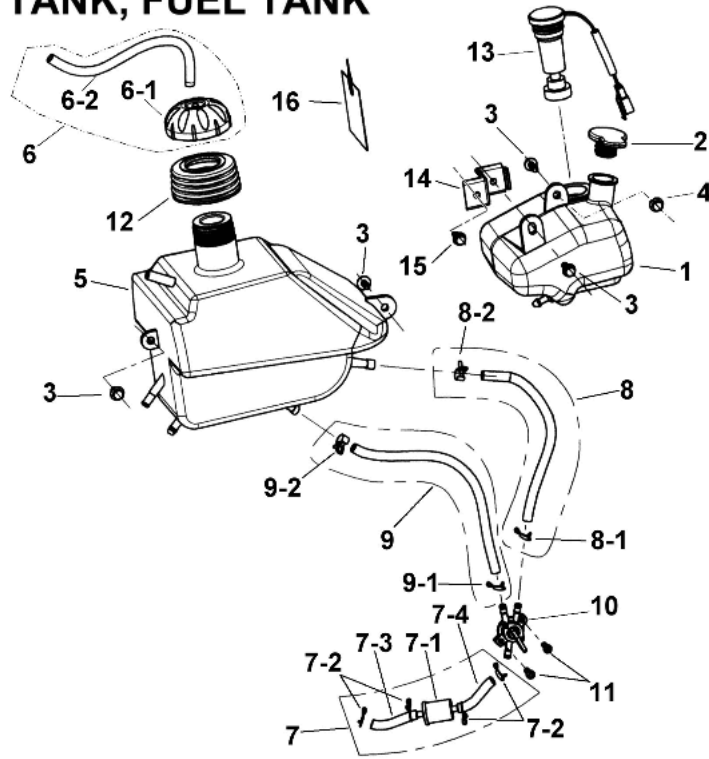


ITEM	AVAIL	PART NO.	NAME	QTY
18			FUEL TANK , OIL TANK	
18-1		E5100-9EF0-0000	OIL TANK	1
18-2		E5105-5EA0-0000	OIL TANK CAP	1
18-3		I0119-06821	BOLT, HEX.	4
18-4		I2020-60000	NUT, HEX.	1
18-5		A7500-5EE0-0000	FUEL TANK ASSY.	1
18-6		A762A-5EA0-0000	FUEL TANK CAP ASSY	1
18-6-1		A7620-5EA0-0000	FUEL TANK CAP	1
18-6-2		A7621-9FA0-0000	TUBE, RUBBER	1
18-7		A7510-5EA0-1000	FUEL FILTER ASSY.	1
18-7-1		A7519-FIA0-1000	FUEL FILTER	1
18-7-2		A7516-5EA0-0000	CLIP(A)	4
18-7-3		A7514-5EA0-0000	FUEL TUBE (A)	1
18-7-4		A7515-5EA0-0000	FUEL TUBE (B)	1
18-8		A7501-5EE0-0000	FUEL TUBE	1
18-8-1		A7516-5EA0-0000	CLIP(A)	1
18-8-2		A7517-5EA0-0000	CLIP(B)	1
18-9		A7502-5EE0-0000	SPARE TUBE	1
18-9-1		A7516-5EA0-0000	CLIP(A)	1
18-9-2		A7517-5EA0-0000	CLIP(B)	1
18-10		A7520-5EA0-0000	MANUAL FUEL CUP	1
18-11		I8506-05016	SCREW PAN	2
18-12		A7622-5EB0-0000	RUBBER PAD, FUEL TANK CAP	1
18-13		C5410-5EE0-0000	OIL TANK BUOY.	1
18-14		A1251-9EF0-0000	BRACKET,OIL TANK	1
18-15		I8556-06016	SCREW WASHER	1
18-16		H7503-5EG0-0000	PREMIX FUEL NOTICE TAG	1

 19. SUSPENSION

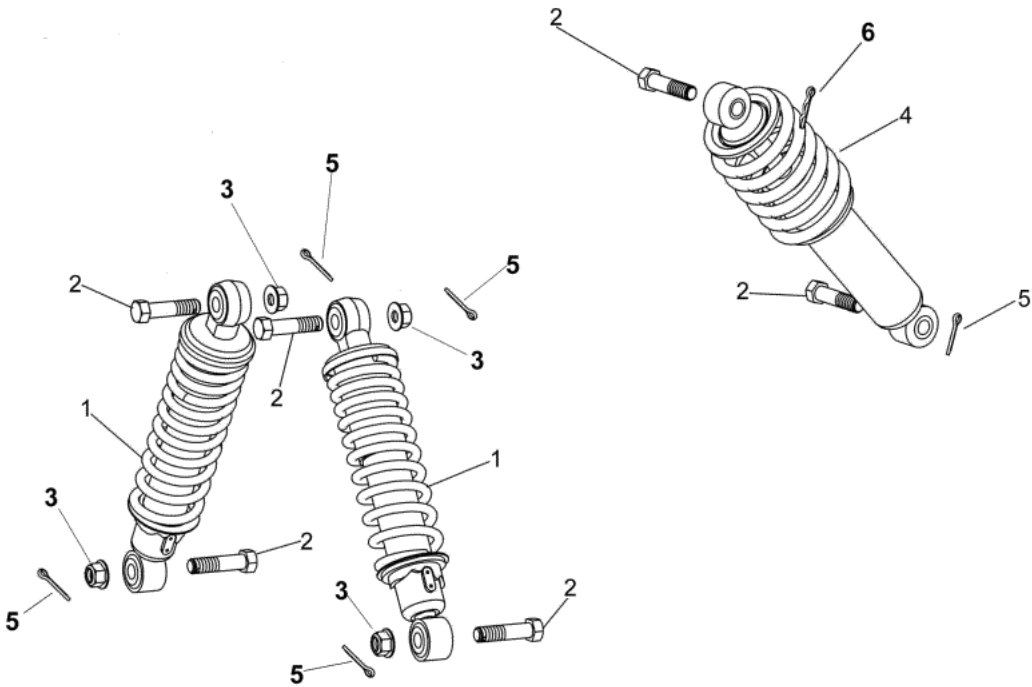


ITEM	AVAIL	PART NO.	NAME	QTY
19			SUSPENSION	
19-1		E1105-5EE0-9700	SUSPENSION, FRONT (SILVER)	2
19-2		I0102-10040	BOLT, HEX	6
19-3		I5701-10500	FLANGE NUT, HEX.	4
19-4		E2400-5EE0-0000	SUSPENSION, REAR	1
19-5		I9900-25019	PIN, SPLIT	5
19-6		I0468-12006	PIN	1

 20. FRONT WHEEL

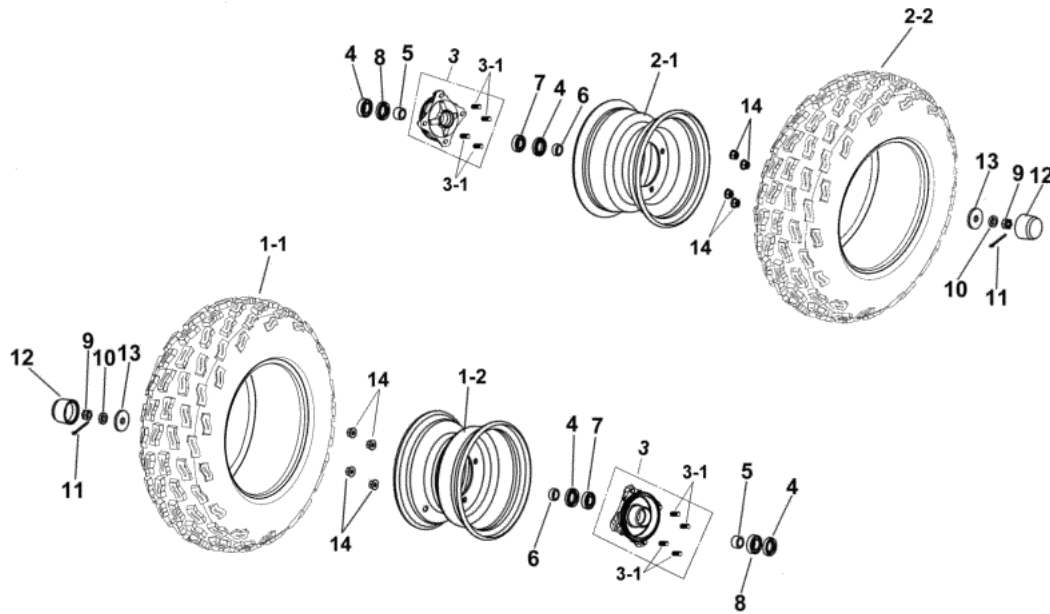


ITEM	AVAIL	PART NO.	NAME	QTY
20			FRONT WHEEL	
20-1		D471A-9EE0-0S00	FRONT WHEEL ASSY.,LEFT(18×7-8)	1
20-1-1		D4710-9EE0-0000	TIRE, FRONT	1
20-1-2		D4601-5EB0-0S00	WHEEL RIM	1
20-2		D471B-9EE0-0S00	FRONT WHEEL ASSY.,RIGHT(18×7-8)	1
20-2-1		D4601-5EB0-0S00	WHEEL RIM	1
20-2-2		D4710-9EE0-0000	TIRE, FRONT	1
20-3		D4610-9EA0-0000	BRAKE DRUM, FRONT	2
20-3-1		D4612-9EA0-0000	BOLT, STUD	8
20-4		I3102-5AC0-0000	OIL SEAL	4
20-5		D4620-5EA0-0000	COLLAR	2
20-6		D4621-5EA0-0000	OUTER SPACER	2
20-7		I6100-6002LLU	BEARING(6002LLU)	2
20-8		I6150-60030-10	BEARING, BALL, RADIAL	2
20-9		I5500-12000	CASTLE NUT	2
20-10		I3000-13000-0C	WASHER	2
20-11		I4201-46325	SPLIT PIN	2
20-12		D4609-5EA0-0001	RUBBER CAP	2
20-13		D4608-5EA0-0000	FRONT WHEEL SHAFT WASHER	2
20-14		D4611-9EA0-0000	FLANGE NUT, HEX.	8

 21. REAR WHEEL

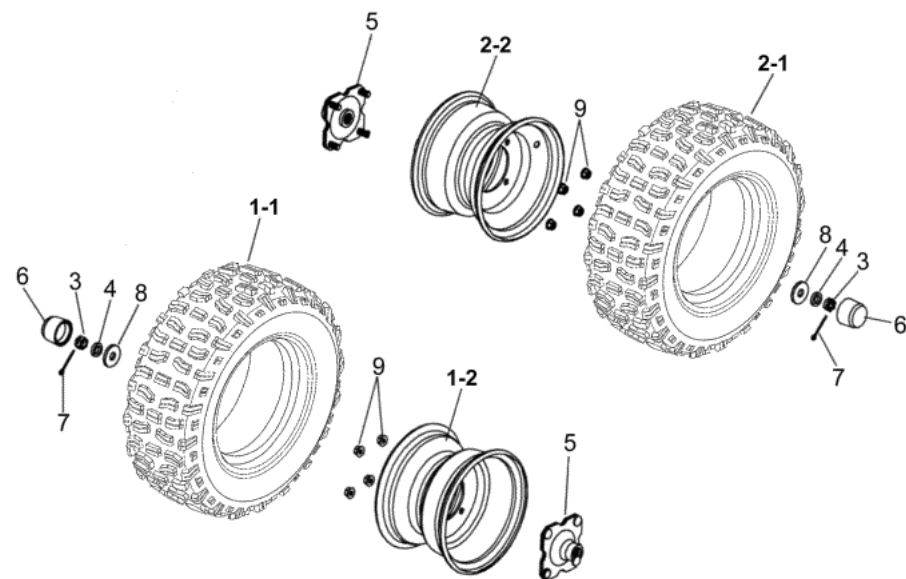


ITEM	AVAIL	PART NO.	NAME	QTY
21			REAR WHEEL	
21-1		D472C-9EE0-0S00	REAR WHELL ASSY	1
21-1-1		D471C-9EE0-0S00	REAR WHEEL COMP	1
21-1-1-1		D4720-9EE0-0000	TIRE, REAR	1
21-1-1-2		D4601-5FA0-0S00	WHEEL RIM	1
21-1-2		D2705-9EA0-1000	SHAFT CONNECTER WITH BOLTS	1
21-1-3		D4611-9EA0-0000	FLANGE NUT, HEX.	4
21-2		D472C-9EE0-0S00	REAR WHELL ASSY	1
21-2-1		D471C-9EE0-0S00	REAR WHEEL COMP	1
21-2-1-1		D4720-9EE0-0000	TIRE, REAR	1
21-2-1-2		D4601-5FA0-0S00	WHEEL RIM	1
21-2-2		D2705-9EA0-1000	SHAFT CONNECTER WITH BOLTS	1
21-2-3		D4611-9EA0-0000	FLANGE NUT, HEX.	4
21-3		D2309-5EA0-0000	WASHER	2
21-4		I9905-14100	WASHER(15×22×2.3t)	2
21-5		I5500-14000	CASTLE NUT(M14)	2
21-6		I4201-46325	SPLIT PIN	2
21-7		D4609-5EA0-0001	RUBBER CAP	2

 22. FRONT BRAKE

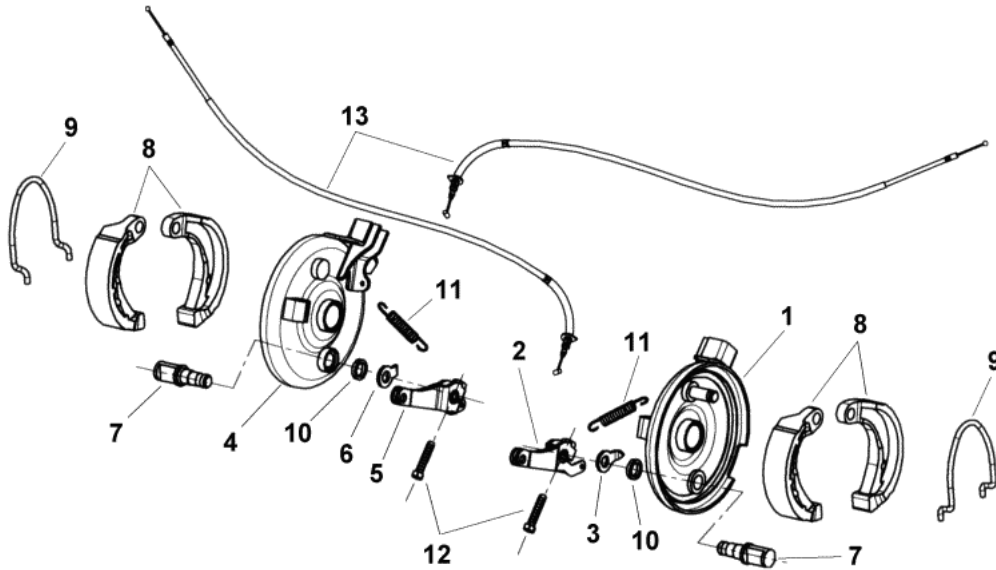


ITEM	AVAIL	PART NO.	NAME	QTY
22			FRONT BRAKE	
22-1		D5351-5EA0-0000	FRONT BRAKE DISC, LEFT	1
22-2		D5410-5EA0-0000	FRONT BRAKE ARM, LEFT	1
22-3		D5145-5EA0-0000	BRAKE INDICATOR	1
22-4		D5352-5EA0-0000	FRONT BRAKE DISC, RIGHT	1
22-5		D5411-5EA0-0000	FRONT BRAKE ARM, RIGHT	1
22-6		D5146-5EA0-0000	FRONT BRAKE INDICATOR,RIGHT	1
22-7		D5141-5EA0-0000	BRAKE ARM CAM	2
22-8		D5120-5EA0-0000	BRAKE SHOE COMP	2
22-9		D5125-5EA0-0000	SPRING	2
22-10		D5149-5EA0-0000	FELT SEAL	2
22-11		D5419-5EA0-0000	FRONT RETURN SPRING	2
22-12		I0020-05024	BOLT HEX.	2
22-13		E5450-5EE0-0000	CABLE, FRONT BRAKE ASSY	2

 23. REAR BRAKE

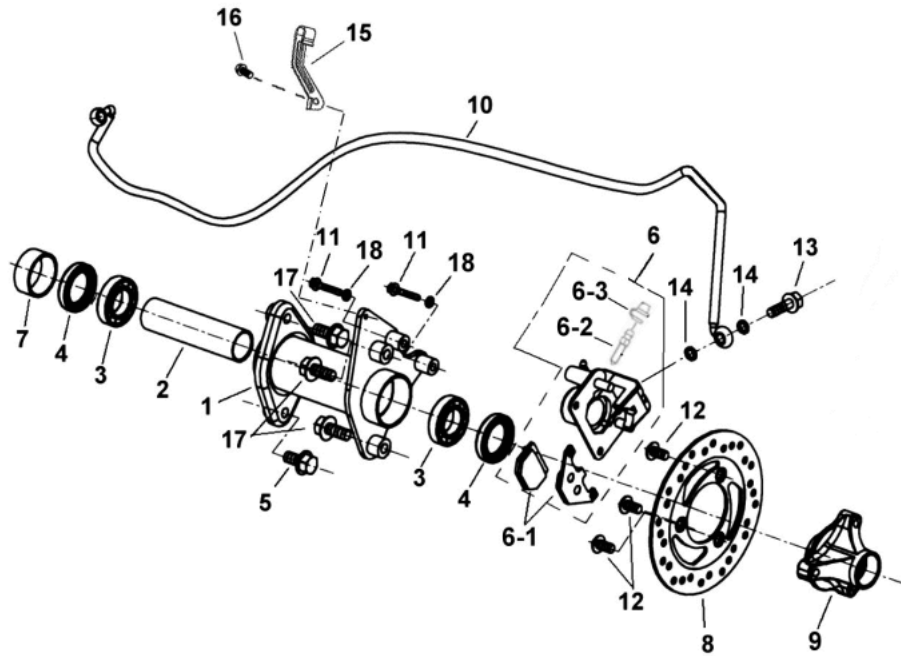


ITEM	AVAIL	PART NO.	NAME	QTY
23			REAR BRAKE	
23-1		D2310-5EE0-0000	REAR WHEEL BEARING SEAT ASSY	1
23-2		D2311-5EA0-0000	SPACER	1
23-3		I6100-6006ZZ	BEARING, BALL RADIAL	2
23-4		D2313-9EA0-0000	OIL SEAL	2
23-5		I0141-12028-01	BOLT FLANGE	1
23-6		G7130-5EE0-0000	BRAKE CALLIPER	1
23-6-1		G7131-5EE0-0000	BRAKE SHOE COMP	1
23-6-2		G7132-5EE0-0000	BOLT LEAKAGE	1
23-6-3		G7133-BCA0-0000	CAP LEAKAGE	1
23-6-4		G7139-5EE0-0000	SPRING,PAO	1
23-6-5		G7134-5EE0-0000	RING,SEAL	1
23-6-6		G7136-5EE0-0000	PISTON, BRAKE CALIPER	1
23-6-7		G7135-5EE0-0000	RING,DUST RESISTANT	1
23-6-8		G71C1-5EE0-0000	BOOT	1
23-6-9		G71C2-5EE0-0000	BOOT	1
23-6-10		G71C3-5EE0-0000	BRACKET, CALLIPER	1
23-7		D0114-9EF0-0000	SPACER	1
23-8		D3520-FIA0-0000	BRAKE DISK	1
23-9		D3251-5EE0-0000	BRAKE DISK MOUNTING SEAT	1
23-10		D3210-5EE0-0000	BRAKE OIL TUBE	1
23-11		I0105-08035	BOLT FLANGE	2
23-12		I0110-10811	BOLT, SOCKET	3
23-13		I0401-10034	FLANGE BOLT, HEX.	1
23-14		I0201-10118	WASHER	2
23-15		G7111-BCA0-0000	BRAKE FUEL TUBE, CLIP	1
23-16		I0149-06012	FLANGE BOLT, HEX.	1
23-17		I0141-12028-01	BOLT FLANGE	3
23-18		I9901-08100	WASHER, SPRING	2

 24. HANDLE BAR

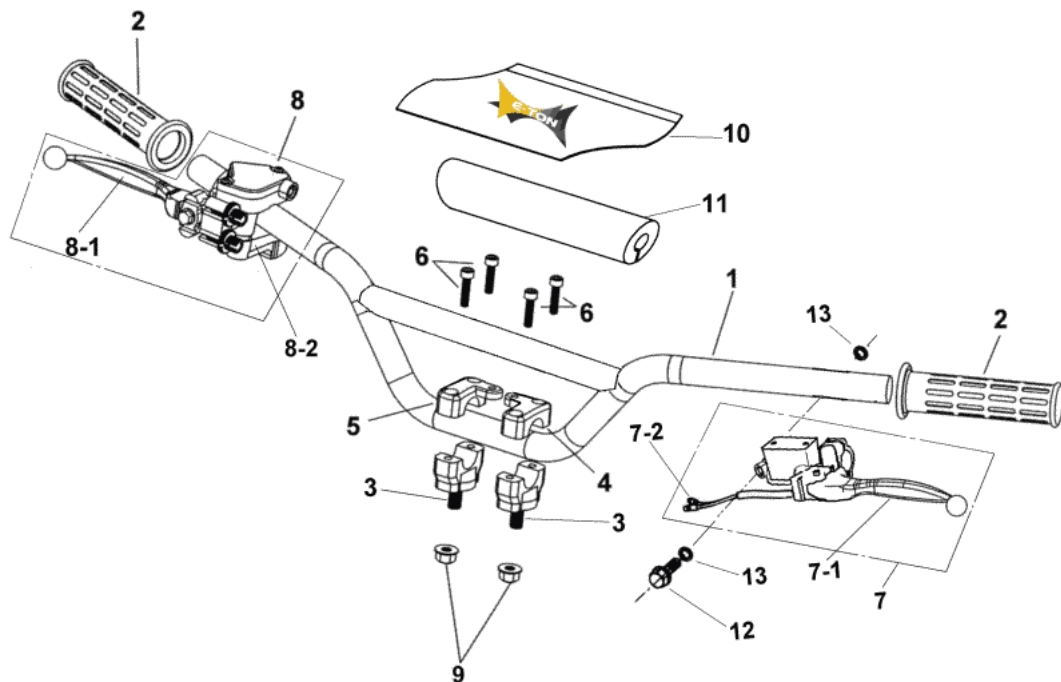


ITEM	AVAIL	PART NO.	NAME	QTY
24			HANDLE BAR	
24-1		E3100-9EF0-0000	HANDLE BAR ASSY.	1
24-2		E3166-5EA0-0000	GRIP	2
24-3		E3112-5EA0-0000	BOTTOM,HANDLE BAR CLAMP	2
24-4		E3110-5EA0-0000	CAP,HANDEL BAR CLAMP(L)	1
24-5		E3111-5EA0-0000	CAP,HANDEL BAR CLAMP(R)	1
24-6		I0050-06025	BOLT, SOCKET	4
24-7		D3200-5EG0-0000	BRAKE MASTER CYLINDER,LEFT	1
24-7-1		D6110-9KB0-0000	BRAKE LEVER, LEFT	1
24-7-2		D3202-FIA0-0000	BRAKE SWITCH ASSY.	1
24-7-3		D3208-5EG0-0000	FIXED SUPPORT COMP	1
24-8		E3180-FIA0-0000	LEVEL ASSY., RIGHT	1
24-8-1		E3181-5FA0-0000	LEVEL SET,RIGHT	1
24-8-2		E319A-5FA0-0000	LEVEL ACCELERATE	1
24-8-3		E3183-FIA0-0000	COVER LEVER	1
24-8-4		E3188-FIA0-0000	GASKET	1
24-8-5		I8506-04016	SCREW,PAN HEAD	2
24-9		I5611-10200	HEX. FLANGE NUT, SAFETY	2
24-10		E3101-5EE0-1000	HANDLE BAR PROTECT (W150×222L)	1
24-11		E3102-5EE0-1000	HANDLE BAR PROTECT FOAM(20×42×220L)	1
24-12		I0401-10034	FLANGE BOLT, HEX.	1
24-13		I0201-10118	WASHER	2

 25.REAR WHEEL AXLE

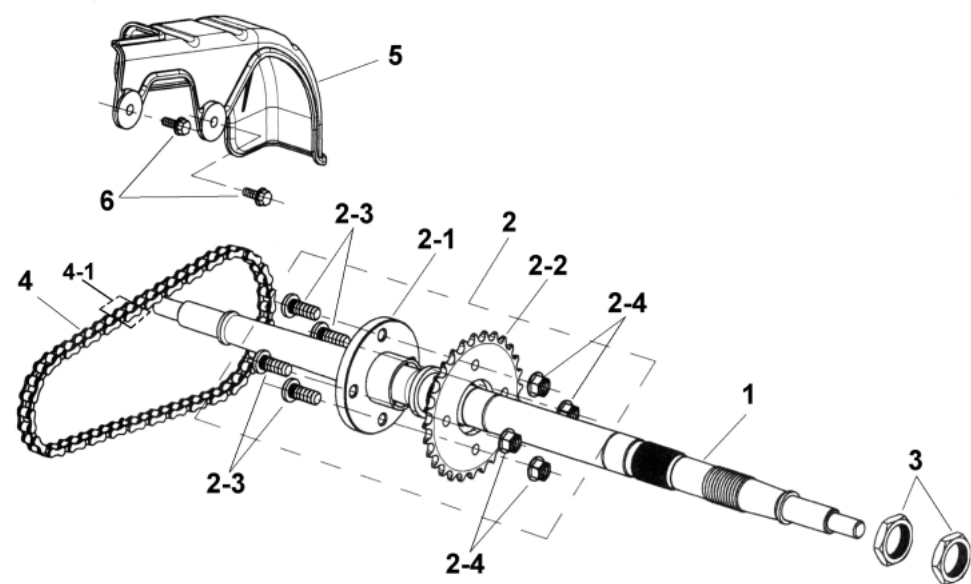


ITEM	AVAIL	PART NO.	NAME	QTY
25			REAR WHEEL AXLE	
25-1		D2301-9EA0-0000	REAR AXLE	1
25-2		D0110-9EF0-0000	DRIVE CHAIN ASSY(28T)	1
25-2-1		D0111-9EF0-0000	SPROCKET HOLDER,REAR	1
25-2-2		D1111-9EA0-0000	GEAR(28T)	1
25-2-3		D2706-9EA0-0000	BOLT	4
25-2-4		I5611-10200	HEX. FLANGE NUT, SAFETY	4
25-3		D2302-9EA0-0000	NUT, HEX.	2
25-4		D0100-9EB0-0000	DRIVE CHAIN(#520)	1
25-4-1		D0104-9EA0-0000	DRIVE CHAIN LINK(#520)	1
25-5		D0510-5EE9-0000	DRIVE CHAIN COVER	1
25-6		I0149-08030	FLANGE BOLT, HEX.	2

 26.SWING ARM SUB 、PROTECT COVER

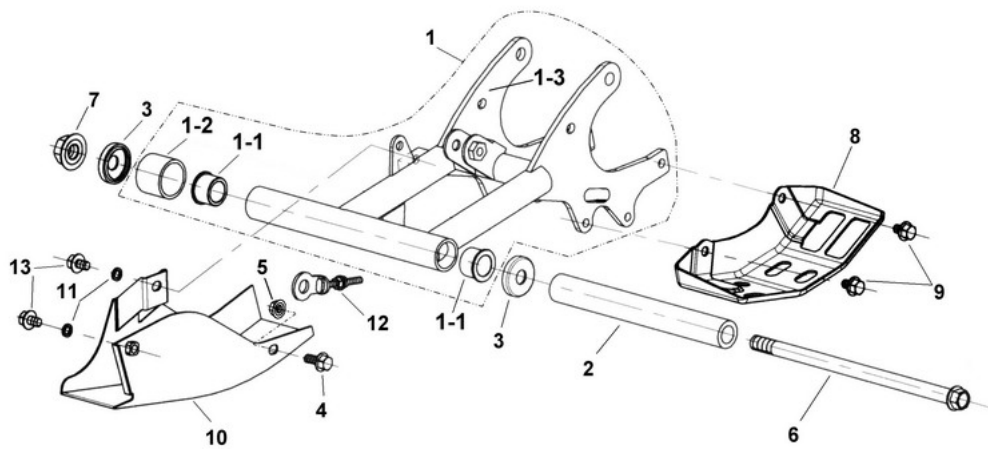


ITEM	AVAIL	PART NO.	NAME	QTY
26			SWING ARM SUB,PROTECT COVER	
26-1		E220A-9EF0-0000	SWING ARM SUB ASSY	1
26-1-1		E2208-5EA0-0000	SWING ARM OIL LINER	2
26-1-2		E2202-5EA0-0000	CHAIN TENSIONER ROLLER	1
26-1-3		E2200-9EF0-0000	SWING ARM	1
26-2		E2209-5EA0-0000	SWING ARM SPACER	1
26-3		E2205-5EA0-0000	OIL SEAL	2
26-4		I0149-08030	FLANGE BOLT, HEX.	1
26-5		I5611-08200	HEX. FLANGE NUT, SAFETY	1
26-6		E2201-5EA0-0000	FLANGE BOLT, HEX.	1
26-7		I5611-14200	HEX. FLANGE NUT, SAFETY	1
26-8		D3617-5EE0-0000	REAR BRAKE PROTECTIVE COVER	1
26-9		I0149-08012	FLANGE BOLT, HEX.	2
26-10		D0101-5EA0-0000	PROTECT COVER	1
26-11		I9901-08100	WASHER, SPRING	2
26-12		D0120-FIA0-0001	CHAIN ADJUSTER COMP.	1
26-13		I0149-08016	FLANGE BOLT, HEX.	2

 27. STEERING

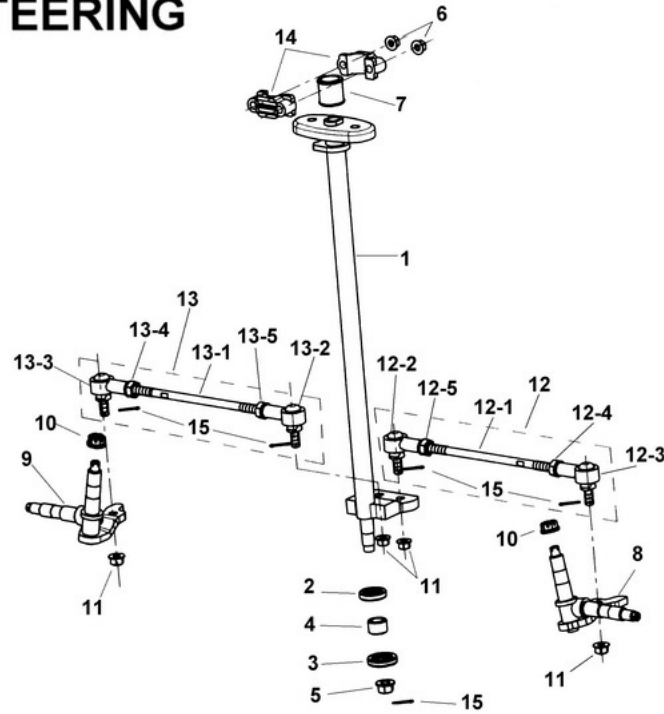

ITEM	AVAIL	PART NO.	NAME	QTY
27			STEERING	
27-1		E3200-5EA0-9000	SHAFT ASSY., STEERING	1
27-2		E3201-5EA0-0000	OIL SEAL	1
27-3		I3102-5AC0-0000	OIL SEAL	1
27-4		D4620-5EA0-0000	COLLAR	1
27-5		I5611-14200	HEX. FLANGE NUT, SAFETY	1
27-6		I5611-08200	HEX. FLANGE NUT, SAFETY	2
27-7		E3225-5EA0-0000	PU LINER	1
27-8		E0205-4HA0-0000	LEFT, KNUCKLE	1
27-9		E0215-4HA0-0000	RIGHT, KNUCKLE	1
27-10		I5550-20000	NUT	2
27-11		I5611-10200	HEX. FLANGE NUT, SAFETY	4
27-12		E0258-5EA0-0000	STEERING TIE-ROD ASSY., LEFT	1
27-12-1		E0251-5EA0-0000	BOLT,STUD	1
27-12-2		E0255-FIA0-0000	UNIVERSAL JOINT(L)	1
27-12-3		E0256-FIA0-0000	UNIVERSAL JOINT(R)	1
27-12-5		E0253-5EA0-0000	NUT (L)	1
27-13		E0259-5EA0-0000	STEERING TIE-ROD ASSY., RIGHT	1
27-13-1		E0251-5EA0-0000	BOLT,STUD	1
27-13-2		E0255-FIA0-0000	UNIVERSAL JOINT(L)	1
27-13-3		E0256-FIA0-0000	UNIVERSAL JOINT(R)	1
27-13-4		E0252-5EA0-0000	NUT (R)	1
27-13-5		E0253-5EA0-0000	NUT (L)	1
27-14		E3202-9FA0-0000	HOLDER, STEERING COLUMN	2
27-15		I9900-25019	PIN, SPLIT	5

 
28.ELECTRICAL EQUIPMENT

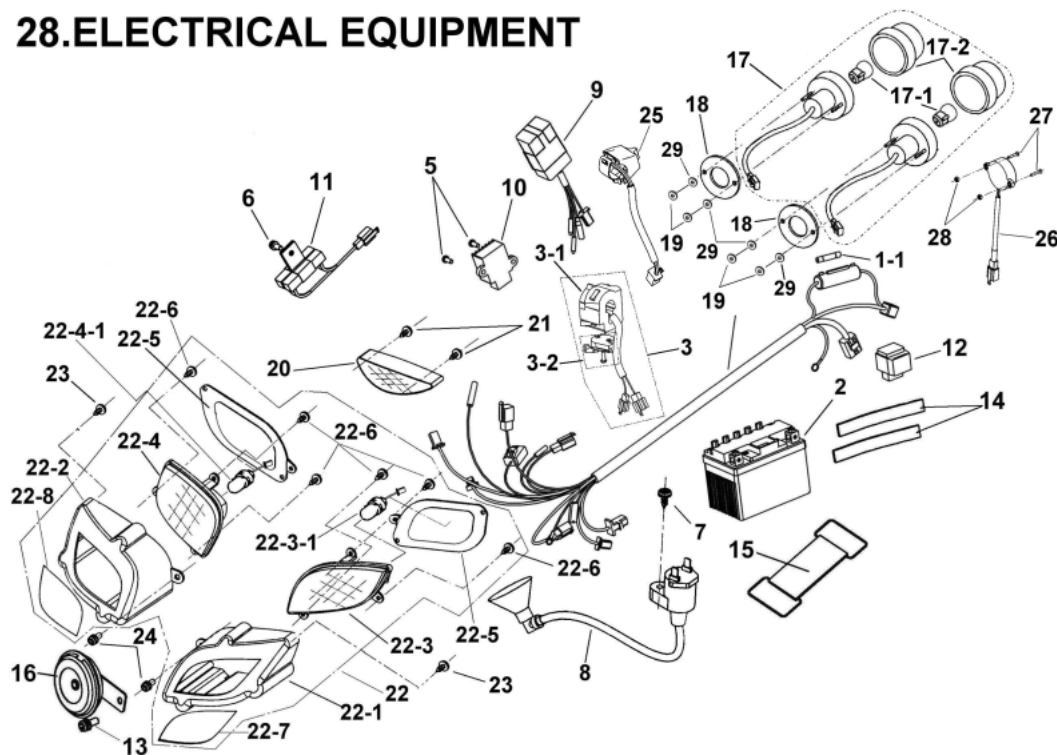

ITEM	AVAIL	PART NO.	NAME	QTY
28			ELECTRICAL EQUIPMENT	
28-1		C2100-9EF0-0000	MAIN WIRE ASSY.	1
28-1-1		C2010-5EA0-0000	FUSE(7A)	1
28-2		C1500-9FA0-0000	BATTERY	1
28-3		C5200-5EG0-0000	LEVER HOLDER ASSY., LEFT	1
28-3-1		C5201-5EG0-0000	LEVER HOLDER , LEFT	1
28-3-2		C5202-5EE0-0000	AIR CUT, LEVER	1
28-5		I8506-05016	SCREW PAN	2
28-6		I8557-06012	SCREW WASHER	1
28-7		I3401-05020-07	BOLT, HEX.	1
28-8		C051A-5EE0-0000	IGNITION COIL ASSY.	1
28-9		C0410-B07-0000	C.D.I. UNIT ASSY.	1
28-10		C1600-B00-0000	RECTIFIER COMP REGULATE	1
28-11		C5400-B00-0000	RESISTOR ASSY	1
28-12		C5850-B00-0000	STARTER RELY ASSY.	1
28-13		I8556-06012	SCREW PAN	1
28-14		C1501-9FA0-0000	FOAM STICK, BATTERY	2
28-15		C1502-9ED0-0000	FIX STRIP(175L)	1
28-16		C8110-5EE0-0000	HORN	1
28-17		C5031-5EE0-0000	TAIL LIGHT	2
28-17-1		C5004-5EE0-0000	BULB (12v 21/5w)	2
28-17-2		C5005-5EE0-0000	REVERSING LIGHT LENS	2
28-18		C5035-5EE0-0000	TAIL LIGHT RUBBER	2
28-19		I4111-05100	SPRING WASHER	4
28-20		C505A-5EE0-0000	LED COMP	1
28-21		I2804-04013-5C	TAPPING SCREW, TRUSS	2
28-22		C503A-5EE0-0000	HEAD LIGHT ASSY.	1
28-22-1		C5070-5EE0-0000	HEAD LIGHT COVER (L)	1
28-22-2		C5080-5EE0-0000	HEAD LIGHT COVER (R)	1
28-22-3		C5020-5EE0-0000	HEAD LIGHT (L)	1
28-22-3-1		C5003-5EE0-0000	BLUB ASSY.(12v 10w)	1
28-22-4		C5030-5EE0-0000	HEAD LIGHT (R)	1
28-22-4-1		C5003-5EE0-0000	BLUB ASSY.(12v 10w)	1
28-22-5		C5021-5EE0-0000	HEAD LIGHT RUBBER	2
28-22-6		I2804-04013-5C	TAPPING SCREW, TRUSS	6
28-23		I7707-04016	TAPPING SCREW, TRUSS	2
28-24		I8556-06020	SCREW, PAN HEAD	2
28-25		C5300-9EF0-0000	SHIFT SWITCH	1
28-26		C8400-EMA0-0000	BUZZER	1

28-27		I2600-03015	SCREW PAN	2
28-28		I2020-30001	NUT, NYLON	2
28-29		I2140-50001	WASHER	4

 29.PACKING CACE,EXTERNAL

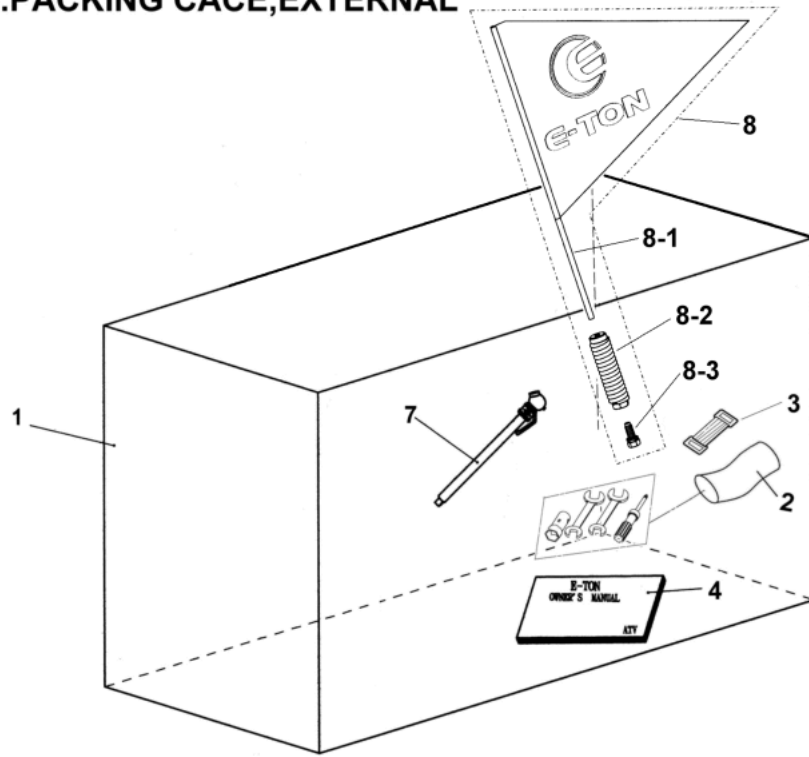


ITEM	AVAIL	PART NO.	NAME	QTY
29			PACKING CASE,EXTERNAL	
29-1		H9500-5EE0-0000	PACKING CASE,EXTERNAL	1
29-2		H9020-9FA0-0000	TOOL SET	1
29-3		H9021-9FA0-0000	WIRE CLAMP	1
29-4		H990A-9EF9-0000	OWNER'S MANUAL ASSY	1
29-4-1	N	H9900-9EF0-0000	OWNER'S MANUAL	1
29-7		H9022-5EA0-0000	PRESSURE METER	1
29-8		H840A-9EF0-0000	FLAG HOLDER ASSY	1
29-8-1		H8401-9EF0-0000	FLAG HOLDER	1
29-8-2		H8402-9EF0-0000	FLAG HOLDER SEAT	1
29-8-3		I3415-08016-0C	BOLT HEXAGON HEAD WITH WASHER	1

No picture.

ITEM	AVAIL	PART NO.	NAME	QTY
30			MANUAL CHOKE KIT	
30-1		A611A-5EG0-0000	MANUAL CHOKE KIT	1
30-1-1		A6110-B02-0000	MANUAL CHOKE COMP	1
30-1-1-1		A6153-B00-0000	MANUAL CHOKE VALVE	1
30-1-1-2		A6152-B00-0000	SPRING	1
30-1-1-3		A6113-B00-0000	O-RING	1
30-1-1-4		A6154-B00-0000	MANUAL CHOKE VALVE SEAT	1
30-1-1-5		A6157-B03-0000	NUT,HEXANGE	1
30-1-1-6		A6151-B00-0000	ADJUST SCREW	1
30-1-1-7		A6155-B00-0000	JACKET	1
30-1-1-8		A6114-B00-0000	BOLT WASHER	2
30-1-2		A7920-B02-0000	AIR CUT CABLE	1
30-1-3		C5200-5EG0-0000	LEVER HOLDER ASSY., LEFT	1
30-1-3-1		C5201-5EG0-0000	LEVER HOLDER , LEFT	1
30-1-3-2		C5202-5EE0-0000	AIR CUT, LEVER	1

 31.ACCESSORIES

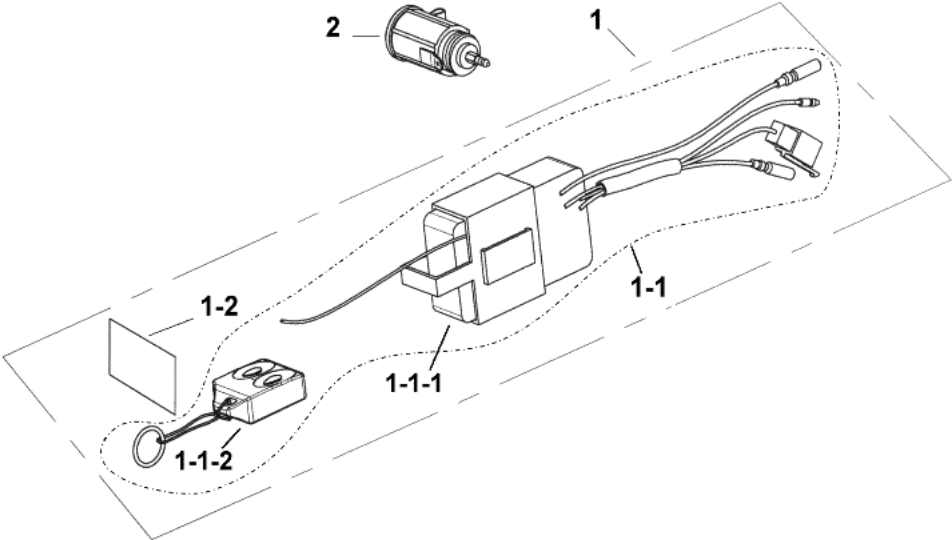

ITEM	AVAIL	PART NO.	NAME	QTY
31			ACCESSORIES	
31-1		C2104-9EF0-0000	REMOTE CONTROL SWITCH ASSY.	1
31-1-1		C2105-9EF0-0000	ROMOTE CONTROL SAFETY SWITCH ASSY.	1
31-1-1-1		C2106-9EF0-0000	RECEIVE(BLACK)	1
31-1-1-2		C2107-9EF0-0000	ROMOTE CONTROL(433MHZ)(YELLOW)	1
31-1-2		H7133-9EF0-0000	STICKER,SAFETY ROMOTE CONTROLLER	1
31-2		C1802-FIB0-0000	POWER SUPPLY	1

No picture.

ITEM	AVAIL	PART NO.	NAME	QTY
32			SERVICE KITS,BRAKE CALLIPER	
32-1		G7137-5EE0-0000	SERVICE KITS, BRAKE CALIPER	1
32-1-1		G7134-5EE0-0000	RING,SEAL	1
32-1-2		G7135-5EE0-0000	RING,DUST RESISTANT	1
32-1-3		G7136-5EE0-0000	PISTON, BRAKE CALIPER	1
32-1-4		G7138-5EE0-0000	BRAKE SHOE ASSY	1
32-1-4-1		G7131-5EE0-0000	BRAKE SHOE COMP	1
32-1-4-2		G7139-5EE0-0000	SPRING,PAO	1

No picture.

ITEM	AVAIL	PART NO.	NAME	QTY
33			PISTON / CYLINDER TOP END KIT	
33-1		A0001-B07-0000	PISTON / CYLINDER TOP END KIT	1
33-1-1		A2100-B00-0000	CYLINDER	1
33-1-2		A2251-B00-0000	GASKET CYLINDER HEAD	1
33-1-3		A2191-B00-0000	GASKET CYLINDER	1
33-1-4		A3101-B00-0000	PISTON	1
33-1-5		A3011-B00-0000	PISTON RING SET (50)	1
33-1-6		A3111-B00-0000	PIN PISTON (12×40)	1
33-1-7		I4510-19000	CIRCLIP EX	2
33-1-8		I1100-1215165	BEARING, NEEDLE	1

No picture.

ITEM	AVAIL	PART NO.	NAME	QTY
34			CYLINDER+PISTON TOP END KIT	
34-1		A21AA-B00-0000	CYLINDER+PISTON TOP END KIT	1
34-1-1		A2100-B00-0000	CYLINDER	1
34-1-2		A2191-B00-0000	GASKET CYLINDER	1
34-1-3		A2251-B00-0000	GASKET CYLINDER HEAD	1
34-1-4		A3011-B00-0000	PISTON RING SET (50)	1
34-1-5		A3101-B00-0000	PISTON	1
34-1-6		A3111-B00-0000	PIN PISTON (12×40)	1
34-1-7		I4601-12000	CLIP, PISTON PIN	2
34-1-8		I1100-1215165	BEARING, NEEDLE	1
34-1-9		A8291-5AA0-0000	GASKET (34×25.4×4)	1

No picture.

ITEM	AVAIL	PART NO.	NAME	QTY
35			MAINTENANCE KIT 1 (MJ # 85)	
35-01		A6100-B00-A001	MAINTENANCE KIT 1 (MJ # 85)	1
35-01-1		KAC30310	V CLIP	1
35-01-2		KAC30220	JET NEEDLE ASSY. (#3CR1)	1
35-01-3		KAC30110	THROTTLE VALVE (#3.0)	1
35-01-4		A6105-B00-0000	AIR FLOW ADJUSTING SCREW	1
35-01-5		KAC30840	THROTTLE ADJUSTING SCREW	1
35-01-6		KAC30510	SLOW JET (*20)	1
35-01-7		KAC30610	NEEDLE JET (*426 E-1)	1
35-01-8		KAC30410	MAIN JET # 85	1
35-01-9		A6118-B00-0000	O-RING	1
35-01-10		A6119-B00-0000	NEEDLE VALVE SEAT	1
35-01-11		KAC31120	NEEDLE VALVE ASSY.	1
35-01-12		KAC30910	CHAMBER O-RING	1

No picture.

ITEM	AVAIL	PART NO.	NAME	QTY
36			MAINTENANCE KIT 2 (MJ # 85)	
36-01		A6100-B00-A002	MAINTENANCE KIT 2 (MJ # 85)	1
36-01-1		KAC30310	V CLIP	1
36-01-2		KAC30220	JET NEEDLE ASSY. (#3CR1)	1
36-01-3		KAC30110	THROTTLE VALVE (#3.0)	1
36-01-4		A6105-B00-0000	AIR FLOW ADJUSTING SCREW	1
36-01-5		KAC30840	THROTTLE ADJUSTING SCREW	1
36-01-6		KAC30510	SLOW JET (*20)	1
36-01-7		KAC30610	NEEDLE JET (*426 E-1)	1
36-01-8		KAC30410	MAIN JET # 85	1
36-01-9		A6118-B00-0000	O-RING	1
36-01-10		A6119-B00-0000	NEEDLE VALVE SEAT	1
36-01-11		KAC31120	NEEDLE VALVE ASSY.	1
36-01-12		KAC30910	CHAMBER O-RING	1
36-01-13		KAC31210	FLOAT ASSY	1
36-01-14		KAC31410	DRAIN SCREW	1

No picture.

ITEM	AVAIL	PART NO.	NAME	QTY
37			TOOL	
37-1		C1110-B00-FT1	TACKING ACG FLY WHEEL TOOL	1