

PARTS CATALOGUE

VIPER 90R RXL90R-4S(2008)




CONTENTS

PARTS ITEM:

- 01 CRANK CASE
- 02 CYLINDER HEADHEAD COVER
- 03 CYLINDER CRANKSHAFTPISTON
- 04 COVER R CRANK CASE
- 05 CARBURETOR
- 06 DRIVEN PULLEY
- 07 START MOTOROIL PUMP
- 08 FAN COVERGENERATOR
- 09 TRANSMISSION
- 10 AIR CLEANER
- 11 PREARRANGE
- 12 ENGINE
- 13 MUFFLER
- 14 FRAME
- 15 A ARMFOOTRESTFEND BAR
- 16 FENDER
- 17 SEAT
- 18 FUEL TANK
- 19 SUSPENSION
- 20 FRONT WHEEL
- 21 REAR WHEEL
- 22 FRONT BRAKE SYSTEM
- 23 REAR BRAKE SYSTEM
- 24 HANDLE BAR
- 25 REAR WHEEL AXLE
- 26 SWING ARM
- 27 STEERING SYSTEM

- 28 ELECTRICAL EQUIPMENT
 - 29 PACKING CASE, EXTERNAL
 - 30 MANUAL CHOKE KIT
 - 31 ACCESSORIES
 - 32 SERVICE KITSBRAKE CALIPER
- N & sign meaning: not available to sale**


1. CRANK CASE

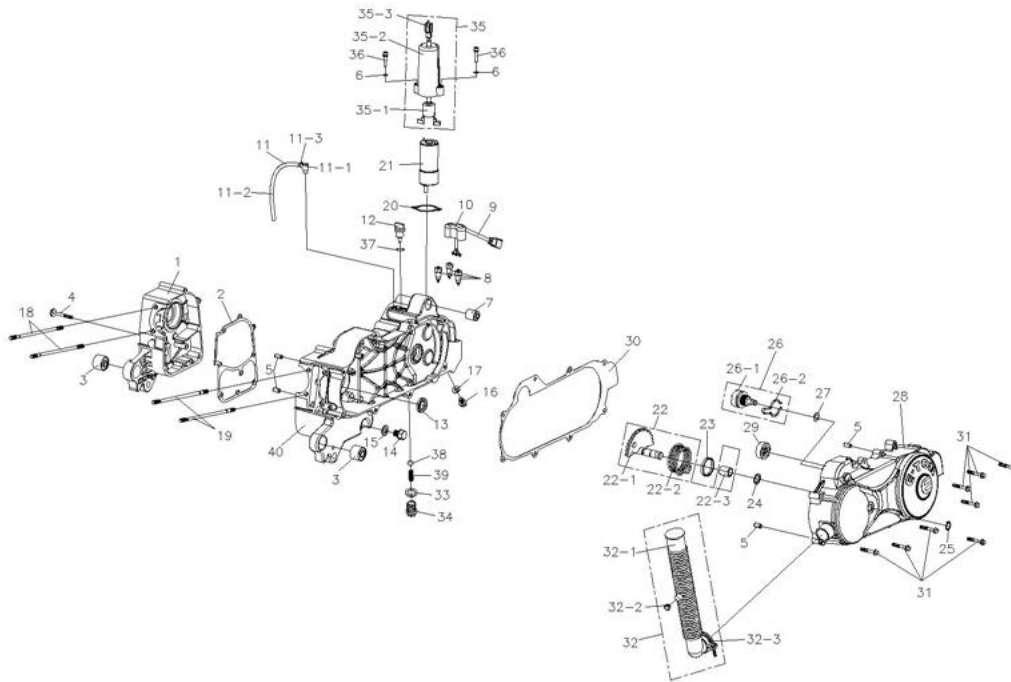

ITEM	AVAIL	PART NO.	NAME	QTY
01			CRANK CASE	
01-1	N	A1100-A12-0900	CRANK CASE COMP, RIGHT	1
01-2		A1192-A26-6000	GASKET, CRANK CASE	1
01-3		A1103-A04-0000	RUBBER BUSH ENGINE HANGER	2
01-4		I6001-06045-0H	FLANGE BOLT, HEX.	1
01-5		I4301-08140	KNOCK PIN	4
01-6		I4104-52010	WASHER	2
01-7		A1203-A26-0000	REAR SHOCK ABSORBER BUSHING	1
01-8		C5750-B07-0000	SENSOR, SHIFT	3
01-9		C5760-A26-9000	SHIFT SWITCH LINE	1
01-10		B1322-B07-0000	DUST COVER B	1
01-11		A1220-A26-9000	BREATHER HOSE COMP	1
01-11-1		A1206-B00-0000	BREATHER JOINT	1
01-11-1	N	A1206-B00-0000	BREATHER JOINT	1
01-11-2		A1221-A26-9000	HOSE BREATHER	1
01-11-2	N	A1221-A26-9000	HOSE BREATHER	1
01-11-3		I5002-06008	TUBE CLIP	1
01-11-3		I5002-06008	TUBE CLIP	1
01-12		A5651-B00-0000	PLUG, OIL	1
01-13		I1202-A26-9000	OIL SEAL (L)	1
01-14		I2800-12015-0C	BOLT, HEX.	1
01-15		I4104-12120	WASHER	1
01-16		I5801-08012-0H	FLANGE BOLT, HEX.	1
01-17		I4102-08020	WASHER	1
01-18		I0031-07181-0H	STUD BOLT (A), CYLINDER	2
01-19		I0032-07189-0H	STUD BOLT (B), CYLINDER	2
01-20		B4691-A26-9000	GASKET MOTOR CAP	1
01-21		C2300-A26-9000	MOTOR COMP SHIFT	1
01-22		B825A-A14-0001	SPINDLE ASSY KICK START	1
01-22-1		B8250-A14-0001	SPINDLE COMP KICK START	1
01-22-1	N	B8250-A14-0001	SPINDLE COMP KICK START	1
01-22-2		B8281-A14-0000	SPG KICK STARTER	1
01-22-2		B8281-A14-0000	SPG KICK STARTER	1
01-22-3		B8253-A14-0000	BOSS KICK SPINDLE	1
01-22-3		B8253-A14-0000	BOSS KICK SPINDLE	1
01-23		B8255-A14-0000	BOSS DISTANCE	1
01-24		I4104-14520A	WASHER	1
01-25		I4510-14000	CIRCLIP EX	1

01-26		B823A-A14-0001	GEAR ASSY STARTER IDLE	1
01-26-1		B8230-A14-0001	GEAR COMP STARTER IDLE	1
01-26-1	N	B8230-A14-0001	GEAR COMP STARTER IDLE	1
01-26-2		B8223-A14-0000	SPG. FRICTION START GEAR	1
01-26-2	N	B8223-A14-0000	SPG. FRICTION START GEAR	1
01-27		I4102-10505	WASHER	1
01-28		A1341-A26-0100	COVER L SIDE	1
01-29		I6130-60380-10	BEARING, BALL, RADIAL	1
01-30		A1395-A26-6000	GASKET, L COVER	1
01-31		I6001-06035-0H	FLANGE BOLT, HEX.	8
01-32		A1350-A26-0000	TUBE COMP, CVT INLET	1
01-32-1		A1351-A26-0000	TUBE, CVT INLET	1
01-32-2		A1352-A26-0000	PLUG	1
01-32-3		A7256-A26-0000	AIR DUCT CLAMP	1
01-33		I4104-14210	WASHER	1
01-34		B4305-V30-0000	SCREW FIXING	1
01-35		C231A-A26-9000	SHIFT MOTOR ASS'Y	1
01-35-1		A6116-A26-9000	RUBBER PLUG	1
01-35-2		B4460-A26-9900	CAP MOTOR	1
01-35-3	N	C2310-A26-9000	SHIFT MOTOR	1
01-36		I3500-05028-0H	SCREW PAN	2
01-37		I4608-13825	O-RING	1
01-38		B4307-V30-0000	BALL BEARING	1
01-39		B4306-V30-0000	SPRING FIXING	1
01-40	N	A1200-A26-9900	CRANK CASE COMP, LEFT	1


2. CYLINDER HEAD 、 HEAD COVER

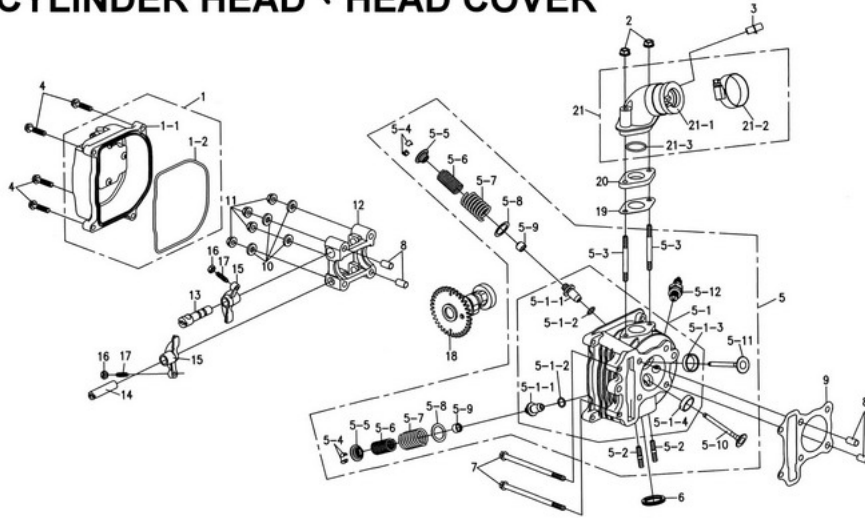

ITEM	AVAIL	PART NO.	NAME	QTY
02			CYLINDER HEADHEAD COVER	
02-1		A230A-A26-6000	COVER ASSY HEAD CYLINDER	1
02-1-1		A2301-A26-0000	COVER HEAD CYLINDER	1
02-1-2		A2305-A11-0000	JOINT COMP BREATHER	1
02-1-3		A2302-A11-0000	PLATE BREATHER SEPARATOR	1
02-1-4		I3903-380H0	TRUSS	4
02-1-5		A2391-A11-0000	GASKET COVER HEAD CYLINDER	1
02-1-6		A2303-A26-6000	GASKET, BREATHER PLATE	1
02-2		I4050-06060-0H	FLANGE NUT, HEX.	2
02-3		A6101-B02-0000	CRAB RUBBER CAP	1
02-4		I6001-06025-0C	FLANGE BOLT, HEX.	4
02-5		A220A-A26-0000	HEAD ASSY CYLINDER	1
02-5-1		A2200-A26-0000	HEAD COMP CYLINDER	1
02-5-1-1		A2237-A11-0000	GUIDE VALVE	2
02-5-1-2		I4608-09016	O-RING	2
02-5-1-3		A2202-A26-0000	SEAT, IN VALVE	1
02-5-1-4		A2203-A26-0000	SEAT, EX VALVE	1
02-5-2		I2900-06016-0A	BOLT, STUD	2
02-5-3		I2900-06050-0A	BOLT, STUD	2
02-5-4		A4781-A04-0000	COTTER, VALVE	4
02-5-5		A4771-A04-0000	RETAINER, VALVE SPRING	2
02-5-6		A4761-A11-0000	SPRING VALVE INNER	2
02-5-7		A4751-A11-0000	SPG VALVE OUTER	2
02-5-8		I4104-16508	WASHER	2
02-5-9		A2209-A04-0000	SEAL VALVE STEM	2
02-5-10		A4721-A26-0000	VALVE EXHAUST	1
02-5-11		A4711-A26-0000	VALVE INLET	1
02-5-12		I8000-V30-0000	SPARK PLUG	1
02-6		A8291-A11-0000	GASKET EXH PIPE	1
02-7		I6001-06100-0H	FLANGE BOLT, HEX.	2
02-8		I4301-08140A	KNOCK PIN	4
02-9		A2251-A26-0000	GASKET HEAD CYLINDER	1
02-10		I4104-07225	WASHER	4
02-11		I4050-07060-0H	FLANGE NUT, HEX.	4
02-12		A2211-A11-0000	HOLDER CAM SHAFT	1
02-13		A4451-A11-0000	SHAFT IN ROCKER ARM	1
02-14		A4452-A11-0000	SHAFT EX ROCKER ARM	1
02-15		A4431-A11-0000	ARM VALVE ROCKER	2


02-16		I4001-050K0	NUT HEX	2
02-17		I0012-A04-0000	SCREW ADJUSTING	2
02-18		A4100-A26-9000	CAM SHAFT COMP	1
02-19		A6201-A26-6000	GASKET, CARB INSULATOR	1
02-20		A6211-A12-0000	INSULATOR CARB	1
02-21		A711A-A26-9000	PIPE ASSY, INLET	1
02-21-1		I4608-22020	O-RING	1
02-21-2		A7110-A12-0000	PIPE COMP, INLET	1
02-21-3		A7227-A26-9000	BAND B	1

3. CYLINDER 、 PISTON 、 CRANKSHAFT

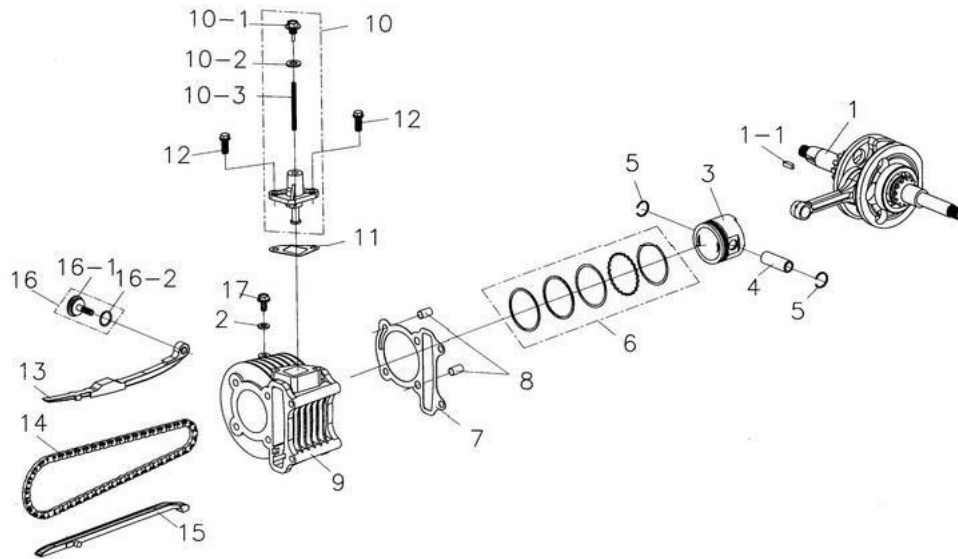


ITEM	AVAIL	PART NO.	NAME	QTY
03			CYLINDER CRANKSHAFTPISTON	
03-1		A3000-A26-9000	CRANK SHAFT COMP	1
03-1-1		A3321-A26-9000	CRANK SHAFT L	1
03-1-2		A3311-A26-0000	CRANK SHAFT R	1
03-1-3		A3201-A26-0000	ROD CONNECTING	1
03-1-4		A3381-A12-0000	PIN CRANK	1
03-1-5		I1110-251301138	BEARING, NEEDLE	1
03-1-6		A3371-A26-0000	PLATE R CRANK SIDE	1
03-1-7		I6100-63040	BEARING, BALL, RADIAL	2
03-1-8		A5131-A12-0000	GEAR PUMP DRIVE	1
03-1-9		A4311-A12-0000	SPROCKET TIMING	1
03-1-10		I4401-25046	WOODRUFF KEY	1
03-2		I4104-06512	WASHER	1
03-3		A3101-A26-0000	PISTON	1
03-4		A3111-A26-0000	PIN PISTON	1
03-5		I4601-13000	CLIP PISTON PIN	2
03-6		A3011-A26-0000	PISTON RING SET	1
03-7		A2191-A26-6000	GASKET, CYLINDER	1
03-8		I4301-08140A	KNOCK PIN	2
03-9		A2100-A26-0000	CYLINDER COMP	1
03-10		A4550-A09-0000	COMP, LIFTER TENSIONER	1
03-10-1	N	A4560-A09-0000	PLUG COMP ADJUSTER	1
03-10-2	N	I4104-08416	WASHER	1
03-10-3	N	A4553-A09-0000	SPRING, CAM CHAIN ADJUSTER	1
03-11		A4555-A26-6000	GASKET, LIFTER TENSIONER	1
03-12		I6001-06016-0H	FLANGE BOLT, HEX.	2
03-13		A4510-A12-0000	GUIDE TENSION CAM CHAIN	1
03-14		A4401-A09-0000	CHAIN CAM	1
03-15		A4610-A12-0000	GUIDE CAM CHAIN	1
03-16		A4530-A04-0000	PIVOT CAM CHAIN SET	1
03-16-1		A4531-A04-0000	PIVOT CAM CHAIN TENSION	1
03-16-2		I4608-15215	O-RING	1
03-17		I5801-06012-0C	FLANGE BOLT, HEX.	1

4. COVER R CRANK CASE

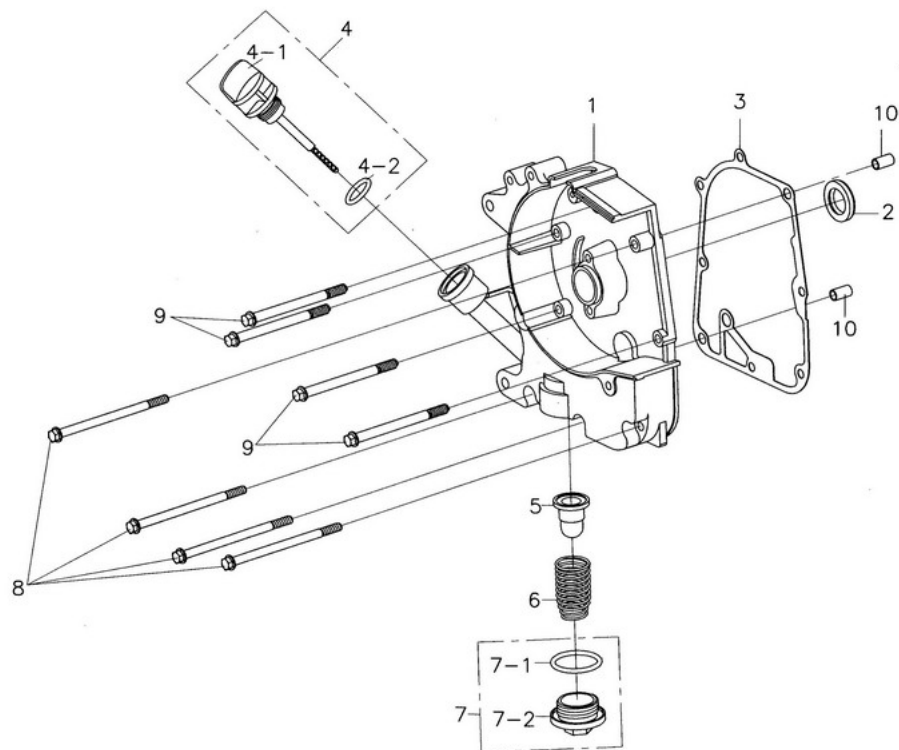

ITEM	AVAIL	PART NO.	NAME	QTY
04			COVER R CRANK CASE	
04-1		A1331-A26-0900	COVER R SIDE	1
04-2		I1201-A26-9000	OIL SEAL (R)	1
04-3		A1394-A26-6000	GASKET, R COVER	1
04-4		A5650-A04-0000	GAUGE COMP OIL LEVEL	1
04-4-1		A5651-A04-0000	GAUGE OIL LEVEL	1
04-4-1	N	A5651-A04-0000	GAUGE OIL LEVEL	1
04-4-2		I4608-18030	O-RING	1
04-4-2		I4608-18030	O-RING	1
04-5		A5421-A00-0000	SCREEN, OIL FILTER	1
04-6		A5426-A04-0000	SPG OIL FILTER SCREEN	1
04-7		A2360-A04-0001	HOLE CAP TAPPET COMP	1
04-7-1		I4608-30832	O-RING	1
04-7-1		I4608-30832	O-RING	1
04-7-2		A2361-A04-0000	HOLE CAP TAP ADJUSTING	1
04-7-2		A2361-A04-0000	HOLE CAP TAP ADJUSTING	1
04-8		I6001-06100-0H	FLANGE BOLT, HEX.	4
04-9		I6001-06085-0H	FLANGE BOLT, HEX.	4
04-10		I4301-08140	KNOCK PIN	2

5.CARBURETOR

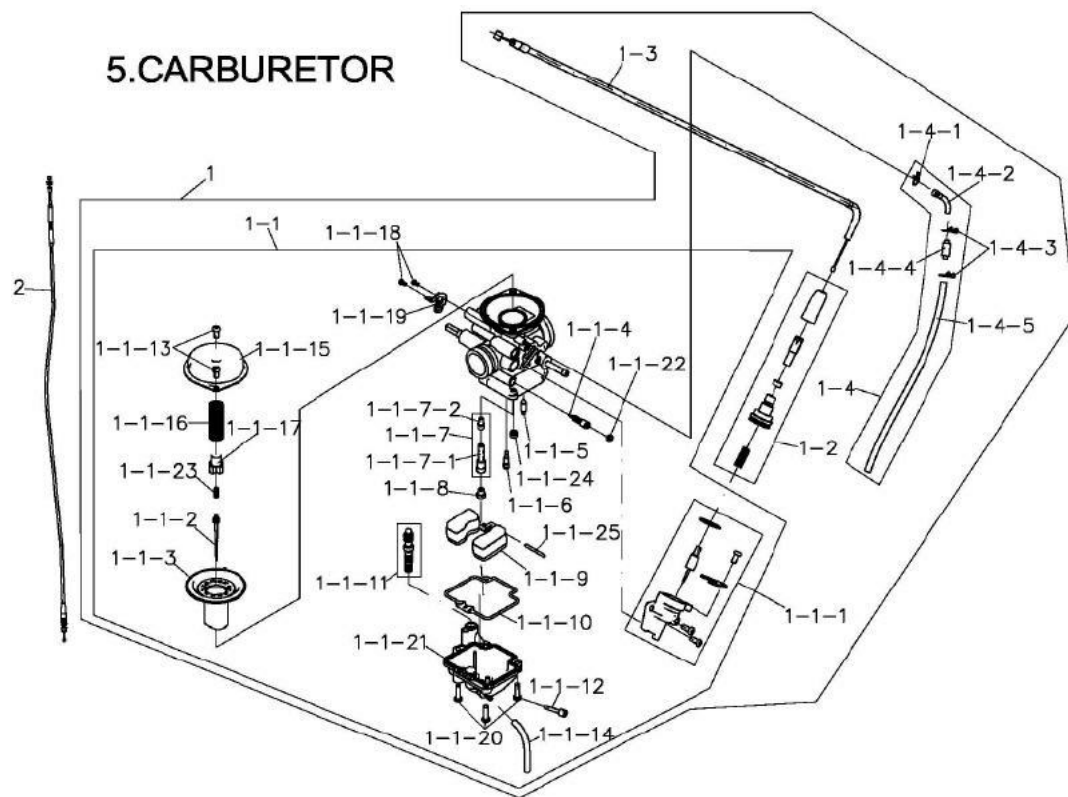

ITEM	AVAIL	PART NO.	NAME	QTY
05			CARBURETOR	
05-1		A610A-A26-9000	CARBURETOR ASSY.	1
05-1-1		A6100-A26-9000	CARBURETOR COMP	1
05-1-1-1		A0004-A26-9000	MANUAL CHOKE COMP 2	1
05-1-1-2		A6109-A26-6000	JET NEEDLE ASSY # 4T12	1
05-1-1-3		KAC73440	VACUUM PISTON COMP	1
05-1-1-4		KAC70G04	AIR ADJUSTING SCREW ASSY.	1
05-1-1-5		KAC72130	NEEDLE VALVE ASSY.	1
05-1-1-6		KAC73010	SLOW JET # 32	1
05-1-1-7		A6170-A26-6000	NOZZLE, MAIN SET	1
05-1-1-7-1		KAC73110	PIPE, BLEED	1
05-1-1-7-2		KAC72910	NOZZLE, MAIN	1
05-1-1-8		KAC73108	MAIN JET # 100	1
05-1-1-9		KAC72310	FLOAT ASSY.	1
05-1-1-10		KAC75710	CHAMBER O-RING	1
05-1-1-11		A0002-A26-9000	ACCELERATION PUMP COMP	1
05-1-1-12		KAC71520	DRAIN SCREW ASSY	1
05-1-1-13		AC001	SCREW PANHEAD	2
05-1-1-14		A6111-A26-6000	TUBE	1
05-1-1-15		KAC73820	CARB TOP COVER	1
05-1-1-16		KAC73710	SPRING	1
05-1-1-17		KAC73610	SPRING PLACE	1
05-1-1-18		I3500-05010-0H	SCREW PAN	2
05-1-1-19		KAC71610	BRACKET WIRE ASSY	1
05-1-1-20		AC033	SCREW	3
05-1-1-21		KAC70210	CARB CHAMBER	1
05-1-1-22		A6106-A26-6000	PLUG	1
05-1-1-23		KAC73510	SPRING	1
05-1-1-24	N	A0006-A26-0000	PLUG	1
05-1-1-25		KAC72410	PIN FLOAT	1
05-1-2		A0001-A26-9000	MANUAL CHOKE COMP 1	1
05-1-3		A7920-A26-9000	CABLE, AIR CUT	1
05-1-4		A0003-A26-9000	TUBE BREATHER COMP	1
05-1-4-1		KAB46510	TUBE CLIP (B)	1
05-1-4-2		KAB86210	TUBE, RUBBER (A)	1
05-1-4-3		KAB46410	TUBE CLIP (A)	2
05-1-4-4		KAB87710	PIPE, BYPASS	1
05-1-4-5		KAB87810	TUBE, RUBBER (B)	1
05-2		A7910-9KA0-0000	CABLE,THROTTLE	1

This exploded view diagram illustrates the assembly of a driven pulley. The components are organized into several sub-assemblies, each enclosed in a dashed rectangular box:


- Sub-assembly 1 (Main Drive Mechanism):** Located at the top right, it includes a large pulley (1-1) with a central shaft (1-2) and a flange (1-3). The pulley is secured with a nut (1-4) and a washer (1-5). The shaft is supported by bearings (1-6, 1-7) and a spring (1-8). The pulley is connected to a drive pulley (1-9) via a timing belt (1-10).
- Sub-assembly 2 (Timing Belt):** A long, curved timing belt (4) is shown in the center, connecting the main drive pulley to the drive pulley.
- Sub-assembly 3 (Drive Pulley):** Located at the bottom left, it includes a drive pulley (3-1) with a central shaft (3-2) and a flange (3-3). The pulley is secured with a nut (3-4) and a washer (3-5). The shaft is supported by bearings (3-6, 3-7) and a spring (3-8).
- Sub-assembly 4 (Timing Belt):** A long, curved timing belt (4) is shown in the center, connecting the main drive pulley to the drive pulley.
- Sub-assembly 5 (Timing Belt):** A long, curved timing belt (4) is shown in the center, connecting the main drive pulley to the drive pulley.

The diagram uses a consistent numbering system to identify individual parts and sub-assemblies, facilitating the assembly process.

Page 11.


06-3-2		B2105-A26-9000	BOSS DRIVE FACE	1
06-3-3		B2110-A26-9000	FACE COMP, MOVABLE DRIVE	1
06-3-4		A0005-A26-9000	ROLLER COMP WEIGHT	1
06-3-4-1		B2121-A26-9000	ROLLER WEIGHT	6
06-3-5		B2131-A26-9000	PLATE, RAMP	1
06-3-6		B2132-A26-9000	PIECE SLIDE	3
06-3-7		B2102-A11-0000	FACE DRIVE	1
06-4		B3100-A11-0000	BELT DRIVE	1
06-5		B8211-A26-9000	RATCHET KICK STARTER	1
06-6		I4104-14515	WASHER	1
06-7		I4050-12110-0H	FLANGE NUT, HEX.	1

7. START MOTOR 、 OIL PUMP

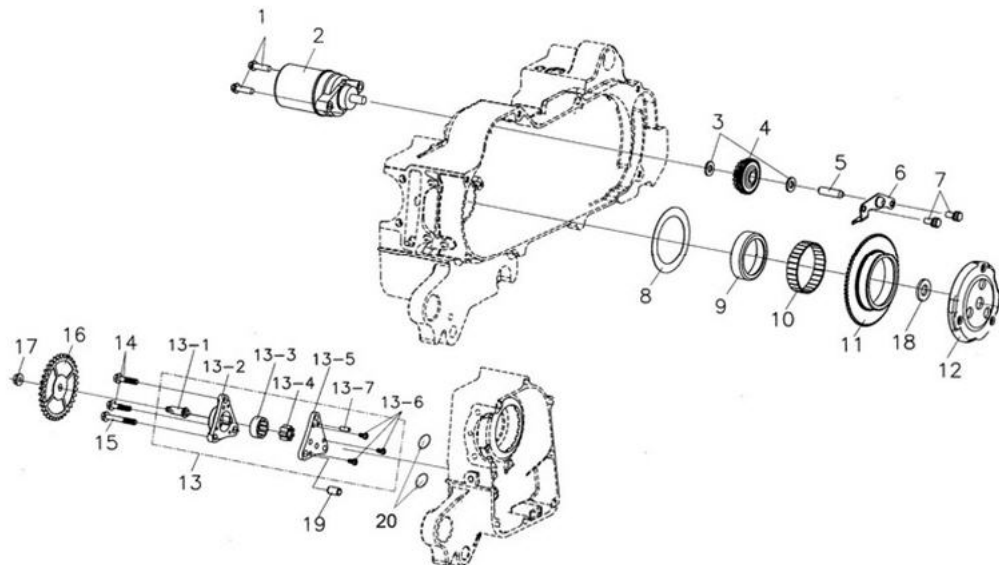

ITEM	AVAIL	PART NO.	NAME	QTY
07			START MOTOR OIL PUMP	
07-1		I6001-06040-0H	FLANGE BOLT, HEX.	2
07-2		C1200-A26-9000	MOTOR START COMP	1
07-3		I4104-08218	WASHER	2
07-4		B8100-B00-0000	GEAR COMP STARTER REDUCTION	1
07-4-1		B8101-B00-0000	GEAR STARTER REDUCTION	1
07-4-2		I1130-081210	BEARING, NEEDLE	1
07-5		B8102-B00-0000	SHAFT START REDUCTION	1
07-6		B8105-B00-0000	PLATE START REDUCTION	1
07-7		I3892-06014-0H	SCREW, PAN	2
07-8		I4104-55506	WASHER	1
07-9		B8115-B00-0000	BOSS GEAR	1
07-10		I1100-555913	BRARING, NEEDLE	1
07-11		B8110-B00-0000	GEAR COMP STARTING CLUTCH	1
07-12		B812A-A26-9000	ONE WAY CLUTCH ASSY	1
07-13		A5100-A12-0000	OIL PUMP COMP	1
07-13-1		I4303-04118	KNOCK PIN	1
07-14		I6001-06020-0H	FLANGE BOLT, HEX.	2
07-15		I6001-06025-0C	FLANGE BOLT, HEX.	1
07-16		A5133-A11-0000	GEAR OIL PUMP DRIVEN	1
07-17		I4050-06060-0H	FLANGE NUT, HEX.	1
07-18		I4104-16230	WASHER	1
07-19		I4301-08140	KNOCK PIN	1
07-20		I4608-09016	O-RING	2


8. FAN COVER \ GENERATOR

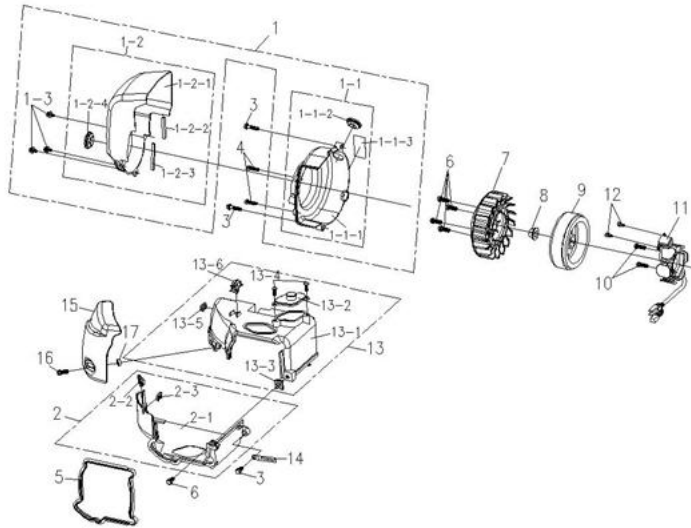

ITEM	AVAIL	PART NO.	NAME	QTY
08			FAN COVERGENERATOR	
08-1		A964A-A26-0000	DUCT INLET ASSY	0
08-1-1		A961A-A26-0000	COVER ASSY FAN	1
08-1-1		A961A-A26-0000	COVER ASSY FAN	1
08-1-1-1		A9610-A26-0000	COVER COMP FAN	1
08-1-1-1		A9610-A26-0000	COVER COMP FAN	1
08-1-1-1		A9610-A26-0000	COVER COMP FAN	1
08-1-1-2		G0529-A04-0000	GROMMET SHROUD	1
08-1-1-2		G0529-A04-0000	GROMMET SHROUD	1
08-1-1-2		G0529-A04-0000	GROMMET SHROUD	1
08-1-1-3		H7541-A26-0000	LABEL OIL CAP	1
08-1-1-3		H7541-A26-0000	LABEL OIL CAP	1
08-1-1-3		H7541-A26-0000	LABEL OIL CAP	1
08-1-1-4		I6231-065120	COLLAR	2
08-1-1-4		I6231-065120	COLLAR	2
08-1-2		A9640-A26-0000	DUCT INLET COMP.	1
08-1-2		A9640-A26-0000	DUCT INLET COMP.	1
08-1-2-1		A9616-A26-0000	DUCT INLET	1
08-1-2-1		A9616-A26-0000	DUCT INLET	1
08-1-2-1		A9616-A26-0000	DUCT INLET	1
08-1-2-2		A9617-A26-0000	RUBBER	1
08-1-2-2		A9617-A26-0000	RUBBER	1
08-1-2-2		A9617-A26-0000	RUBBER	1
08-1-2-3		A9618-A26-0000	RUBBER	1
08-1-2-3		A9618-A26-0000	RUBBER	1
08-1-2-3		A9618-A26-0000	RUBBER	1
08-1-2-4		G0529-V30-0000	GROMMET SHROUD	1
08-1-2-4		G0529-V30-0000	GROMMET SHROUD	1
08-1-2-4		G0529-V30-0000	GROMMET SHROUD	1
08-1-3		I3893-05012-0H	SCREW WASHER	3
08-1-3		I3893-05012-0H	SCREW WASHER	3
08-2		A962A-A12-0000	SHROUD A ASSY	1
08-2-1		A9620-A12-0000	SHROUD A COMP	1
08-2-1		A9620-A12-0000	SHROUD A COMP	1
08-2-1-1		I6231-065050	COLLAR	1
08-2-1-1		I6231-065050	COLLAR	1
08-2-1-2		I6231-065120	COLLAR	1
08-2-1-2		I6231-065120	COLLAR	1
08-2-2		A9637-A12-0000	NUT SPRING	1

08-2-2		A9637-A12-0000	NUT SPRING	1
08-2-3		A9637-V30-0000	NUT SPRING	1
08-2-3		A9637-V30-0000	NUT SPRING	1
08-3		I6001-06025-0C	FLANGE BOLT, HEX.	3
08-4		I3500-05025-0G	SCREW, PAN	2
08-5		A9625-A11-0000	SEAL SHROUD	1
08-6		I6001-06016-0H	FLANGE BOLT, HEX.	4
08-7		A9510-A12-0000	FAN COMP COOLING	1
08-8		I4050-12110-0H	FLANGE NUT, HEX.	1
08-9		C1110-A12-9000	FLYWHEEL COMP	1
08-10		I6001-06020-0H	FLANGE BOLT, HEX.	2
08-11		C1120-A26-0000	STATOR COMP	1
08-12		I3412-05014-0H	BOLT, HEX.	2
08-13		A963A-A12-0000	SHROUD B ASSY	1
08-13-1		A9630-A12-0000	SHROUD B COMP	1
08-13-1		A9630-A12-0000	SHROUD B COMP	1
08-13-1-1		I6231-065050	COLLAR	1
08-13-1-1		I6231-065050	COLLAR	1
08-13-2		A9636-A12-0000	BOX TENSIONER LIFTER	1
08-13-2		A9636-A12-0000	BOX TENSIONER LIFTER	1
08-13-3		A9637-A12-0000	NUT SPRING	1
08-13-3		A9637-A12-0000	NUT SPRING	1
08-13-4		I3903-380H0	TRUSS	2
08-13-4		I3903-380H0	TRUSS	2
08-13-5		A9637-V30-0000	NUT SPRING	1
08-13-5		A9637-V30-0000	NUT SPRING	1
08-13-6		A9638-A12-0000	CLAMPER CABLE	1
08-13-6		A9638-A12-0000	CLAMPER CABLE	1
08-14		C2963-A09-0000	CLAMPER PULSER CORD	1
08-15		A9619-A26-9000	FENDER	1
08-16		I5701-06025-0C	FLANGE BOLT, HEX.	1
08-17		I4104-05501	WASHER	2
08-18		I6001-06016-0H	FLANGE BOLT, HEX.	1


9. TRANSMISSION

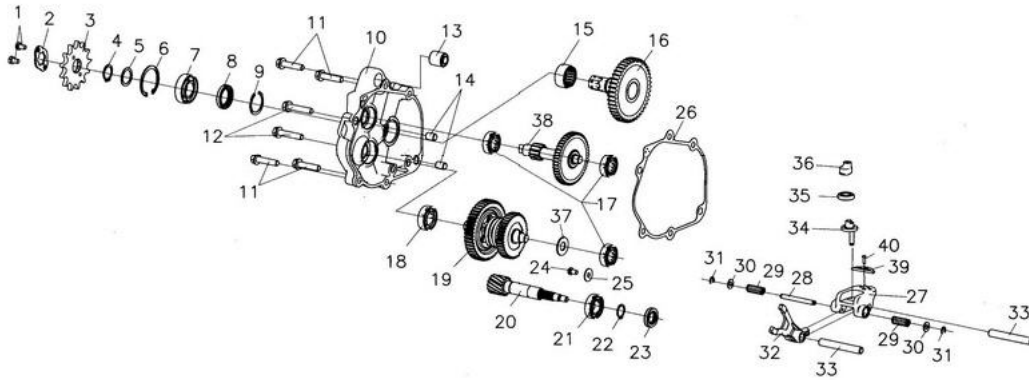

ITEM	AVAIL	PART NO.	NAME	QTY
09			TRANSMISSION	
09-1		I2201-06010-0H	BOLT, HEX.	2
09-2		B3811-A00-0000	PLATE FIXING	1
09-3		B3801-A26-0000	SPROCKET DRIVE	1
09-4		I4510-20000	CIRCLIP EX	1
09-5		I4104-20210	WASHER	1
09-6		I4520-42000	CIRCLIP IN	1
09-7		I6150-60040-10	BEARING, BALL, RADIAL	1
09-8		I1204-B00-0000	OIL SEAL	1
09-9		I4530-32000	CIRCLIP	1
09-10		B1300-A26-9900	COVER COMP, MISSION	1
09-11		I5701-08035-0H	FLANGE BOLT, HEX.	4
09-12		I5701-08040-0H	FLANGE BOLT, HEX.	2
09-13		A1203-A26-0000	REAR SHOCK ABSORBER BUSHING	1
09-14		I4301-10140	KNOCK PIN	2
09-15		I1130-253316	BEARING, NEEDLE	1
09-16		B3430-A26-9000	FINAL SHAFT COMP	1
09-17		I6100-62013-10	BEARING, BALL, RADIAL	3
09-18		I6100-62020	BEARING, BALL, RADIAL	1
09-19		B3420-A26-9000	COUNTER SHAFT COMP	1
09-20		B3411-A26-9000	SHAFT DRIVE	1
09-21		I6100-60030	BEARING, BALL, RADIAL	1
09-22		I4510-17000	CIRCLIP EX	1
09-23		I1203-B00-0000	OIL SEAL	1
09-24		I3500-06010-0A	SCREW, PAN	1
09-25		I4104-06512A	WASHER	1
09-26		B1395-A26-6000	GASKET, MISSION COVER	1
09-27		B4421-A26-9000	SHIFT PUSH	1
09-28		B4625-A26-9000	SHAFT FIXED	1
09-29		B4306-A26-9000	SHIFT FIXD SPRING	2
09-30		I4104-06010	WASHER	2
09-31		I4540-0501G	CIRCLIP	2
09-32		B4231-A26-9000	FORK SHIFT	1
09-33		B4241-B07-0000	SHAFT GEAR SHIFT	2
09-34		B4411-A26-9000	CAM SHIFT	1
09-35		I6100-69010	BEARING, BALL, RADIAL	1
09-36		B4431-A26-9000	KNOCK BLOCK	1
09-37		I4104-12310	WASHER	1

09-38		B3250-A26-9000	REVERSE GEAR COMP	1
09-39		B4308-A26-9000	INSULATOR SHIM	1
09-40		I2600-03008	SCREW, PAN	1

10. AIR CLEANER

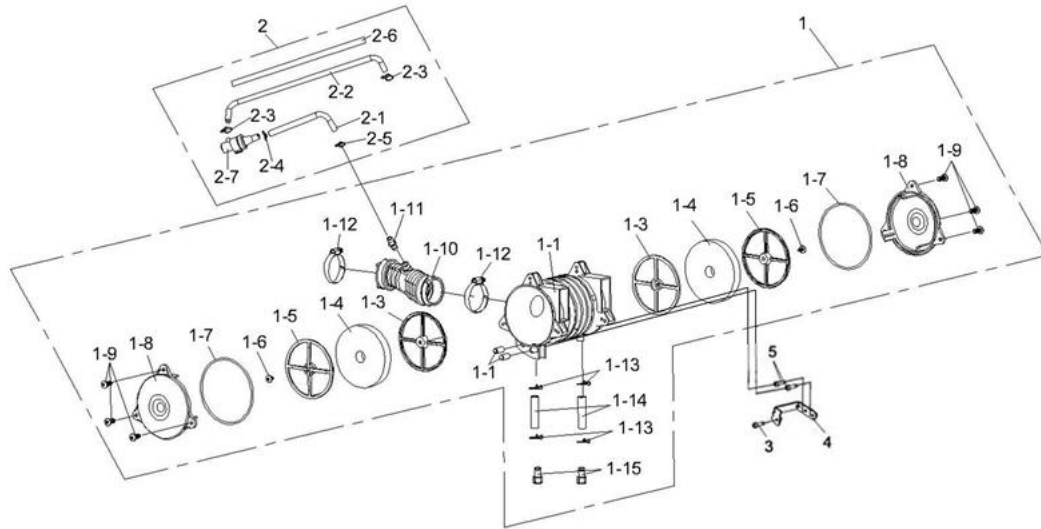


ITEM	AVAIL	PART NO.	NAME	QTY
10			AIR CLEANER	
10-1		A723A-A26-9000	AIR CLEANER ASSY	1
10-1-1		A7230-A26-9000	CASE, AIR/C	1
10-1-1-1		A7209-A09-0000	AIR CLEANER CASE BUSH	2
10-1-2		A7209-A09-0000	AIR CLEANER CASE BUSH	2
10-1-3		A7206-A09-9000	COVER DOWN	2
10-1-4		A7205-A09-9000	FILTER ELEMENT	2
10-1-5		A7207-A09-9000	COVER TOP	2
10-1-6		I3903-412B0	TRUSS	2
10-1-7		I4608-94535	O-RING	2
10-1-8		A7231-A09-9000	COVER AIR/C	2
10-1-9		I3903-220B0	TAPPING SCREW, TRUSS	6
10-1-10		A7253-A26-0000	AIR CLEANER CONNECTOR TUBE	1
10-1-11		A5055-A26-0000	TUBE BREATHER	1
10-1-12		A7255-A26-0000	BAND CONNECTING TUBE	2
10-1-13		I5002-12312	TUBE CLIP	4
10-1-14		A7234-B00-0000	TUBE DRAIN	2
10-1-15		A7232-B00-0000	CAP	2
10-2		A736A-A26-6000	OIL CATCH TANK ASSY	1
10-2-1		A7365-A26-0000	TUBE, BREATHER A	1
10-2-2		A7364-A26-6000	TUBE, BREATHER B	1
10-2-3		I5002-10810-0H	TUBE CLIP	2
10-2-4		I5002-14510-0H	TUBE CLIP	1
10-2-5		I5002-08510-0H	TUBE CLIP	1
10-2-6		A7369-A26-0000	TUBE, PROTECTION	1
10-2-7		A7360-A26-6000	OIL CATCH TANK COMP	1
10-2-8		A7363-A26-6000	RUBBER CAP	1
10-3		I6001-06025-0H	BOLT FLANGE SH	1
10-4		A7261-A25-0000	AIR CLEANER BRACKET	1
10-5		I6001-06028-0H	FLANGE BOLT, HEX.	2

No picture.


ITEM	AVAIL	PART NO.	NAME	QTY
11			PREARRANGE	

12. ENGINE

ITEM	AVAIL	PART NO.	NAME	QTY
12			ENGINE	
12-1		AA000-A26-2000	ENGINE	1
12-2		A1000-5EA0-9000	RUBBER CAP KICK SHAFT	1
12-3		B8300-B00-9001	ARM COMP KICK STARTER	1

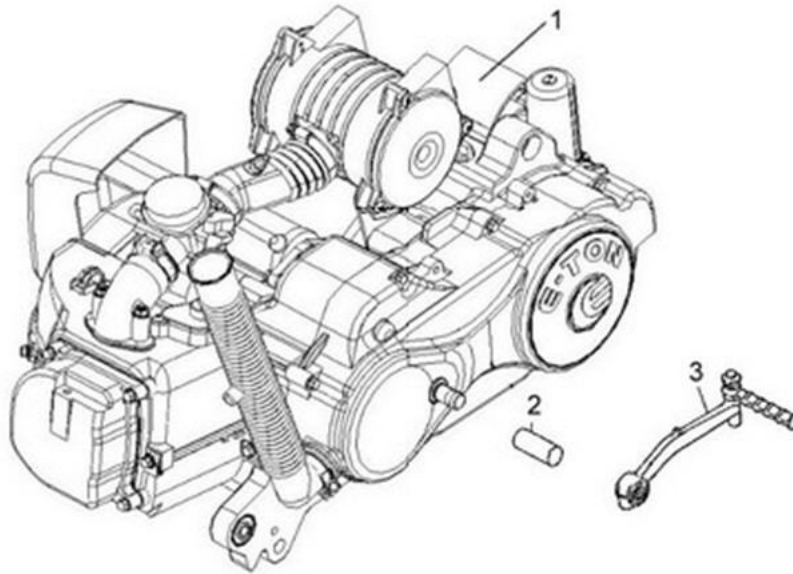


13.MUFFLER

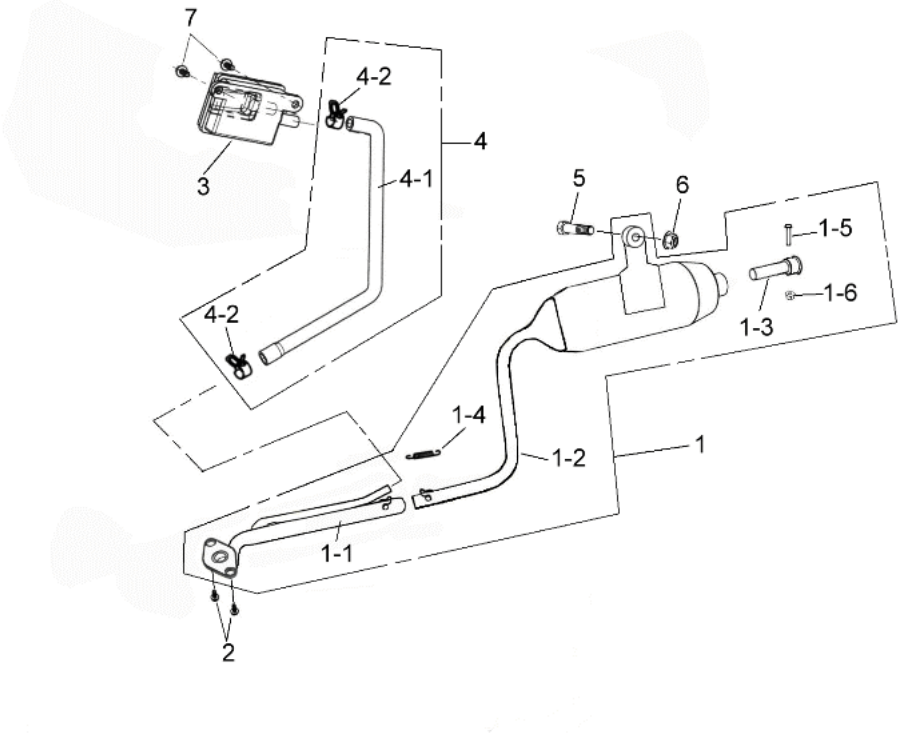


ITEM	AVAIL	PART NO.	NAME	QTY
13			MUFFLER	
13-1		A830A-A26-3000	MUFFLER PIPE ASSY.	1
13-1-1		A8301-A26-3000	MUFFLER PIPE , FRONT	1
13-1-2		A8302-A26-3000	MUFFLER PIPE , REAR	1
13-1-3		A8303-FIA0-0000	SPARK ARRESTER	1
13-1-4		A8304-9KA0-0000	SPRING	1
13-1-5		A8305-9KA0-0000	SOCKET BOLT	1
13-1-6		A8306-9KA0-0000	HEX, NUT, SAFETY	1
13-2		I0179-06850	NUT	2
13-3		A7400-5PA0-0000	AICV COMP.	1
13-3-1		A7402-5PA0-0000	AICV BODY	1
13-3-2		A7403-5PA0-0000	AICV WEB	1
13-3-3		A7404-5PA0-0000	AICV FILTER	1
13-3-4		I3901-314C5	TAPPING SCREW, PAN	2
13-3-5		A7405-5PA0-0000	FIXED PLATE , REED VALVE	1
13-3-6		A7406-5PA0-0000	REED VALVE	1
13-3-7		A7407-5PA0-0000	SEAL	1
13-3-8		A7408-5PA0-0000	CAP, AICV	1
13-3-9		I3901-425C5	TAPPING SCREW ,PAN	2
13-4		A7420-9KA0-0000	CONNECTING TUBE ASSY.	1
13-4-1		A7421-9KA0-0000	CONNECTING TUBE	1
13-4-2		A7422-5PA0-0000	CLAMP, TUBE	2
13-5		I5827-08030	FLANGE BOLT, HEX.	1
13-6		I5611-08200	HEX. FLANGE NUT, SAFETY	1
13-7		I7701-50016	SCREW, TAPPING	2

14. FRAME

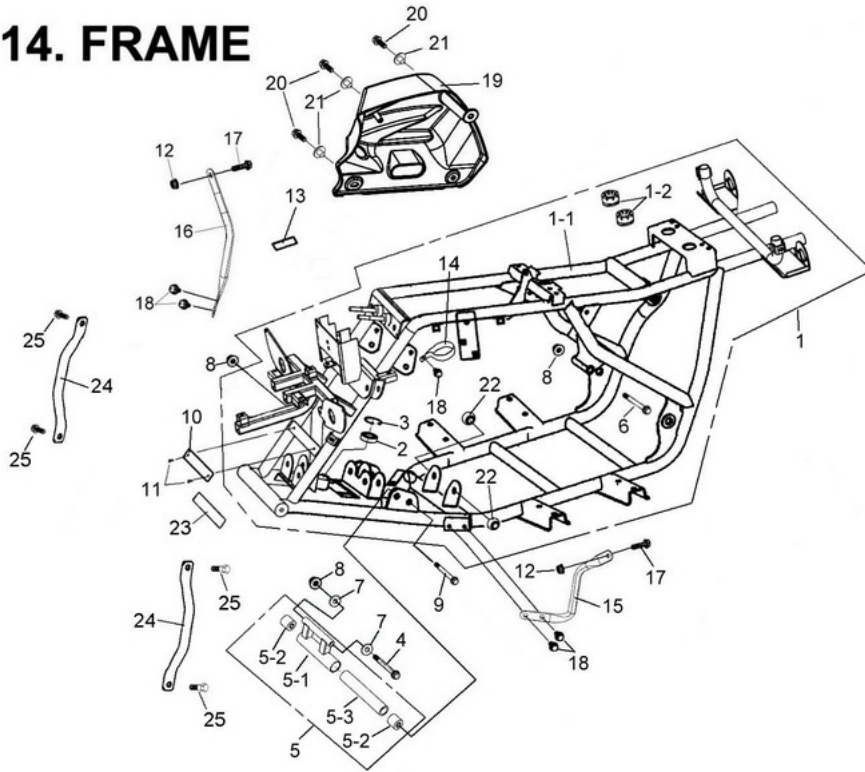


ITEM	AVAIL	PART NO.	NAME	QTY
14			FRAME	
14-1		E010A-9KC0-0000	FRAME COMP.	1
14-1-1		E0100-9KC0-0000	FRAME	1
14-1-2		G7212-5EA0-0000	RUBBER DAMPER	2
14-2		I6100-6002ZZ	BEARING (6002ZZ)	1
14-3		I4510-32000	C CLIP EX 32	1
14-4		I2502-10170-6C	FLANGE BOLT, HEX	1
14-5		E035A-9KA0-0000	ENGINE SUSPENSION ASSY	1
14-5-1		E0350-9KA0-0000	ENGINE SUSPENSION	1
14-5-2		E0201-5EA0-0000	BUSH	2
14-5-3		E0360-9KA0-0000	COLLAR	1
14-6		E0351-5EA0-0000	FLANGE BOLT, HEX.	1
14-7		I9905-10100	WASHER	2
14-8		I5612-10200	HEX. FLANGE NUT, SAFETY	3
14-9		I2502-10165-6C	FLANGE BOLT, HEX	1
14-10	N	E0101-5EA0-0000	FRAME NUMBER PLATE	1
14-11		H750A-5BA1-0000	NAIL, PULL	2
14-12		I5611-06200-0G	HEX. FLANGE NUT, SAFETY	2
14-13		H7138-9KA0-0000	STICER,EMISSION CONTROL	1
14-14		B0101-9KA0-0000	CVT BAND INSULATOR	1
14-15		E0107-9KC0-0000	FIXED PLATE, FRONT FENDER L	1
14-16		E0108-9KC0-0000	FIXED PLATE, FRONT FENDER R	1
14-17		I0149-06823-01	BOLT,FLANGE(M6×23)	2
14-18		I0149-06012	FLANGE BOLT, HEX.	5
14-19		D0103-9KA0-0000	DRIVE CHAIN COVER	1
14-20		I0149-06016	FLANGE BOLT, HEX.	2
14-21		H3503-LRA0-0000	T COLLAR	3
14-22		G7232-9FA0-0000	PLUG RUBBER	2
14-23		F4309-5EA0-0000	STICKER, MFD.	1
14-24		E0130-9KA0-0000	FRONT REINFORCEMENT POLE	2
14-25		I0149-10020	BOLT,FLANGE	4

15. A ARM, FOOTREST, FENDER BAR

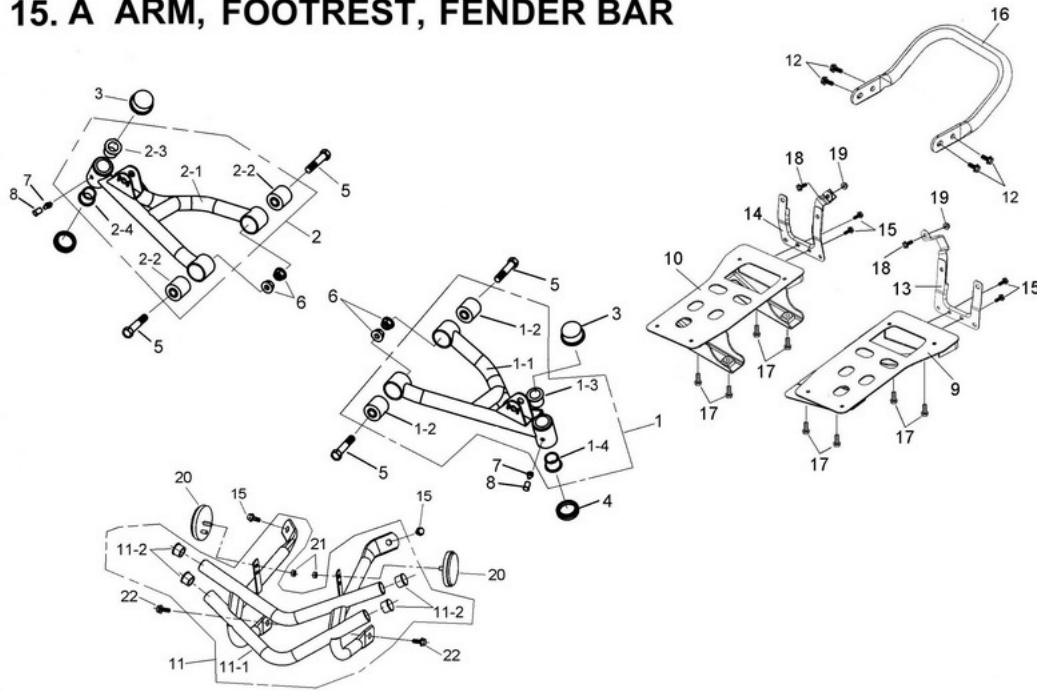

ITEM	AVAIL	PART NO.	NAME	QTY
15			A ARMFOOTRESTFEND BAR	
15-1		E020A-5EE0-0700	ARM, SUSPENSION, L.H. ASSY	1
15-1-1		E0200-5EE0-0700	ARM, SUSPENSION, L.H.	1
15-1-2		E0201-5EA0-0000	BUSH	2
15-1-3		E0207-5EA0-0000	OIL LINER(15.5)	1
15-1-4		E0206-5EA0-0000	OIL LINER(17)	1
15-2		E021A-5EE0-0700	ARM, SUSPENSION, R.H. ASSY	1
15-2-1		E0210-5EE0-0700	ARM, SUSPENSION, R.H.	1
15-2-2		E0201-5EA0-0000	BUSH	2
15-2-3		E0207-5EA0-0000	OIL LINER(15.5)	1
15-2-4		E0206-5EA0-0000	OIL LINER(17)	1
15-3		E0202-5EA0-0000	WATERPROOF SEAL	2
15-4		E0203-5EA0-0000	DUST SEAT	2
15-5		I0102-10048	FLANGE BOLT, HEX.	4
15-6		I5611-10200	HEX. FLANGE NUT, SAFETY	4
15-7		I6600-06000	GREASE VALVE	2
15-8		E0209-5EA0-9000	CAP, GREASE VALVE	2
15-9		E0700-9KA0-0000	FOOTREST BAR ASSY.(LEFT)	1
15-10		E0706-9KA0-0000	FOOTREST BAR ASSY.(RIGHT)	1
15-11		E040A-5EE0-0700	FEND BAR ASSY FRONT ASSY	1
15-11-1		E0400-5EE0-0700	FEND BAR ASSY FRONT	1
15-11-2		E0707-5EE0-0000	RUBBER PLUG	4
15-12		I0149-08016	FLANGE BOLT, HEX.	4
15-13		E0703-9KA0-0000	FOOTREST REAR BAR (L)	1
15-14		E0705-9KA0-0000	FOOTREST REAR BAR (R)	1
15-15		I0149-06012	FLANGE BOLT, HEX.	6
15-16		E0410-7KA0-0000	BUMPER REAR,ASSY	1
15-17		I7507-FIA0-0000	BOLT, HEX.	8
15-18		I0149-06823-01	BOLT,FLANGE(M6×23)	2
15-19		I5611-06200-0G	HEX. FLANGE NUT, SAFETY	2
15-22		I0149-08012	FLANGE BOLT, HEX.	2


16.FENDER

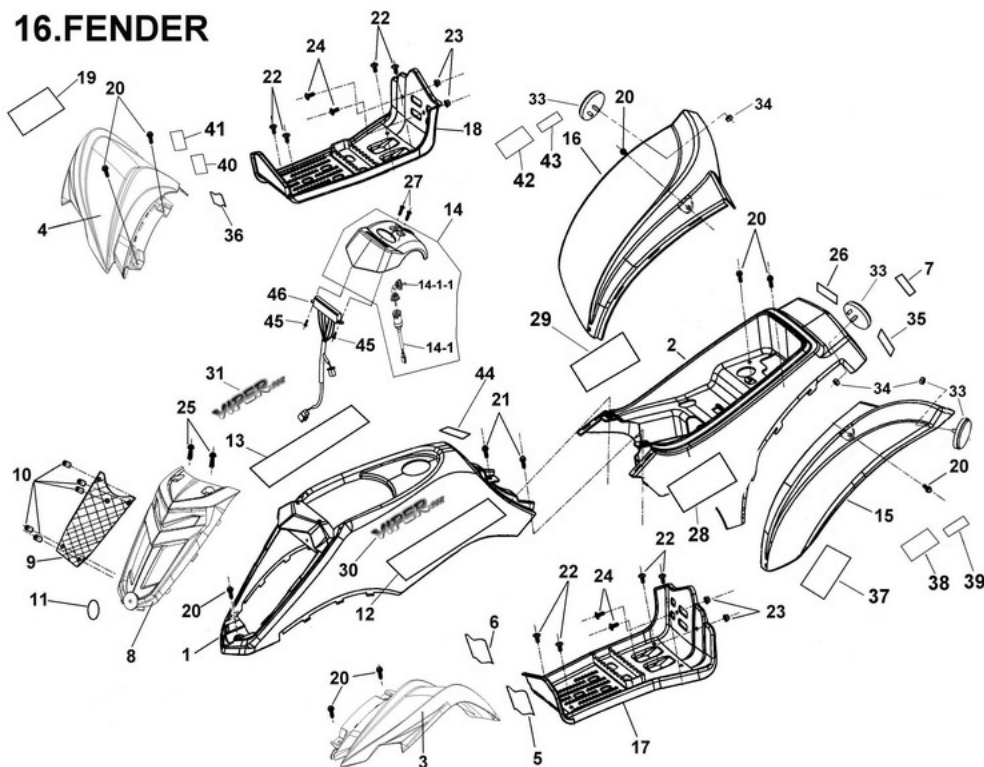

ITEM	AVAIL	PART NO.	NAME	QTY
16			FENDER	
16-1		F4300-5EE0-5400	FRONT BODY COVER(BLUE)	1
16-1		F4300-5EE0-0800	FRONT BODY COVER(BLACK)	1
16-1		F4300-5EE0-0F00	FRONT BODY COVER(PINK)	1
16-2		H3500-5EE0-0F00	REAR BODY COVER (PINK)	1
16-2		H3500-5EE0-5400	REAR BODY COVER (BLUE)	1
16-2		H3500-5EE0-0800	REAR BODY COVER (BLACK)	1
16-3		F1100-9KC0-0F00	FRONT FENDER (L) (PINK)	1
16-3		F1100-9KC0-5400	FRONT FENDER (L) (BLUE)	1
16-3		F1100-9KC0-0800	FRONT FENDER (L) (BLACK)	1
16-4		F1200-9KC0-0800	FRONT FENDER (R) (BLACK)	1
16-4		F1200-9KC0-5400	FRONT FENDER (R) (BLUE)	1
16-4		F1200-9KC0-0F00	FRONT FENDER (R) (PINK)	1
16-5		H7101-FIA0-7000	WARNING LABEL, OPERATE	1
16-6		H7102-9FA0-8000	WARNING LABEL, AGE Y12	1
16-8		F1500-9KC0-0F00	CENTER COVER, FRONT(PINK)	1
16-8		F1500-9KC0-0700	CENTER COVER, FRONT(SILVER)	1
16-8		F1500-9KC0-5400	CENTER COVER, FRONT(BLUE)	1
16-9		F1510-9KC0-0000	CENTER COVER GRILLE, FRONT	1
16-10		E0417-5EE0-0000	FILTER NET PLUG	5
16-11		H7107-5EB0-0000	EMBLEM, E-TON LOGO(SILVER)	1
16-12		H7030-9KC0-0000	FRONT BODY STICKER (L)	1
16-13		H7040-9KC0-0000	FRONT BODY STICKER (R)	1
16-14		E3205-9EF0-0801	COVER,HANDLE BAR(BLACK)	1
16-14-1		C5010-9FA0-0001	MAIN SWITCH COMP	1
16-14-1-1		C5013-9FA0-0000	MATERIAL KEY (RIGHT CUT)	1
16-14-1-2		C5018-9FA0-0000	MATERIAL KEY (LEFT CUT)	1
16-15		H3720-5EE0-0F00	REAR FENDER (L)(PINK)	1
16-15		H3720-5EE0-5400	REAR FENDER (L)(BLUE)	1
16-15		H3720-5EE0-0800	REAR FENDER (L)(BLACK)	1
16-16		H3820-5EE0-0800	REAR FENDER (R)(BLACK)	1
16-16		H3820-5EE0-0F00	REAR FENDER (R)(PINK)	1
16-16		H3820-5EE0-5400	REAR FENDER (R)(BLUE)	1
16-17		H3520-5EE0-0000	FOOTREST,(L)	1
16-18		H3620-5EE0-0000	FOOTREST,(R)	1
16-19		H7045-9KC0-0000	LABEL, FRONT FENDER R	1
16-20		I3414-06012-0H	BOLT WASHER	9
16-21		I0119-06821	BOLT, HEX.	2
16-22		I8310-06020-01	SCREW, OVAL	8


16-23		I5611-06200-0G	HEX. FLANGE NUT, SAFETY	4
16-24		E0117-9EA0-0000	SCREW, TRUSS	4
16-25		I8310-FIA0-0000	PLASTIC SCREW	2
16-26		H7106-5ED0-0000	WARNING STICKER,MUFFLER	1
16-27		I3500-06012-1A	SCREW PAN	2
16-28		H7050-9KC0-0000	STICKER, REAR BODY(L)	1
16-29		H7060-9KC0-0000	STICKER, REAR BODY (R)	1
16-30		H7103-9EF0-0000	STICKER, VIPER-90R (L)	1
16-31		H7104-9EF0-0000	STICKER, VIPER-90R (R)	1
16-35		H7139-FIA0-0000	SPARK ARRESTER DECLARATION	1
16-37		H7055-9KC0-0000	LABEL,REAR FENDER L	1
16-38		H7103-FIA0-9001	WARNING LABLE, TIRE PRESSURE	1
16-39		H7104-FIA0-0000	WARNING LABLE, NO PRASSENGER	1
16-44		H7129-9EF0-0000	STICKER,INDICATE GEAR	1
16-45		I7707-04016	TAPPING SCREW, TRUSS	2
16-46		C7202-9EF0-0000	FUEL METER ASSY.	1

17. SEAT

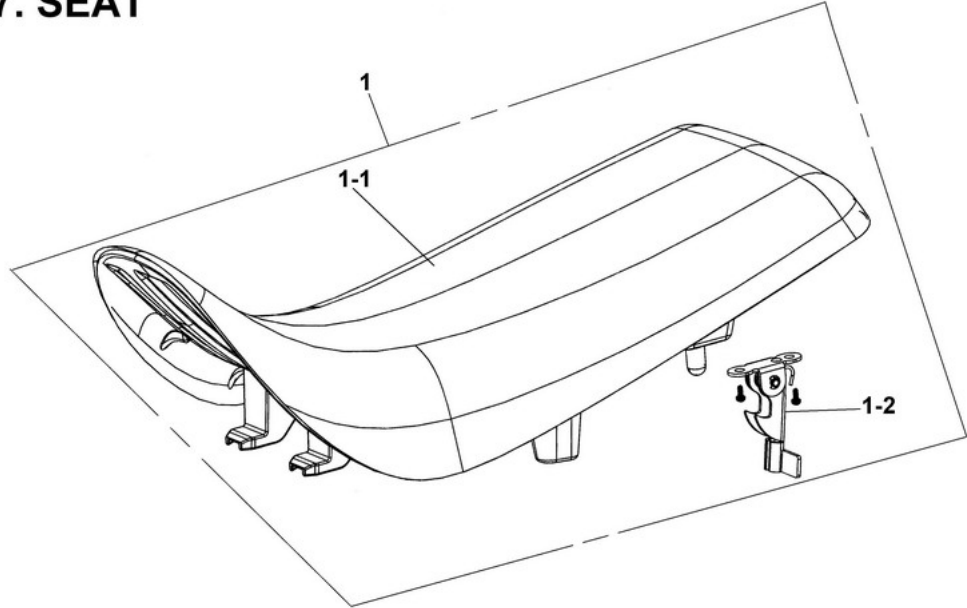


ITEM	AVAIL	PART NO.	NAME	QTY
17			SEAT	
17-1		G720A-5EE0-0700	SEAT ASSY(BLACK/SLIVER)	1
17-1		G720A-5EE0-0800	SEAT ASSY.(BLACK)	1
17-1-1		G7200-5EE0-0700	SEAT (BLACK/SILVER)	1
17-1-1		G7200-5EE0-0800	SEAT (BLACK)	1
17-2		G7201-9ED0-0000	SEAT FIXER,ASSY	1

18. FUEL TANK

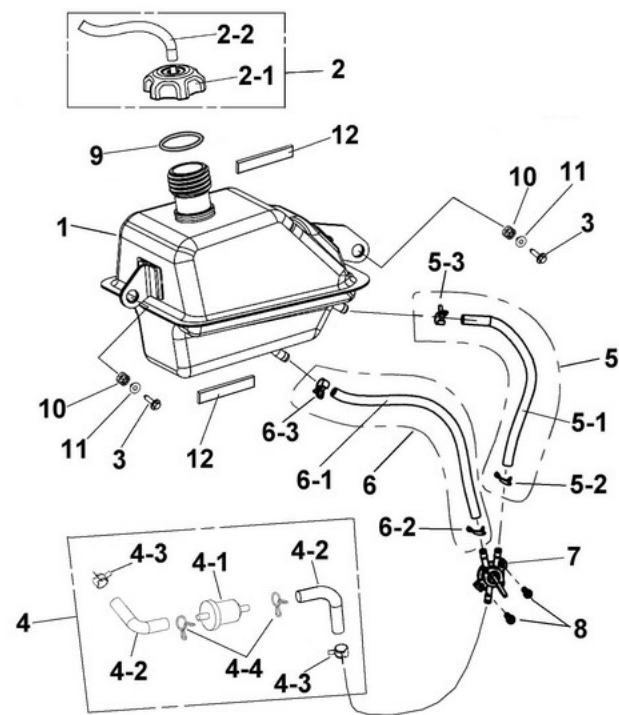


ITEM	AVAIL	PART NO.	NAME	QTY
18			FUEL TANK	
18-1		A7500-9KA0-0000	METAL FUEL TANK	1
18-2		A762A-9KB0-V000	FUEL TANK CAP ASSY.	1
18-2-1		A7620-9KB0-V000	FUEL TANK CAP COMP	1
18-2-2		A7621-9FA0-0000	TUBE, RUBBER	1
18-3		I7507-06225	BOLT, HEX.	2
18-4		A751A-9KA0-9000	FUEL FILTER ASSY	1
18-4-1		A7519-FIA0-1000	FUEL FILTER	1
18-4-2		A7514-9KA0-9000	FUEL TUBE	2
18-4-3		I5002-40850-04	CLAMP, TUBE	2
18-4-4		I5002-50000	CLIP, TUBE	2
18-5		A7501-5EE0-9000	FUEL PIPE COMP(A)	1
18-5-1		I5005-050242-6	RUBBER TUBE	1
18-5-2		I5002-50000	CLIP, TUBE	1
18-5-3		I5002-41200-04	CLIP	1
18-6		A7502-9KA0-9000	FUEL PIPE COMP(B)	1
18-6-1		I5005-050252-6	RUBBER TUBE	1
18-6-2		I5002-50000	CLIP, TUBE	1
18-6-3		I5002-41200-04	CLIP	1
18-7		A7520-5EA0-0000	MANUAL FUEL CUP	1
18-8		I8506-05016	SCREW PAN	2
18-9		A7622-5EA0-0000	RUBBER PAD	1
18-10		F6520-5EE0-0000	DAMPER	2
18-11		G5010-5EE0-0000	COLLAR	2
18-12		F6520-9KC0-0000	DAMPER	2

19. SUSPENSION

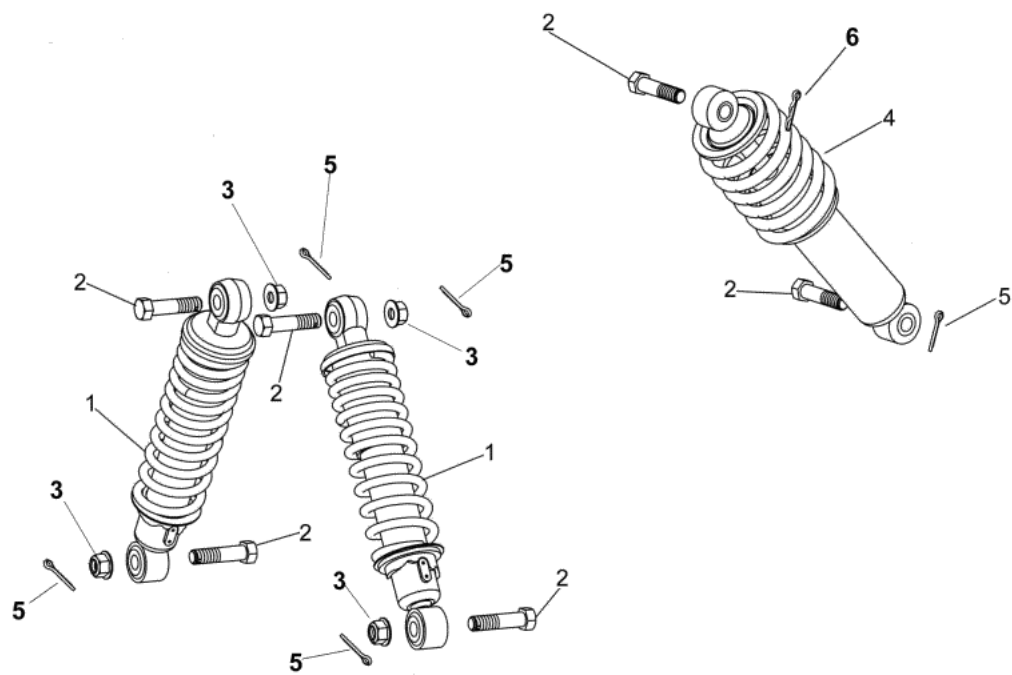


ITEM	AVAIL	PART NO.	NAME	QTY
19			SUSPENSION	
19-1		E1105-7KA0-0700	SUSPENSION, FRONT (SILVER)	2
19-2		I0102-10040	BOLT, HEX	6
19-3		I5701-10500	FLANGE NUT, HEX.	4
19-4		E2400-5EE0-0000	SUSPENSION, REAR	1
19-5		I9900-25019	PIN, SPLIT	5
19-6		I0468-12006	PIN	1

20. FRONT WHEEL

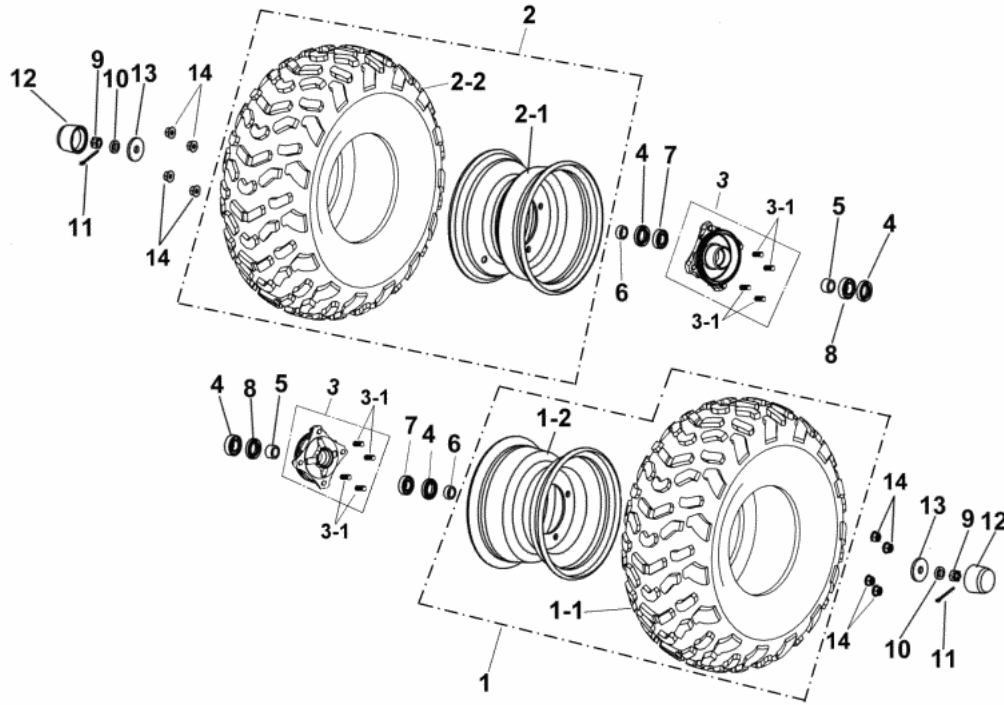

ITEM	AVAIL	PART NO.	NAME	QTY
20			FRONT WHEEL	
20-1		D471A-9EE0-0S00	FRONT WHEEL ASSY.,LEFT(18×7-8)	1
20-1-1		D4710-9EE0-0000	TIRE, FRONT	1
20-1-2		D4601-5EB0-0S00	WHEEL RIM	1
20-2		D471B-9EE0-0S00	FRONT WHEEL ASSY.,RIGHT(18×7-8)	1
20-2-1		D4601-5EB0-0S00	WHEEL RIM	1
20-2-2		D4710-9EE0-0000	TIRE, FRONT	1
20-3		D4610-9EA0-0000	BRAKE DRUM, FRONT	2
20-3-1		D4612-9EA0-0000	BOLT, STUD	8
20-4		I3102-5AC0-0000	OIL SEAL	4
20-5		D4620-5EA0-0000	COLLAR	2
20-6		D4621-5EA0-0000	OUTER SPACER	2
20-7		I6100-6002LLU	BEARING(6002LLU)	2
20-8		I6150-60030-10	BEARING, BALL, RADIAL	2
20-9		I5500-12000	CASTLE NUT	2
20-10		I3000-13000-0C	WASHER	2
20-11		I4201-46325	SPLIT PIN	2
20-12		D4609-5EA0-0001	RUBBER CAP	2
20-13		D4608-5EA0-0000	FRONT WHEEL SHAFT WASHER	2
20-14		D4611-9EA0-0000	FLANGE NUT, HEX.	8

21. REAR WHEEL

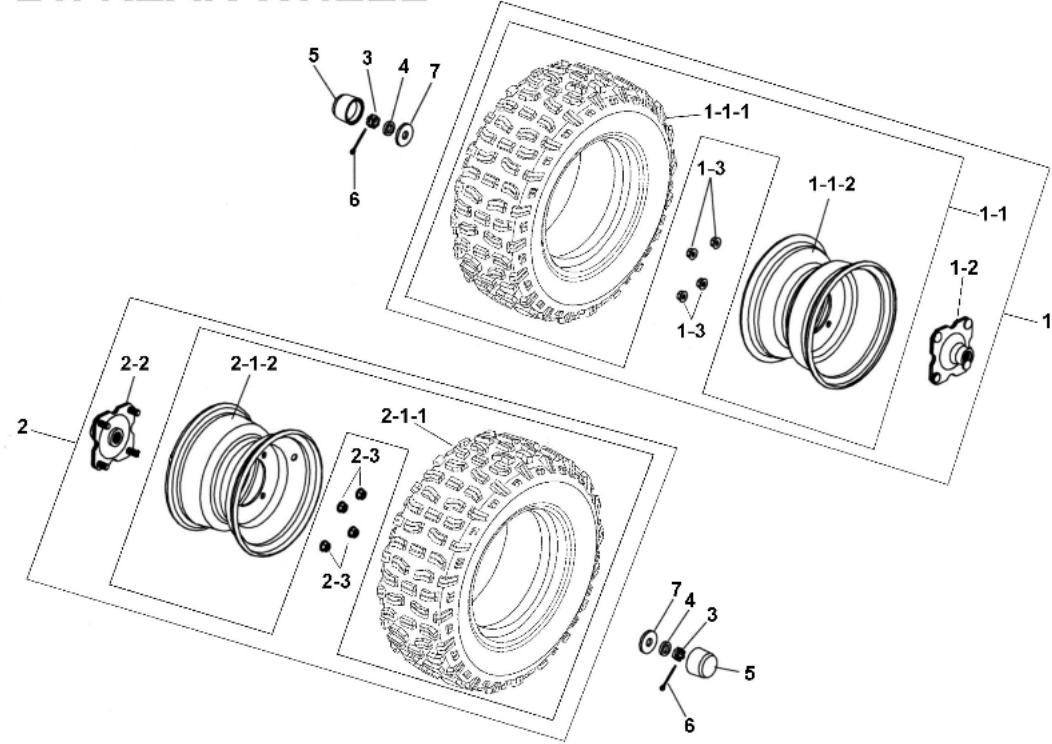

ITEM	AVAIL	PART NO.	NAME	QTY
21			REAR WHEEL	
21-1		D472C-9EE0-0S00	REAR WHELL ASSY	1
21-1-1		D471C-9EE0-0S00	REAR WHEEL COMP	1
21-1-1-1		D4720-9EE0-0000	TIRE, REAR	1
21-1-1-2		D4601-5FA0-0S00	WHEEL RIM	1
21-1-2		D2705-9EA0-1000	SHAFT CONNECTER WITH BOLTS	1
21-1-3		D4611-9EA0-0000	FLANGE NUT, HEX.	4
21-2		D472C-9EE0-0S00	REAR WHELL ASSY	1
21-2-1		D471C-9EE0-0S00	REAR WHEEL COMP	1
21-2-1-1		D4720-9EE0-0000	TIRE, REAR	1
21-2-1-2		D4601-5FA0-0S00	WHEEL RIM	1
21-2-2		D2705-9EA0-1000	SHAFT CONNECTER WITH BOLTS	1
21-2-3		D4611-9EA0-0000	FLANGE NUT, HEX.	4
21-3		I5500-14100	CASTLE NUT	2
21-4		I9905-14200	WASHER	2
21-5		D4609-5EA0-0001	RUBBER CAP	2
21-6		I4201-46325	SPLIT PIN	2
21-7		D2309-5EA0-0000	WASHER	2

The image contains two exploded view diagrams of a rear suspension assembly. The left diagram shows a complete assembly with parts labeled 1 through 13. The right diagram shows a similar assembly with parts labeled 2 through 13, indicating a variation in the lower control arm assembly.

Left Diagram Components:


- 1: Rear wheel hub and brake disc assembly.
- 2: Lower control arm.
- 3: Lower control arm bush.
- 4: Rear wheel hub and brake disc assembly.
- 5: Lower control arm.
- 6: Lower control arm bush.
- 7: Shock absorber.
- 8: Upper control arm.
- 9: Upper control arm bush.
- 10: Lower control arm bush.
- 11: Lower control arm bush.
- 12: Lower control arm bush.
- 13: Rear suspension spring/damper assembly.

Right Diagram Components:

- 2: Lower control arm.
- 3: Lower control arm bush.
- 4: Rear wheel hub and brake disc assembly.
- 5: Lower control arm.
- 6: Lower control arm bush.
- 7: Shock absorber.
- 8: Upper control arm.
- 9: Upper control arm bush.
- 10: Lower control arm bush.
- 11: Lower control arm bush.
- 12: Lower control arm bush.
- 13: Rear suspension spring/damper assembly.


Page 31.

23.REAR BRAKE SYSTEM

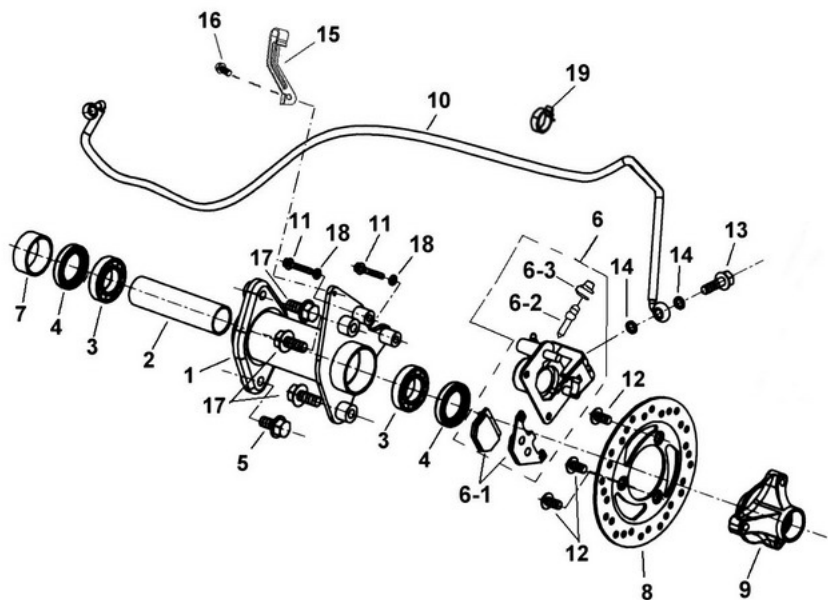


ITEM	AVAIL	PART NO.	NAME	QTY
23			REAR BRAKE SYSTEM	
23-1		D2310-5EE0-0000	REAR WHEEL BEARING SEAT ASSY	1
23-2		D2311-5EA0-0000	SPACER	1
23-3		I6100-6006ZZ	BEARING, BALL RADIAL	2
23-4		D2313-9EA0-0000	OIL SEAL	2
23-5		I0141-12025-01	FLANGE BOLT, HEX.	1
23-6		G7130-5EE0-0000	BRAKE CALLIPER	1
23-6-1		G7131-5EE0-0000	BRAKE SHOE COMP	1
23-6-2		G7132-5EE0-0000	BOLT LEAKAGE	1
23-6-3		G7133-BCA0-0000	CAP LEAKAGE	1
23-6-4		G7139-5EE0-0000	SPRING,PAO	1
23-6-5		G7134-5EE0-0000	RING,SEAL	1
23-6-6		G7136-5EE0-0000	PISTON, BRAKE CALIPER	1
23-6-7		G7135-5EE0-0000	RING,DUST RESISTANT	1
23-6-8		G71C1-5EE0-0000	BOOT	1
23-6-9		G71C2-5EE0-0000	BOOT	1
23-6-10		G71C3-5EE0-0000	BRACKET, CALLIPER	1
23-7		D0114-9EA0-0000	SPACER	1
23-8		D3520-FIA0-0000	BRAKE DISK	1
23-9		D3251-5EE0-0000	BRAKE DISK MOUNTING SEAT	1
23-10		D3210-5EE0-0000	BRAKE OIL TUBE	1
23-11		I0105-08035	BOLT FLANGE	2
23-12		I0110-10811	BOLT, SOCKET	3
23-13		I0401-10034	FLANGE BOLT, HEX.	1
23-14		I0201-10118	WASHER	2
23-15		G7111-BCA0-0000	BRAKE FUEL TUBE, CLIP	1
23-16		I0149-06012	FLANGE BOLT, HEX.	1
23-17		I0141-12028-01	BOLT FLANGE	3
23-18		I9901-08100	WASHER, SPRING	2
23-19		D3211-9KA0-0000	CLIP	1

24. HANDLE BAR

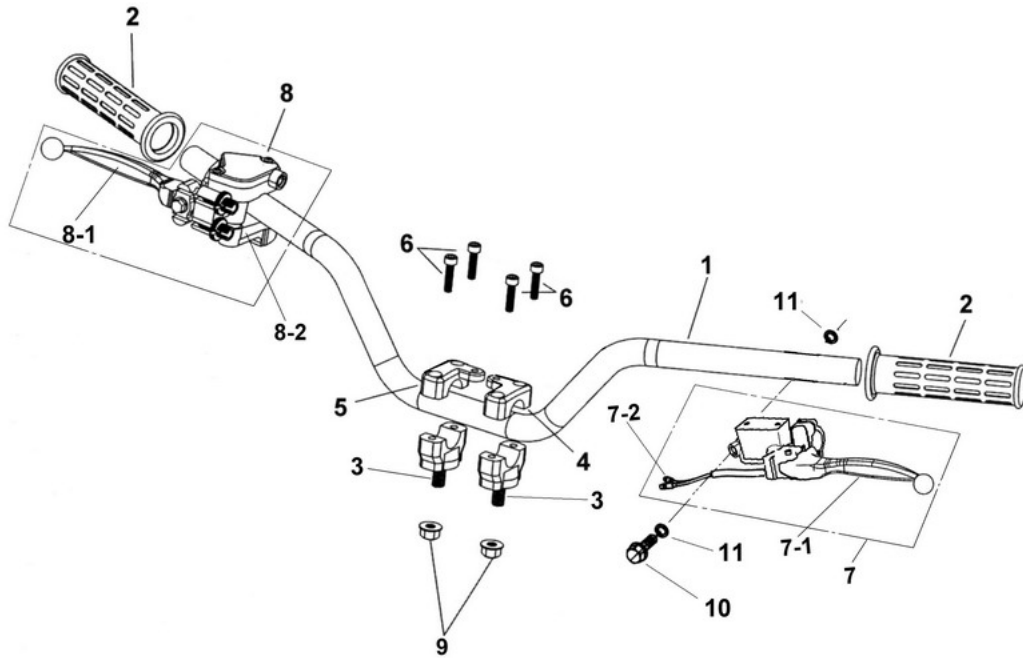

ITEM	AVAIL	PART NO.	NAME	QTY
24			HANDLE BAR	
24-1		E3100-9KC0-0000	HANDLE BAR ASSY.	1
24-2		E3166-5EA0-0000	GRIP	2
24-3		E3112-5EA0-0000	BOTTOM,HANDLE BAR CLAMP	2
24-4		E3110-5EA0-0000	CAP,HANDEL BAR CLAMP(L)	1
24-5		E3111-5EA0-0000	CAP,HANDEL BAR CLAMP(R)	1
24-6		I0050-06025	BOLT, SOCKET	4
24-7		D3200-5EG0-0000	BRAKE MASTER CYLINDER,LEFT	1
24-7-1		D6110-9KB0-0000	BRAKE LEVER, LEFT	1
24-7-2		D3202-FIA0-0000	BRAKE SWITCH ASSY.	1
24-7-3		D3208-5EG0-0000	FIXED SUPPORT COMP	1
24-8		E3180-FIA0-0000	LEVEL ASSY., RIGHT	1
24-8-1		E3181-5FA0-0000	LEVEL SET,RIGHT	1
24-8-2		E319A-5FA0-0000	LEVEL ACCELERATE	1
24-8-3		E3183-FIA0-0000	COVER LEVER	1
24-8-4		E3188-FIA0-0000	GASKET	1
24-8-5		I8506-04016	SCREW,PAN HEAD	2
24-9		I5611-10200	HEX. FLANGE NUT, SAFETY	2
24-10		I0401-10034	FLANGE BOLT, HEX.	1
24-11		I0201-10118	WASHER	2

25.REAR WHEEL AXLE

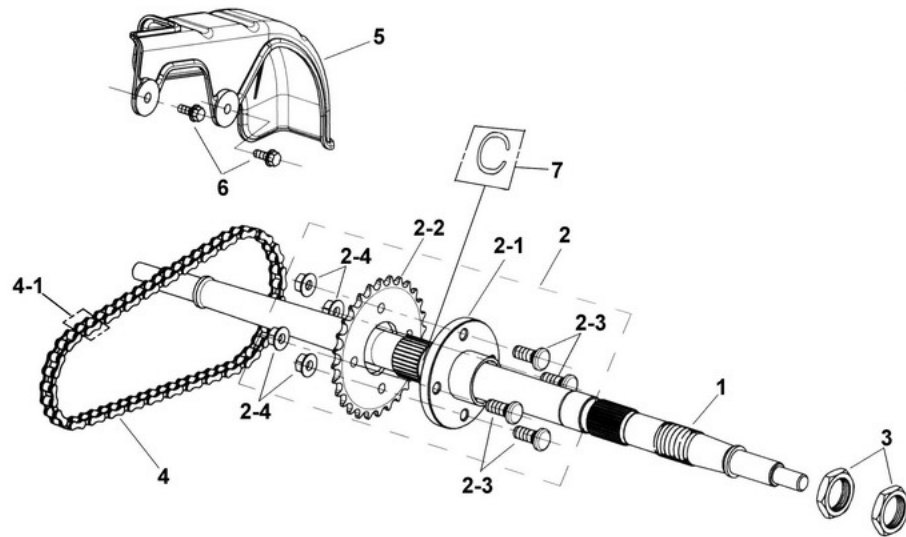


ITEM	AVAIL	PART NO.	NAME	QTY
25			REAR WHEEL AXLE	
25-1		D2300-9KC0-0000	REAR AXLE	1
25-2		D0110-9KC0-0000	DRIVE CHAIN ASSY	1
25-2-1		D0111-9KC0-0000	SPROCKET HOLDER, REAR	1
25-2-2		D1111-9EA0-0000	GEAR(28T)	1
25-2-3		D2706-9EA0-0000	BOLT	4
25-2-4		I5611-10200	HEX. FLANGE NUT, SAFETY	4
25-2-4		I5611-10200	HEX. FLANGE NUT, SAFETY	4
25-3		D2302-9EA0-0000	NUT, HEX.	2
25-4		D0100-9EA0-0000	DRIVE CHAIN COMP	1
25-4-1		D0104-9EA0-0000	DRIVE CHAIN LINK(#520)	1
25-4-2		D0105-9EA0-0000	DRIVE CHAIN	1
25-5		D0510-5EE9-0000	DRIVE CHAIN COVER	1
25-6		I0149-08016	FLANGE BOLT, HEX.	2
25-7		D2303-9KC0-0000	AXLE CLIP, REAR	1

This exploded view diagram illustrates the assembly of a mechanical component, likely a pump or motor housing. The main housing (1) is shown with its internal components (1-1, 1-2) and a shaft (2). A separate assembly (12) is shown being attached to the top of the housing. Other components include a base plate (3), a cover (6), and various fasteners (4, 5, 7, 8, 9, 10, 11, 13, 14, 15). A detailed view of the shaft assembly (10) is provided, showing the shaft (10-1) and a key (10-2).


Page 35.

27. STEERING SYSTEM

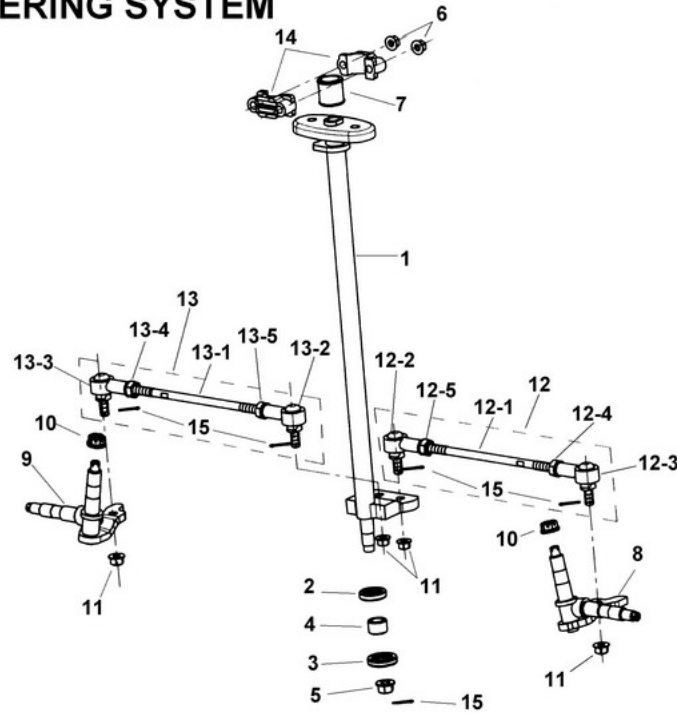


ITEM	AVAIL	PART NO.	NAME	QTY
27			STEERING SYSTEM	
27-1		E3200-5EA0-9000	SHAFT ASSY., STEERING	1
27-2		E3201-5EA0-0000	OIL SEAL	1
27-3		I3102-5AC0-0000	OIL SEAL	1
27-4		D4620-5EA0-0000	COLLAR	1
27-5		I5611-14200	HEX. FLANGE NUT, SAFETY	1
27-6		I5611-08200	HEX. FLANGE NUT, SAFETY	2
27-7		E3225-5EA0-0000	PU LINER	1
27-8		E0205-4HA0-0000	LEFT, KNUCKLE	1
27-9		E0215-4HA0-0000	RIGHT, KNUCKLE	1
27-10		I5550-20000	NUT	2
27-11		I5611-10200	HEX. FLANGE NUT, SAFETY	4
27-12		E0258-5EA0-0000	STEERING TIE-ROD ASSY., LEFT	1
27-12-1		E0251-5EA0-0000	BOLT, STUD	1
27-12-2		E0255-FIA0-0000	UNIVERSAL JOINT(L)	1
27-12-3		E0256-FIA0-0000	UNIVERSAL JOINT(R)	1
27-12-4		E0252-5EA0-0000	NUT (R)	1
27-12-5		E0253-5EA0-0000	NUT (L)	1
27-13		E0259-5EA0-0000	STEERING TIE-ROD ASSY., RIGHT	1
27-13-1		E0251-5EA0-0000	BOLT, STUD	1
27-13-2		E0255-FIA0-0000	UNIVERSAL JOINT(L)	1
27-13-3		E0256-FIA0-0000	UNIVERSAL JOINT(R)	1
27-13-4		E0252-5EA0-0000	NUT (R)	1
27-13-5		E0253-5EA0-0000	NUT (L)	1
27-14		E3202-9FA0-0000	HOLDER, STEERING COLUMN	2
27-15		I9900-25019	PIN, SPLIT	5

28.ELECTRICAL EQUIPMENT

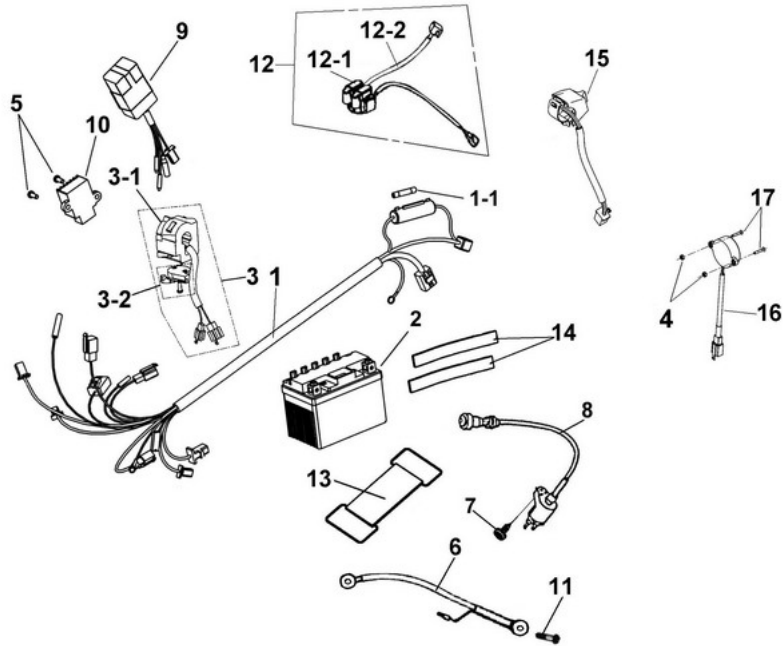

ITEM	AVAIL	PART NO.	NAME	QTY
28			ELECTRICAL EQUIPMENT	
28-1		C2100-9KD0-0000	MAIN WIRE ASSY.	1
28-1-1		C2010-5EA0-0000	FUSE(7A)	1
28-2		C1500-9FA0-0000	BATTERY	1
28-3		C5200-9KC0-0000	LEVER HOLDER ASSY., LEFT	1
28-3-1		C5201-9KC0-0000	LEVER HOLDER, LEFT	1
28-3-2		C5202-5EE0-0000	AIR CUT, LEVER	1
28-4		I2020-30001	NUT, NYLON	2
28-5		I8506-05016	SCREW PAN	2
28-6		C2102-9KA0-0000	EARTH CABLE	1
28-7		I3401-05020-07	BOLT, HEX.	1
28-8		C0510-A26-3000	COIL COMP IGN	1
28-9		C0410-A25-9000	C.D.I. UNIT ASSY.	1
28-10		C1600-B00-0000	RECTIFIER COMP REGULATE	1
28-11		I0153-06012	SCREW	1
28-12		C585A-LRA0-0000	REALY ASSY, START	1
28-12-1		C5850-LRA0-0000	START RELAY	1
28-12-2		C2101-LRA0-0000	POSITIVE CABTE	1
28-13		C1502-9ED0-0000	FIX STRIP(175L)	1
28-14		C1501-9FA0-0000	FOAM STICK, BATTERY	2
28-15		C5300-9EF0-0000	SHIFT SWITCH	1
28-16		C8400-EMA0-0000	BUZZER	1
28-17		I2600-03015	SCREW PAN	2

29.PACKING CACE, EXTERNAL

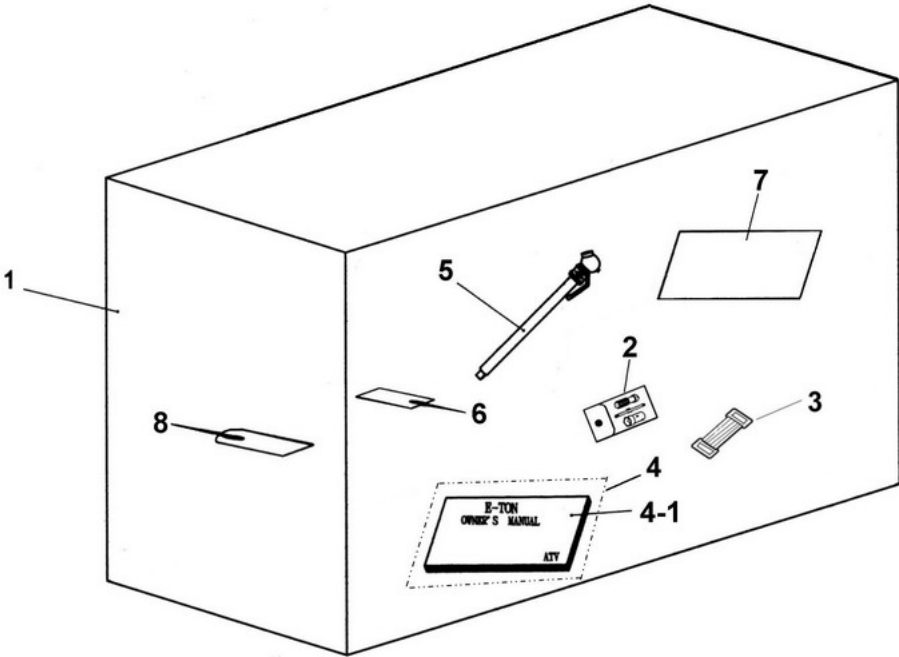


ITEM	AVAIL	PART NO.	NAME	QTY
29			PACKING CASE, EXTERNAL	
29-1		H9500-9KA0-0000	PACKING CASE,EXTERNAL	1
29-2		H9020-9KB0-0000	TOOL SET	1
29-3		H9021-9FA0-0000	WIRE CLAMP	1
29-4		H990A-9KC0-0001	OWNER'S MANUAL ASSY	1
29-5		H9022-5EA0-0000	PRESSURE METER	1
29-6		H9910-7KA0-0000	CONSUMER HANG TAP	1
29-8		H9911-9KC0-0000	TAG, WARNING	1

No picture.

ITEM	AVAIL	PART NO.	NAME	QTY
30			MANUAL CHOKE KIT	
30-1		A611A-9KA0-0000	MANUAL CHOKE KIT	1
30-1-1		A0001-A26-9000	MANUAL CHOKE COMP 1	1
30-1-2		A7920-A26-9000	CABLE, AIR CUT	1
30-1-3		C5200-9KC0-0000	LEVER HOLDER ASSY., LEFT	1
30-1-3-1		C5201-9KC0-0000	LEVER HOLDER, LEFT	1
30-1-3-2		C5202-5EE0-0000	AIR CUT, LEVER	1

31.ACCESSORIES

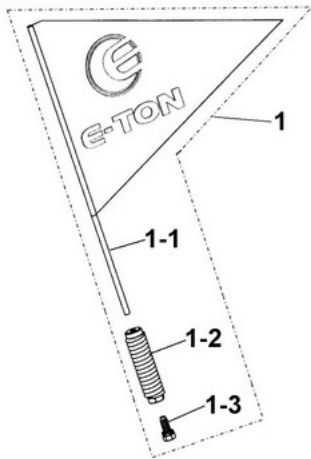

ITEM	AVAIL	PART NO.	NAME	QTY
31			ACCESSORIES	
31-1		H840A-9EF0-0000	FLAG HOLDER ASSY	1
31-1-1		H8401-9EF0-0000	FLAG HOLDER	1
31-1-2		H8402-9EF0-0000	FLAG HOLDER SEAT	1
31-1-3		I3415-08016-0C	BOLT HEXAGON HEAD WITH WASHER	1

No picture.

ITEM	AVAIL	PART NO.	NAME	QTY
32			SERVICE KITSBRAKE CALIPER	
32-1		G7137-5EE0-0000	SERVICE KITS, BRAKE CALIPER	1
32-1-1		G7134-5EE0-0000	RING,SEAL	1
32-1-2		G7135-5EE0-0000	RING,DUST RESISTANT	1
32-1-3		G7136-5EE0-0000	PISTON, BRAKE CALIPER	1
32-1-4		G7138-5EE0-0000	BRAKE SHOE ASSY	1
32-1-4-1		G7131-5EE0-0000	BRAKE SHOE COMP	1
32-1-4-2		G7139-5EE0-0000	SPRING,PAO	1