

PARTS CATALOGUE

VECTOR ST 300 VXL-300 ST



CONTENTS


PARTS ITEM:

- 01 HEAD COVER
- 02 CYLINDER HEAD COMP
- 03 CYLINDER ASSY.
- 04 L COVER ASSY.
- 05 L CRANK CASE
- 06 R CRANK CASE
- 07 R CASE COVER
- 08 MOVABLE DRIVE FACE
- 09 CRANK SHAFT
- 10 AC GEN FLYWHEEL
- 11 BALANCE SHAFT
- 12 MISSION CASE
- 13 OIL PUMP ASSY.
- 14 CYL. HEAD SIDE COVER ASSY.
- 15 DRIVEN PULLEY SET
- 16 A.I.C.V. ASSY.
- 17 CARBURETOR ASSY
- 18 GEAR SHAFT LEVER, SAFETY SWITCH
- 19 AIR CLEANER
- 20 CABLE
- 21 WATER COOLER
- 22 ENGINE
- 23 MUFFLER
- 24 FRAME
- 25 FENDER
- 26 SWING ARM
- 27 SEAT

- 28 FUEL TANK
- 29 SUSPENSION
- 30 FRONT WHEEL
- 31 REAR WHEEL
- 32 FRONT BRAKE SYSTEM
- 33 REAR BRAKE SYSTEM
- 34 HANDLE BAR
- 35 BUMPER, FOOTREST
- 36 REAR WHEEL AXLE
- 37 STEERING
- 38 ELECTRICAL EQUIPMENT
- 39 PACKING CASE,EXTERNAL
- 40 ACCESSORIES
- 41 SERVICE KITS,BRAKE CALLIPER
- 42 TOOL


N & sign meaning: not available to sale

1. HEAD COVER

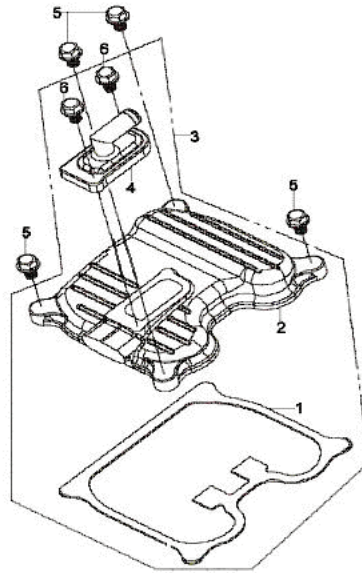


ITEM	AVAIL	PART NO.	NAME	QTY
01			HEAD COVER	
01-1		A2391-HMA-0000	HEAD COVER PACKING	1
01-2		A2301-HMA-0000	CYLINDER HEAD COVER	1
01-3		A230A-RCA-0000	CYL. HEAD COVER ASSY.	1
01-4		A8610-RCA-0000	REED VALVE COMP	1
01-5		I0002-HMA-0000	HEAD COVER BOLT	4
01-6		I6001-06016-00	FLANGE BOLT SH 6X16	2

2. CYLINDER HEAD COMP

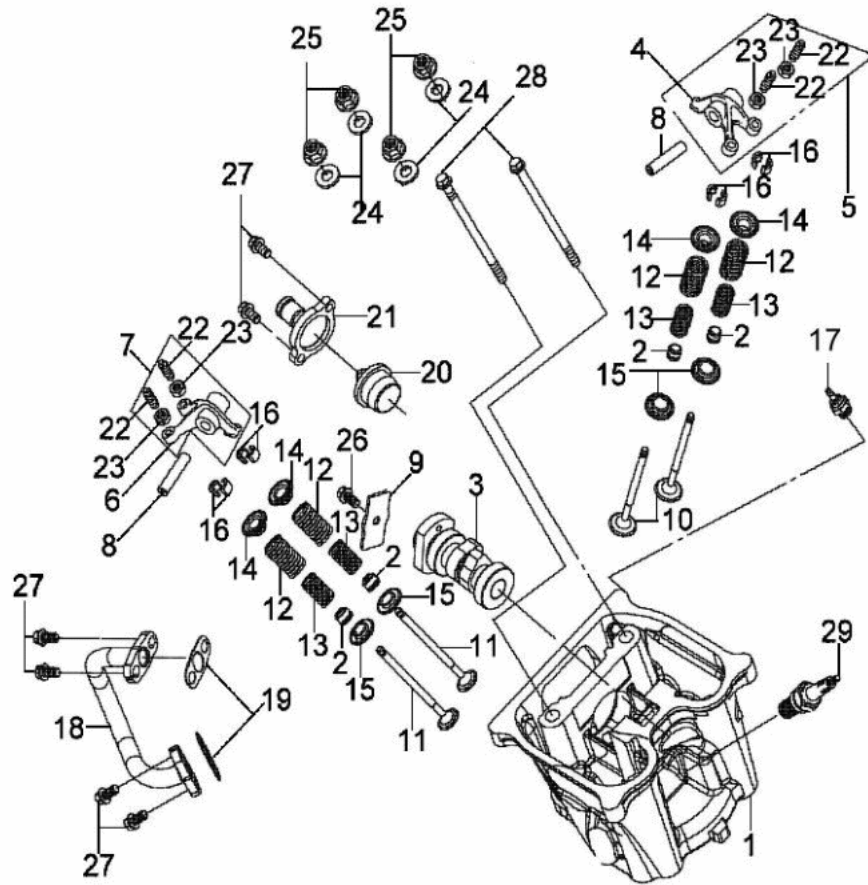

ITEM	AVAIL	PART NO.	NAME	QTY
02			CYLINDER HEAD COMP	
02-1		A2200-RFA-0000	CYLINDER HEAD COMP	1
02-2		A2209-H6B-9000	VALVE STEM SEAL	4
02-3		A4100-RFB-0000	CAM SHAFT COMP	1
02-4	N	A4431-RFA-0000	IN. VALVE ROCKER ARM	1
02-5		A443A-RFA-0000	IN. VALVE ROCKER ARM ASSY.	1
02-6	N	A4441-RFA-0000	EX. VALVE ROCKER ARM	1
02-7		A444A-RFA-0000	EX. VALVE ROCKER ARM ASSY.	1
02-8		A4451-HMA-0000	ROCKER ARM SHAFT	2
02-9		A4457-HMA-0000	CAM SHAFT SETTING PLATE	1
02-10		A4711-HMA-0000	IN. VALVE	2
02-11		A4721-HMA-0000	EX. VALVE	2
02-12		A4751-HMA-0000	VALVE OUTER SPG.	4
02-13		A4761-HMA-0000	VALVE INNER SPG.	4
02-14		A4771-M8Q-0000	VALVE SPRING RETAINER	4
02-15		A4777-KN7-6700	VALVE SPRING SEAT	4
02-16		A4781-M9Q-0000	VALVE COTTER	8
02-17		C7750-PC1-0000	THERMO UNIT ASSY	1
02-18		A8647-RB1-0000	AIR PIPE COMP	1
02-19		A8654-N14-0000	AIR PIPE GASKET	2
02-20		A9300-HMA-0000	THERMOSTAT ASSY.	1
02-21		A9315-KJ9-0000	THERMOSTAT COVER COMP	1
02-22		I0012-HLK-0000	TAPPET ADJUSTING SCREW	4
02-23		I0206-HLK-0000	TAPPET ADJUSTING SCREW NUT	4
02-24		I0442-HMA-0000	SEALING WASHER 10.5MM	4
02-25		I4050-10080	FLANGE NUT 10MM	4
02-26		I6001-06014-08	FLANGE BOLT 6*14	1
02-27		I6001-06016-00	FLANGE BOLT SH 6X16	6
02-28		I6001-06090-00	FLANGE SH BOLT 6*90	2
02-29		I8000-RB1-0000	SPARK PLUG (CR8E)	1

3. CYLINDER ASSY.

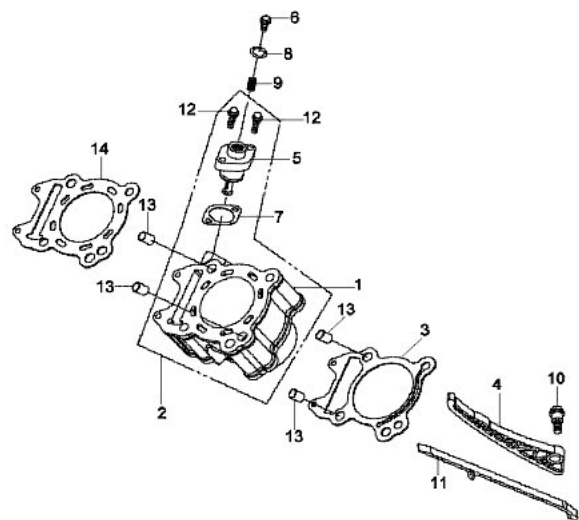


ITEM	AVAIL	PART NO.	NAME	QTY
03			CYLINDER ASSY.	
03-1		A2100-RFA-0000	CYLINDER COMP	1
03-2		A210A-RFA-0000	CYLINDER ASSY.	1
03-3		A2191-RFA-0000	CYLINDER GASKET	1
03-4		A4510-RFA-0000	CAM CHAIN TENSIONER	1
03-5		A4520-H6T-0000	TENSIONER LIFTER ASSY.	1
03-6		A4522-H6T-0000	ADJUSTER BOLT	1
03-7		A4523-M9Q-0000	TENSIONER LIFTER GASKET	1
03-8		A4524-H6T-0000	O-RING	1
03-9		A4525-H6T-0000	ADJUSTER SPRING	1
03-10		A4531-KJ9-0000	CAM CHAIN TENSIONER PIVOT	1
03-11		A4610-RFA-0000	CAM CHAIN GUIDE	1
03-12		I0001-M9Q-0000	FLANGE SHF BOLT 6*22	2
03-13		I4301-12200	DOWEL PIN 12*20	4
03-14		A2251-RFA-0000	CYLINDER HEAD GASKET	1

This exploded view diagram illustrates the assembly of a mechanical unit, possibly a pump or motor. The components are labeled as follows:

- 1**: Main housing or frame.
- 2**: A small rectangular plate or cover.
- 2-1** and **2-2**: Small circular components, possibly O-rings or seals, associated with part 2.
- 3**: A small cylindrical component, likely a pin or bolt.
- 4**: A large, elongated, oval-shaped gasket or seal.
- 5**: A small circular component, possibly a pin or bolt, associated with part 4.
- 1-1** through **1-17**: Various internal components and sub-assemblies, including:
 - 1-1**: A small rectangular component.
 - 1-2**: A small circular component.
 - 1-3**: A small rectangular component.
 - 1-4**: A large, circular, spiral-shaped component, possibly a spring or a fan.
 - 1-5**: A large, circular, spiral-shaped component, possibly a spring or a fan.
 - 1-6**: A large, circular, spiral-shaped component, possibly a spring or a fan.
 - 1-7**: A small circular component.
 - 1-8**: A small circular component.
 - 1-9**: A small circular component.
 - 1-10**: A small circular component.
 - 1-11**: A small circular component.
 - 1-12**: A small circular component.
 - 1-13**: A small circular component.
 - 1-14**: A small circular component.
 - 1-15**: A small circular component.
 - 1-16**: A small circular component.
 - 1-17**: A small circular component.
- 6**: A small circular component, possibly a pin or bolt, shown in multiple locations.


Page 7.

5. L CRANK CASE

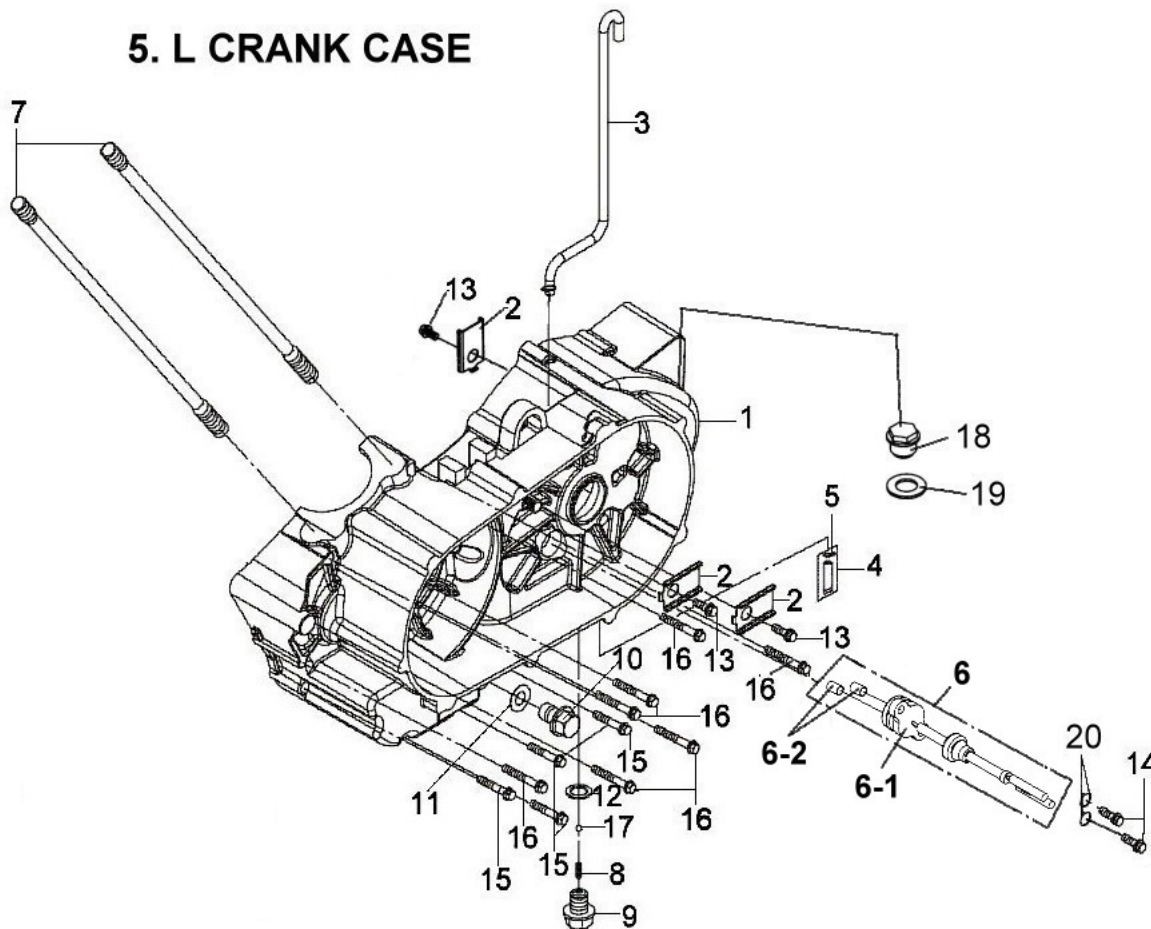


ITEM	AVAIL	PART NO.	NAME	QTY
05			L CRANK CASE	
05-1		A1200-RFB-0000	L CRANK CASE COMP	1
05-2		A1205-RB1-0000	SETTING PLATE	3
05-3		A1221-RB1-0000	MISSION BREATHER TUBE	1
05-4		A1230-RA1-0000	DRAIN TUBE ASSY.	1
05-5		A5772-500-0000	TUBE CLIP	1
05-6		C575A-RB1-0200	CHANGE SW. SET	1
05-6-1		C5759-RB1-0200	CHANGE SW. COMP	1
05-6-2		C5751-RB1-0200	CHANGE SW. COLLAR	2
05-7		I0032-HMA-0000	CYLINDER STUD BOLT B	2
05-8		I0051-RB1-0000	SPRING FIXED CATCH	1
05-9		I0052-RB1-0000	SCREW FIXING	1
05-10	N	I2800-12000	DRAIN PLUG BOLT 12MM	1
05-11		I4109-12000	DRAIN PLUG WASHER 12MM	1
05-12		I4109-14000	DRAIN PLUG WASHER 14MM	1
05-13		I6001-06012-00	SH. FLANGE BOLT 6*12	3
05-14		I6001-06018-00	FLANGE BOLT SH 6*18	2
05-15		I6001-06050-00	FLANGE SH BOLT 6X50	4
05-16		I6001-06070-00	SH. FLANGE BOLT 6*70mm	7
05-17		I6211-12000	STELL BALL 12	1
05-18		A1206-RB1-0000	L. CASE SEALING BOLT	1
05-19		I0403-RB1-0000	L. CASE SEALING WASHER	1
05-20		I4101-06800	PLAIN WASHER 6mm	2

6. R CRANK CASE

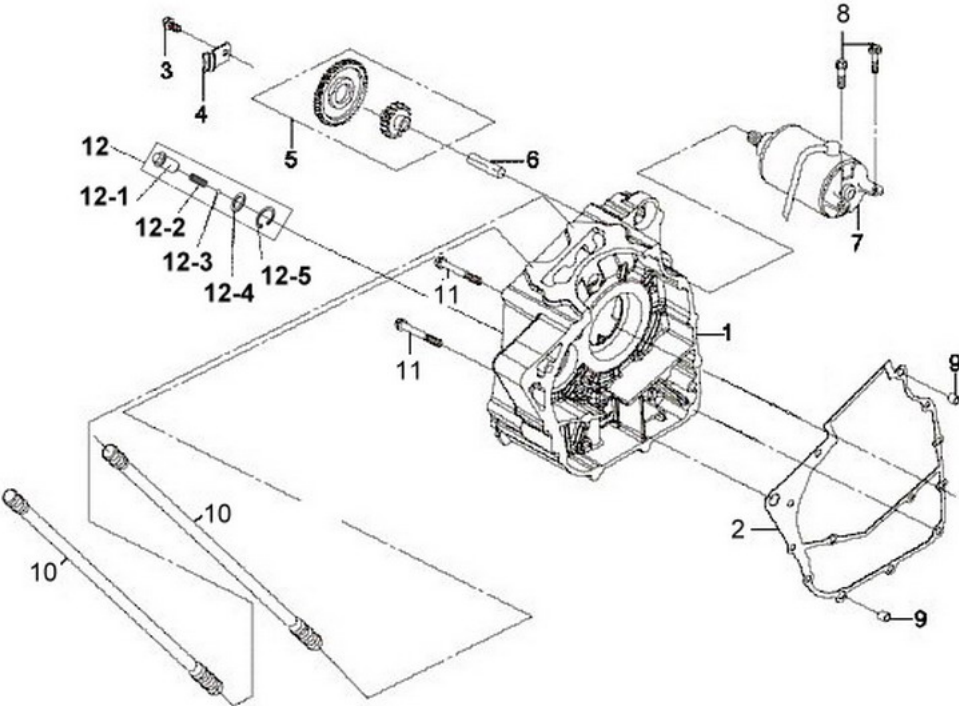


ITEM	AVAIL	PART NO.	NAME	QTY
06			R CRANK CASE	
06-1		A1100-RFA-0000	R CRANK CASE COMP	1
06-2		A1191-RB1-0000	CRANK CASE GASKET	1
06-3		I6001-06010-08	FLANGE BOLT SH 6*10	1
06-4		A4151-RFA-0000	CAM CHAIN SETTING PLATE	1
06-5		B8101-RB1-0000	STAR. REDUCTION GEAR COMP	1
06-6		B8102-RB1-0000	STA. REDUCTION GEAR SHAFT	1
06-7		C1200-RB1-0000	START MOTOR ASSY.	1
06-8		I6001-06022-00	FLANGE BOLT SH 6*22	2
06-9		I4301-08140	KNOCK PIN	2
06-10		I0031-HMA-0000	CYLINDER STUD BOLT A	2
06-11		I6001-06055-00	BOLT FLANGE SH 6*55	2
06-12		A5200-HMA-0000	OIL RELIEF VALVE ASSY.	1
06-12-1		A5201-HMA-0000	OIL RELIEF VALVE	1
06-12-2		A5203-HMA-0000	OIL RELIEF SPRING	1
06-12-3		I6211-14000	STEEL BALL 14	1
06-12-4		A5202-HMA-0000	OIL RELIEF WASHER	1
06-12-5		I4520-12000	IN. CIRCLIP 12mm	1

7. R CASE COVER

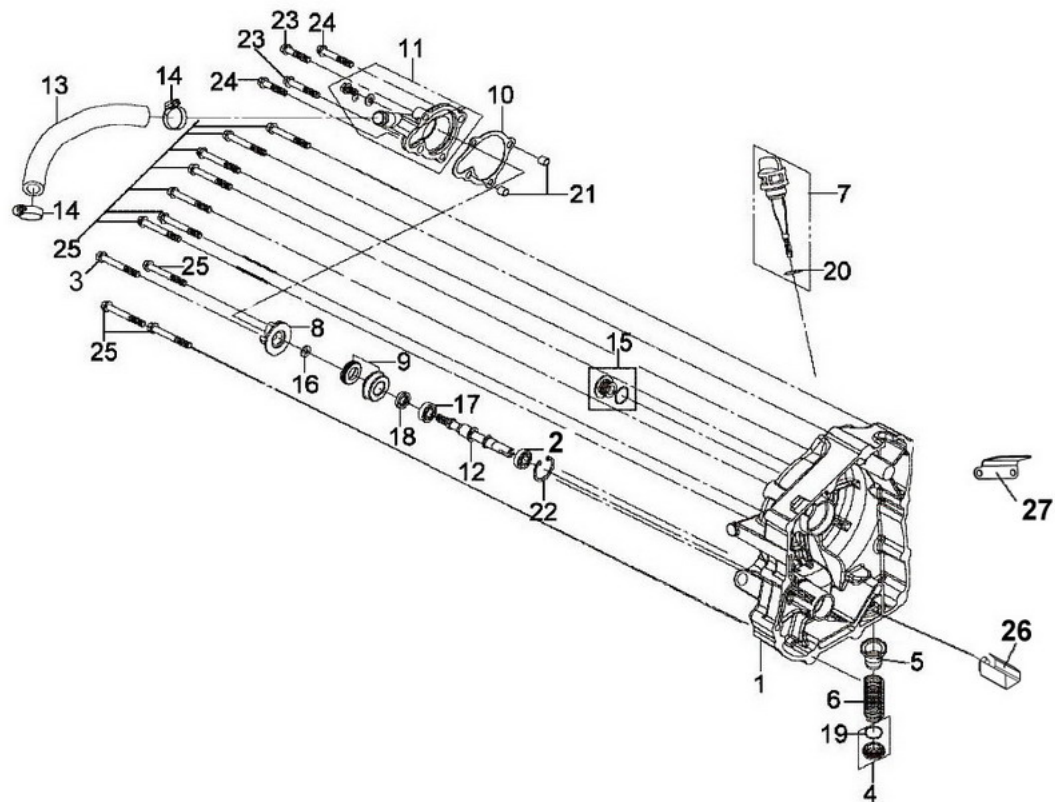

ITEM	AVAIL	PART NO.	NAME	QTY
07			R CASE COVER	
07-1		A1330-RB1-0000	R CASE COVER COMP	1
07-2		I6100-60000-00	RADIAL BALL BRG. 6000	1
07-3		I6001-06070-00	SH. FLANGE BOLT 6*70mm	1
07-4		A236A-V02-0000	TAPPET ADJ HOLE CAP ASSY.	1
07-5		A5421-M9Q-0000	OIL FILTER SCREEN	1
07-6		A5426-M9Q-0000	OIL FILTER SCREW SPG.	1
07-7		A565A-RB1-0000	OIL LEVEL GAUGE ASSY.	1
07-8		A9215-HLA-0000	WATER PUMP IMPELLER	1
07-9		A9217-H9A-3000	MECHANICAL SEAL	1
07-10		A9229-H9A-0000	WATER PUMP GASKET	1
07-11		A922A-HLA-0000	WATER PUMP COVER COMP	1
07-12		A9231-HMA-0000	WATER PUMP SHAFT	1
07-13		A9502-RB1-0000	WATER HOSE	1
07-14		A9505-KS6-7000	WATER HOSE CLAMP A	2
07-15		I008A-H9A-0000	ACG. CAP ASSY. 14MM	1
07-16		I0423-KJ9-0000	WASHER 7.2*13*1.2	1
07-17		I1001-KJ9-0000	RADIAL BALL BRG.6901	1
07-18		I1205-KF0-0000	OIL SEAL 12*20*5	1
07-19		I1302-M9Q-0000	O-RING 30.8MM	1
07-20	N	I1307-M9Q-0000	O-RING 18*3	1
07-21		I4301-08140	KNOCK PIN	2
07-22		I4520-26000	CIR CLIP IN 26	1
07-23		I6001-06022-00	FLANGE BOLT SH 6*22	2
07-24		I6001-06032-00	FLANGE SH BOLT 6X32	2
07-25		I6001-06045-00	FLANGE BOLT SH 6*45	10
07-26		A1107-HMA-0000	MAGNET PLATE	1
07-27		A5713-HMA-0000	OIL BAFFLE PLATE	1

8.MOVABLE DRIVE FACE

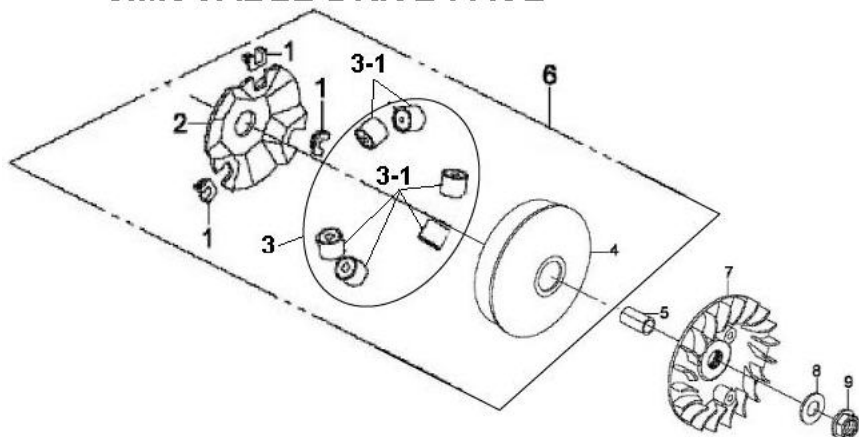


ITEM	AVAIL	PART NO.	NAME	QTY
08			MOVABLE DRIVE FACE	
08-1		B2132-HMA-0000	SLIDE PIECE	3
08-2		B2131-HMA-0000	RAMP PLATE	1
08-3		A0001-RB1-0000	WEIGHT ROLLER COMP	1
08-3-1		B2121-RB1-0000	WEIGHT ROLLER	6
08-4		B2110-HMA-0000	MOVABLE DRIVE FACE COMP.	1
08-5		B2105-HMA-0000	DRIVE FACE BOSS	1
08-6		B2000-RB1-0000	MOVABLE DRIVE FACE ASSY.	1
08-7		B2102-HMA-0000	DRIVE FACE	1
08-8		I0401-KJ9-0000	THRUST WASHER 14*28*2	1
08-9		I0201-KR8-0000	FLANGE NUT 14MM	1

This exploded view diagram illustrates the assembly of a mechanical device, likely a pump or motor. The components are numbered 1 through 16. The main housing (1) is shown in the center. The front cover (2) is positioned to the left, containing three circular openings. The rear cover (3) is positioned to the right. The shaft (4) is shown passing through the housing and covers, with a pin (5) and a nut (6) securing it. The impeller (7) is mounted on the shaft. The bearing (8) is shown at the top, and the seal (9) is shown at the bottom. The pin (10) is shown at the bottom left. The nut (11) is shown at the top right. The pin (12) is shown at the bottom center. The pin (13) is shown at the bottom right. The pin (14) is shown at the top left. The pin (15) is shown at the bottom right. The pin (16) is shown at the bottom left.


Page 12.

10. AC GEN FLYWHEEL

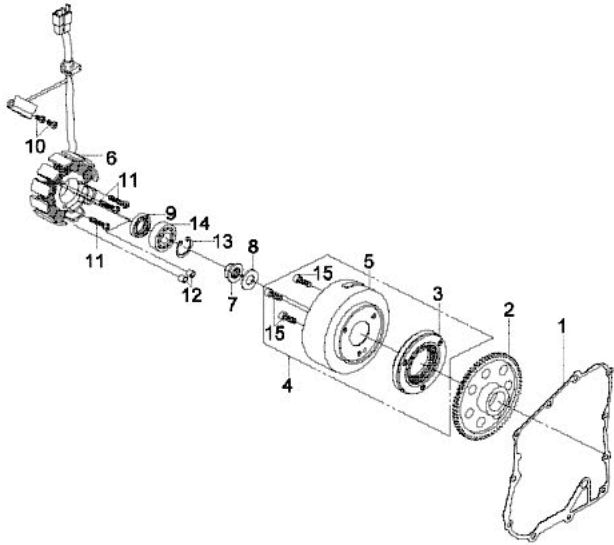


ITEM	AVAIL	PART NO.	NAME	QTY
10			AC GEN FLYWHEEL	
10-1		A1394-RB1-0000	R COVER GASKET	1
10-2		B8110-HMA-0000	STARTING CLUTCH GEAR COMP	1
10-3		B812A-HMA-0000	ONE WAY CLUTCH ASSY.	1
10-4		C110A-RB1-0000	AC GEN FLYWHEEL SET	1
10-5		C1110-RB1-0000	FLYWHEEL COMP.	1
10-6		C1120-RB2-0000	STATOR COMP	1
10-7		I0201-KR8-0000	FLANGE NUT 14MM	1
10-8		I0401-KJ9-0000	THRUST WASHER 14*28*2	1
10-9		I1202-HMA-0000	OIL SEAL TC12*22*5	1
10-10		I2101-05012-0H	HEX BOLT 5*12mm	2
10-11		I6001-06040-00	SH. FLANGE BOLT 6*40	3
10-12		I4301-08140	KNOCK PIN	2
10-13		I4520-32000	CIRCLIP	1
10-14		I6140-62013-10	RADIAL BALL BRG. 6201LUC3	1
10-15		I0157-F3G-0000	SOCKET BOLT 8X20	3

11. BALANCE SHAFT

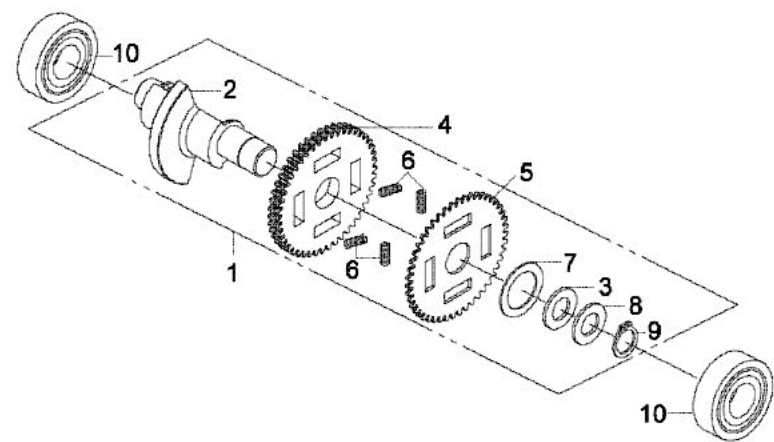

ITEM	AVAIL	PART NO.	NAME	QTY
11			BALANCE SHAFT	
11-1		A3300-RFB-0000	BALANCE SHAFT COMP	1
11-2	N	A3301-RFB-0000	BALANCE SHAFT	1
11-3	N	A3302-RB1-0000	WAVE WASHER 28.3*36*1	1
11-4	N	A3332-RB1-3000	BALANCE SHAFT DRIVE GEAR A	1
11-5	N	A3333-RB1-0000	BALANCE SHAFT DRIVE GEAR B	1
11-6	N	A3334-RB1-0000	BALANCE SHAFT DRIVE GEAR SPRING	4
11-7	N	A3337-RB1-0000	WASHER 28.3*47.5*1.4	1
11-8	N	A3338-RB1-0000	WASHER 28.3*36*1	1
11-9	N	I4510-28000	CIR CLIP EX 28MM	1
11-10		I6100-62040-10	RADIAL BALL BRG. 6204	2


12. MISSION CASE

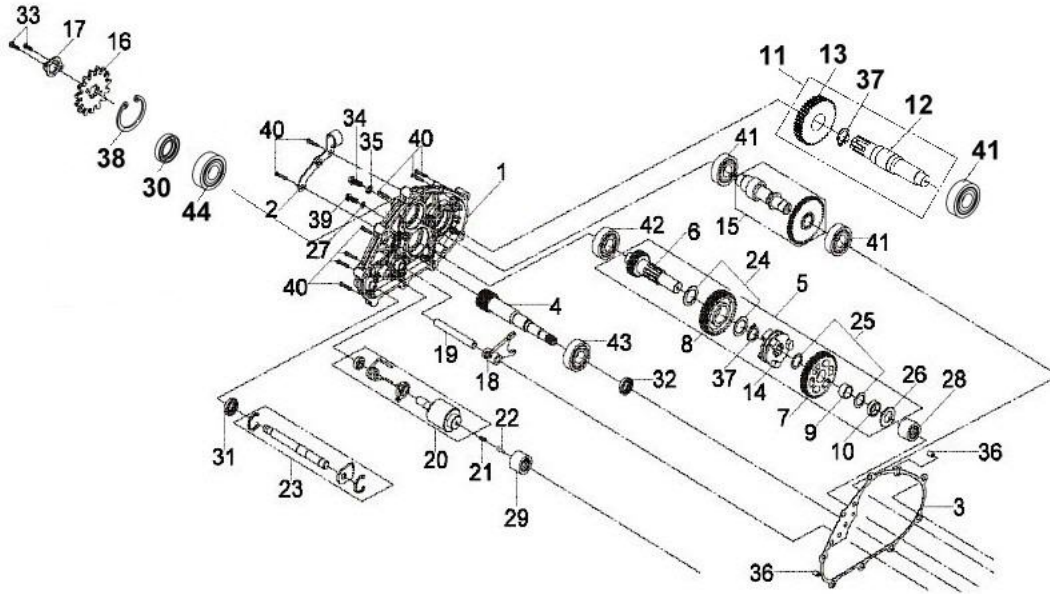

ITEM	AVAIL	PART NO.	NAME	QTY
12			MISSION CASE	
12-1		B1200-RB1-0100	MISSION CASE	1
12-2		B1201-RB1-0000	INNER COVER STAY A	1
12-3		B1395-RB1-0000	MISSION CASE GASKET	1
12-4		B3411-RB1-0000	DRIVE SHAFT	1
12-5		B3420-RB1-0000	COUNTER SHAFT ASSY.	1
12-6		B3421-RB1-0000	COUNTER SHAFT	1
12-7		B3422-RB1-0000	COUNTER GEAR A	1
12-8		B3423-RB1-0000	COUNTER GEAR B COMP	1
12-9		B3424-RB1-0000	BUSH 20*13	1
12-10		B3425-RB1-0000	SPACER	1
12-11		B3430-RB1-0100	FINAL SHAFT COMP	1
12-12		B3431-RB1-3100	FINAL SHAFT	1
12-13		B3432-RB1-3000	FINAL GEAR	1
12-14		B3475-RB1-0000	CLIDING CLAW	1
12-15		B3500-RB1-0000	REVERSE SHAFT COMP	1
12-16		B3800-RB1-0000	DRIVE SPROCKET	1
12-17		B3801-RB1-0000	DRIVE SPROCKET FIXING PLATE	1
12-18		B4211-RB1-0000	SHIFT FORK	1
12-19		B4241-RB1-0000	SHIFT FORK SHAFT	1
12-20		B4300-RB1-0000	SHIFT DRUM COMP	1
12-21		B4319-R02-0000	GEAR INDICATION DRILL SPG	1
12-22		B4323-R02-0000	GEAR INDICATION DRILL	1
12-23		B4610-RB1-0000	GEAR SHIFT SPINDLE COMP	1
12-24		I0401-RB1-0000	PLAIN WASHER 25MM	2
12-25		I0402-RB1-0000	PLAIN WASHER 20MM	2
12-26		I0454-RB1-0000	THRUST WASHER 20.5*38*2	1
12-27		I0474-M9Q-0000	WASHER 8MM	1
12-28		I1003-RB1-0000	NEEDLE BRG. HK2016	1
12-29		I1103-X17-0000	NEEDLE BRG. K25X29X10	1
12-30		I1209-RCA-0000	OIL SEAL TC 25*52*7	1
12-31		I1202-RB1-0000	OIL SEAL TC14*26*6	1
12-32		I1204-HMA-0000	OIL SEAL TC25*40*7	1
12-33		I2101-06010-0H	HEX BOLT 6*10	2
12-34	N	I2800-12000	DRAIN PLUG BOLT 12MM	1
12-35		I4109-12000	DRAIN PLUG WASHER 12MM	1
12-36		I4301-10140	KNOCK PIN	2
12-37		I4510-25000	CIRCLIP EX	2
12-38		I4520-52000	CIRCLIP IN	1


12-39		I5701-08012-00	BOLT FLANGE 8*12	1
12-40		I5701-08040-00	FLANGE BOLT 8*40	9
12-41		I6100-62040-10	RADIAL BALL BRG. 6204	3
12-42		I6100-63040-10	RADIAL BALL BRG. 6304	1
12-43		I6100-63053-00	RADIAL BALL BRG. 6305	1
12-44		I6100-62050-00	RADIAL BALL BEARING 6205	1

13. OIL PUMP ASSY.

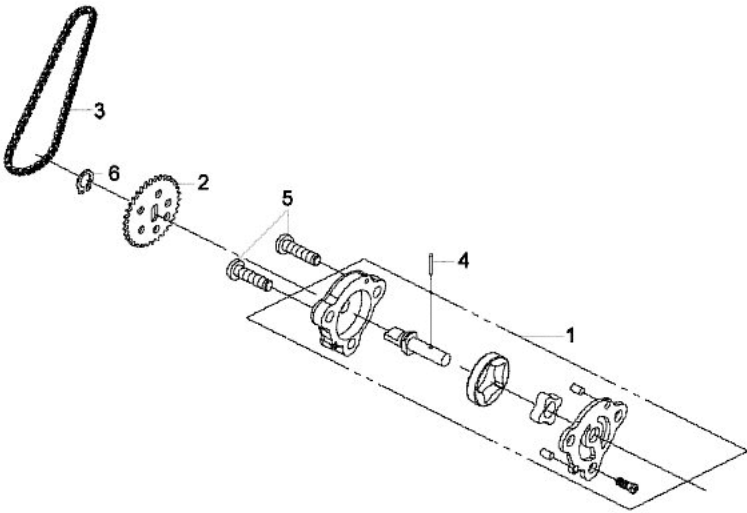


ITEM	AVAIL	PART NO.	NAME	QTY
13			OIL PUMP ASSY.	
13-1		A5100-RFA-0000	OIL PUMP ASSY.	1
13-2		A5133-HMA-0000	OIL PUMP DRIVEN SPROCKET	1
13-3		A5141-HMA-0000	OIL PUMP CHAIN 48L	1
13-4	N	I1101-HMA-0000	ROLLER 2.5*11.8	1
13-5		I3500-06025-0H	PAN SCREW 6X25	2
13-6		I4510-10000	CIR CLIP EX 10	1

14. CYL. HEAD SIDE COVER ASSY.

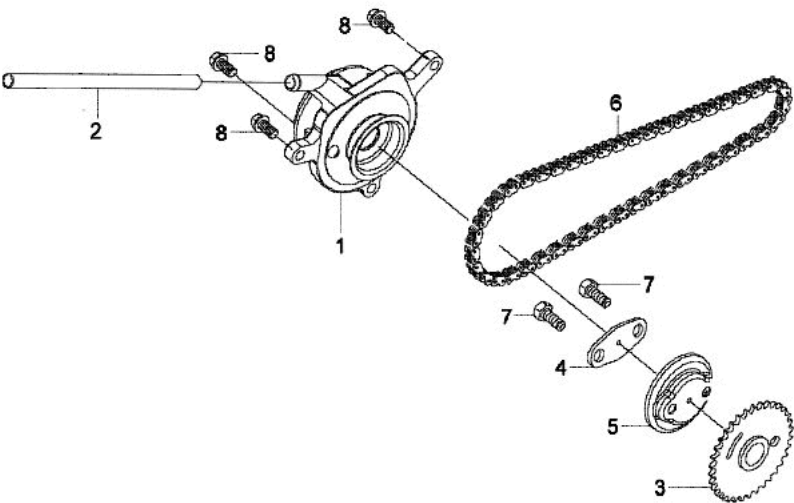


ITEM	AVAIL	PART NO.	NAME	QTY
14			CYL. HEAD SIDE COVER ASSY.	
14-1		A230A-RB1-0000	CYL. HEAD SIDE COVER ASSY.	1
14-2		A2314-RB1-0000	BREATHER TUBE	1
14-3		A4105-RFA-0000	CAM SPROCKET	1
14-4		A4105-X01-0000	CAM SPROCKET WASHER	1
14-5		A4108-M36-0000	CENTRIFUGAL DISK	1
14-6		A4401-RFA-0000	CAM CHAIN 100L	1
14-7		I2101-06016-0H	BOLT HEX 6*16	2
14-8		I6001-06018-00	FLANGE BOLT SH 6*18	3

15. DRIVEN PULLEY SET

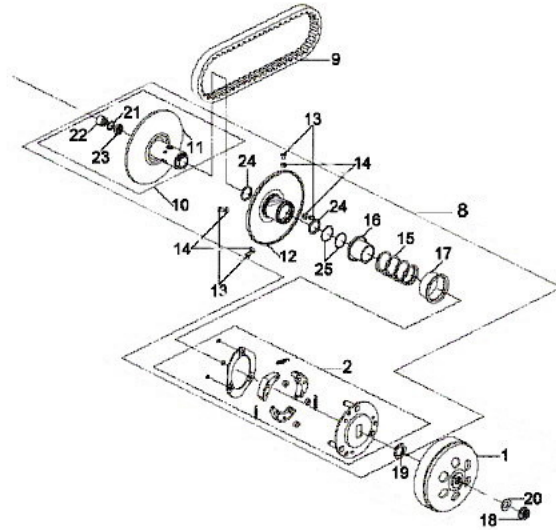


ITEM	AVAIL	PART NO.	NAME	QTY
15			DRIVEN PULLEY SET	
15-1		B2101-HMA-0000	CLUTCH OUTER	1
15-2		B2300-HMA-0000	DRIVE PLATE ASSY.	1
15-8		B3010-HMA-0000	DRIVEN PULLEY ASSY	1
15-9		B3100-RB1-0000	DRIVE BELT	1
15-10		B3200-HMA-0000	DRIVEN FACE ASSY.	1
15-11	N	B3210-HMA-0000	DRIVEN FACE COMP.	1
15-12		B3220-HMA-0000	MOVABLE DRIVEN FACE COMP.	1
15-13		B3225-HMA-0000	ROLLER GUIDE PIN	4
15-14		B3226-HMA-0000	GUIDE ROLLER	4
15-15		B3233-HMA-0000	DRIVEN FACE SPRING	1
15-16		B3237-HMA-0000	SEAL COLLAR	1
15-17	N	B3238-HMA-0000	SPRING COLLER	1
15-18		I0201-KR8-0000	FLANGE NUT 14MM	1
15-19		I0202-HMA-0000	SPECIAL NUT 36MM	1
15-20		I0401-KJ9-0000	THRUST WASHER 14*28*2	1
15-21	N	I0602-HMA-0000	IN. CIRCLIP	1
15-22	N	I1006-HMA-3000	NEEDLE BEARING HKS25*32*14	1
15-23	N	I1007-HMA-3000	RADIAL BALL BRG. 6903LU	1
15-24		I1211-HMA-0000	OIL SEAL TC41*48*4	2
15-25		I1305-HMA-0000	O-RING 47*2.0	2

16. A.I.C.V. ASSY

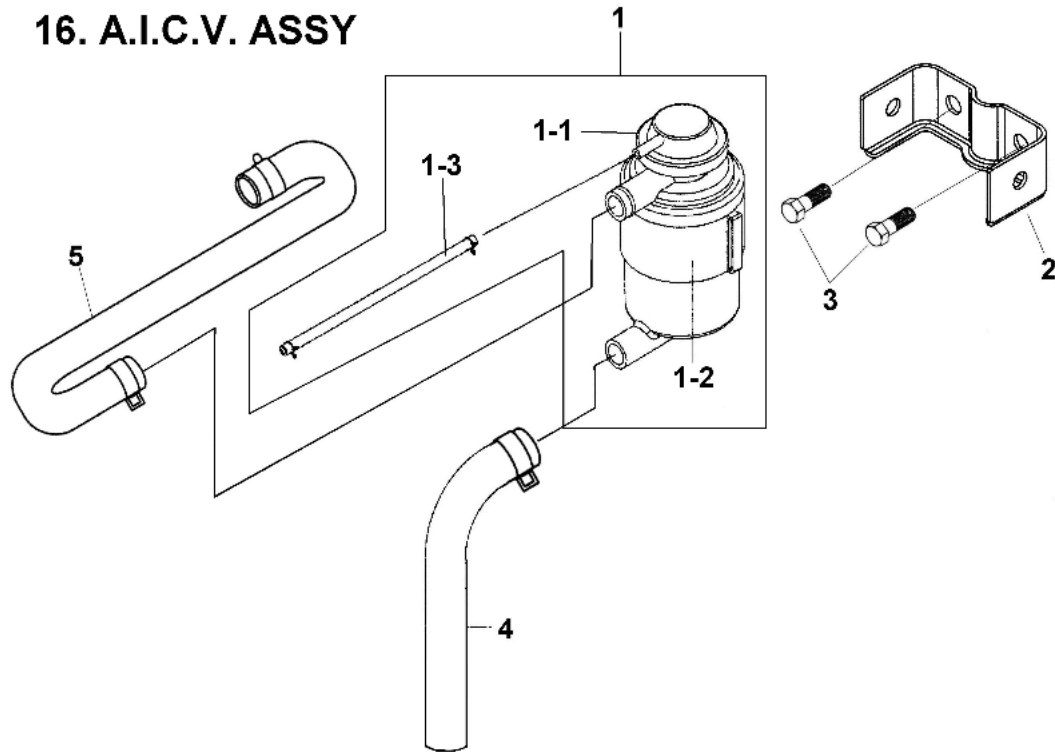


ITEM	AVAIL	PART NO.	NAME	QTY
16			A.I.C.V. ASSY.	
16-1		A865A-RF2-0000	AICV ASSY	1
16-1-1	N	A8650-RFA-0000	AICV	1
16-1-2	N	A8811-N14-000	A.I.A.C SETTING BAND	1
16-1-3	N	A8657-RB1-0000	A.I.C.V. INLET PIPE JOINT TUBE ASSY.	1
16-2		A7401-LRA0-0000	STAY AICV	1
16-3		I0149-06012	FLANGE BOLT, HEX.	2
16-4		A8655-LRA0-0000	AICV JOINT TUBE	1
16-5		A8656-LRA0-0000	AICV-REED VALVE JOINT TUBE	1


17. CARBURETOR ASSY

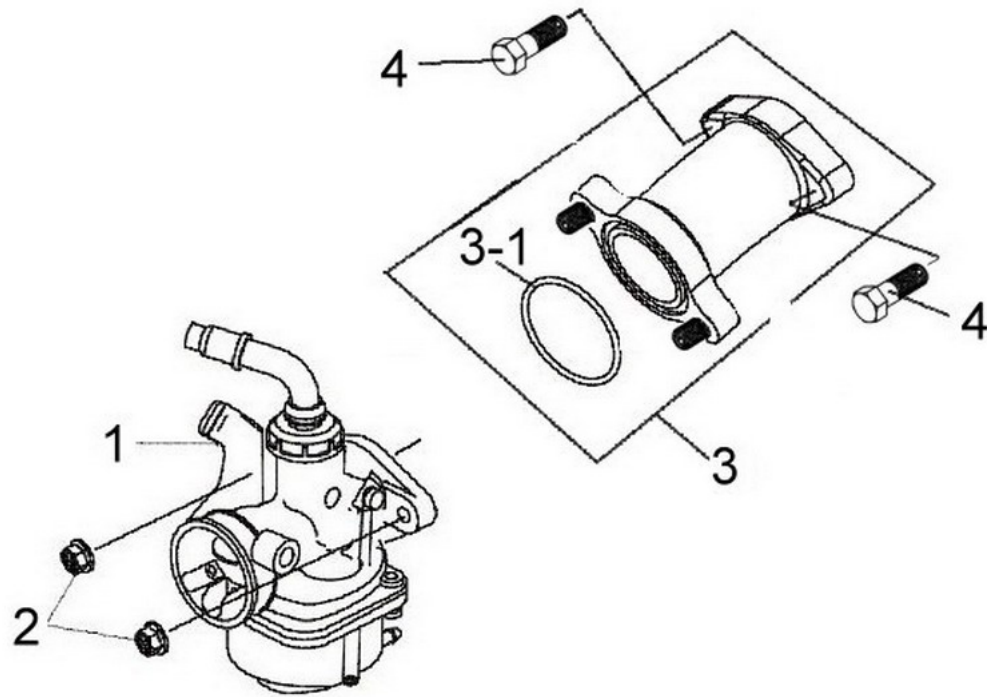


ITEM	AVAIL	PART NO.	NAME	QTY
17			CARBURETOR ASSY	
17-1		A6100-RFE-0000	CARB. ASSY.	1
17-2		I4050-06000	NUT FLANGE 6MM	2
17-3		A711A-RB1-0000	INLET PIPE ASSY.	1
17-3-1		I1308-HMA-0000	O-RING 34*2.0	1
17-4		I6001-06025-00	FLANGE BOLT SH 6*25	2

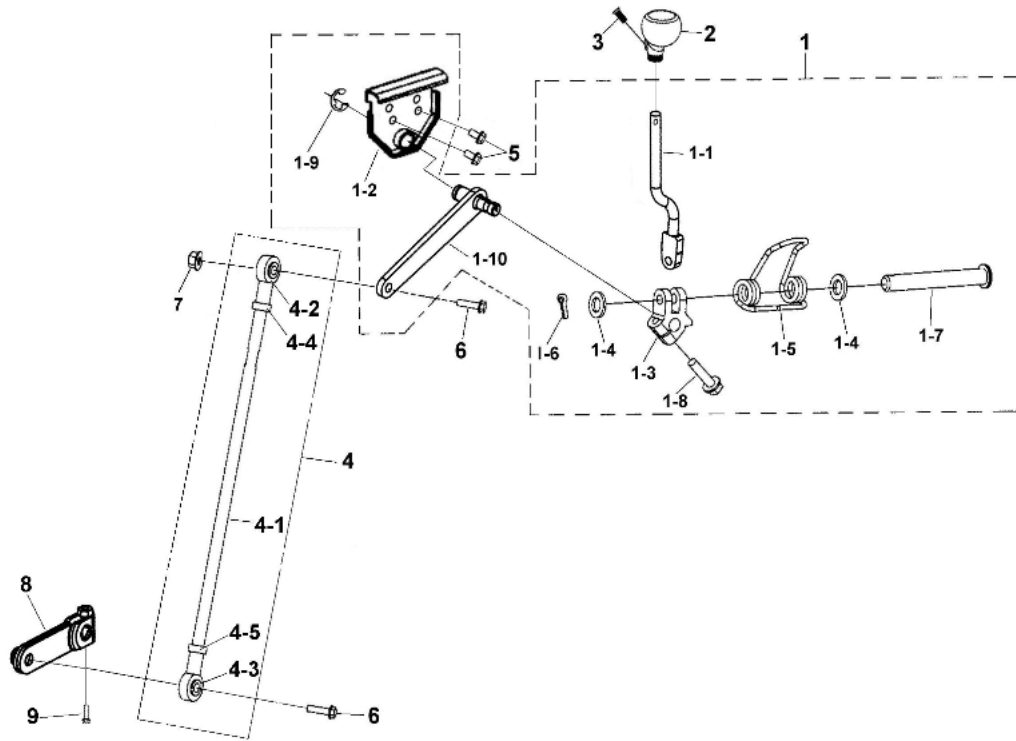


ITEM	AVAIL	PART NO.	NAME	QTY
18			GEAR SHAFT LEVER, SAFETY SWITCH	
18-1		B464A-LRA0-0000	SHAFT COMP ROD	1
18-1-1		B4641-LRA0-0000	ROD SHIFT	1
18-1-2		B4622-GJA0-0000	FIXED SUPPORT CATCH	1
18-1-3		B4643-V30-0000	FIXED SUPPORT ROD SHIFT	1
18-1-4		I4104-08515	WASHER	2
18-1-5		B4644-GJA0-0000	SPRING ROD SHIFT	1
18-1-6		I4201-46195	SPLIT PIN	2
18-1-7		B4645-V30-0000	PIN ROD SHIFT	1
18-1-8		I5701-06025-0C	FLANGE BOLT, HEX.	1
18-1-9		I4540-1201A	CIRCLIP	1
18-1-10		B4646-LRA0-0000	SHIFT TRANSLATOR	1
18-2		B4642-LRA0-0000	HANDLE PLASTICS ASSY.	1
18-3		I3600-05015-0G	NO:009 SCREW FLAT	1
18-4		B4648-LRA0-0000	SHIFT TIE-ROR	1
18-4-1		I2900-08320-0C	STUD BOLT	1
18-4-2		I5013-08030C	BALL JOINT R	1
18-4-3		I5013-08030C-L	BALL JOINT L	1
18-4-4		I4001-081C0	NUT HEX	1
18-4-5		I4001-081C0-L	NUT HEX	1
18-5		I0149-08016	FLANGE BOLT, HEX.	2
18-6		I6800-08030-0C	SOCKET BOLT	2
18-7		I5611-08200	HEX. FLANGE NUT, SAFETY	1
18-8		B4630-RCA-0000	ARM GEAR SHIFT	1
18-9		I5801-06035-0G	BOLT, FLANGE	1

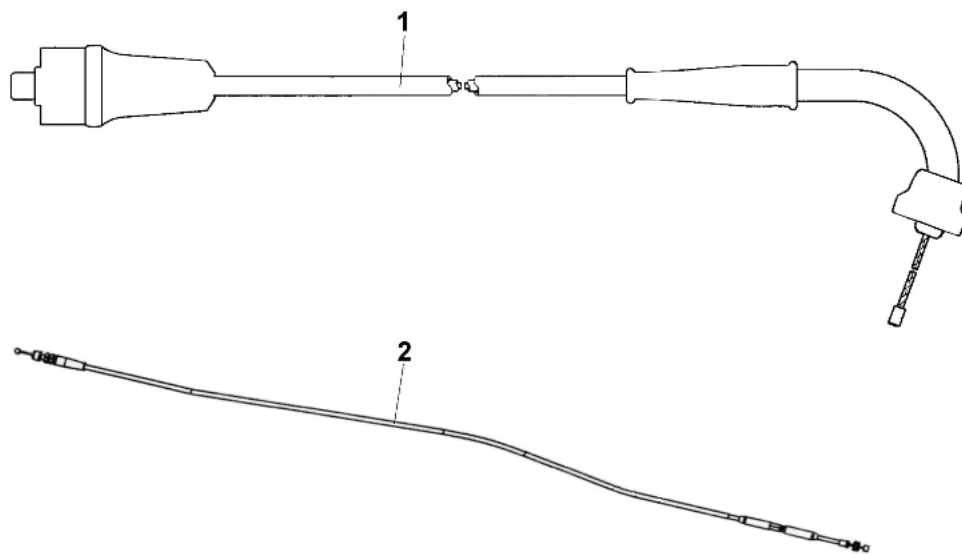


ITEM	AVAIL	PART NO.	NAME	QTY
20			CABLE	
20-1		A7910-LRA0-0000	CABLE THROTTLE	1
20-2		A7920-LRA0-0000	CABLE ,AIR CUT	1

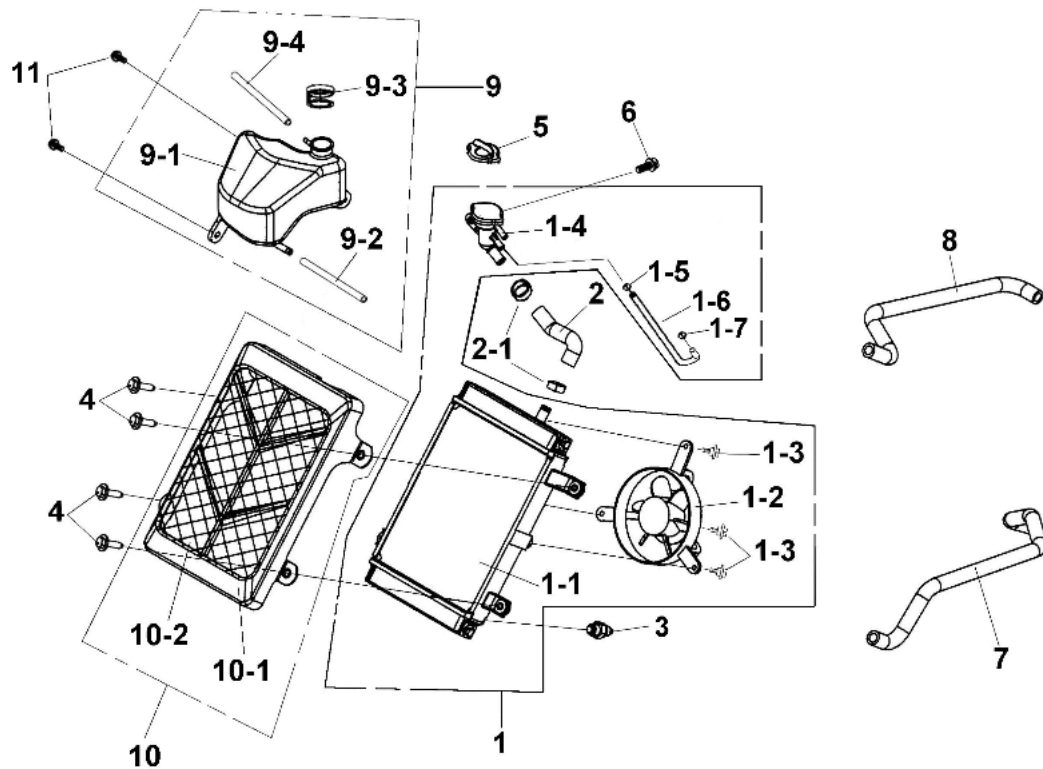


ITEM	AVAIL	PART NO.	NAME	QTY
21			WATER COOLER	
21-1		A900A-LRA0-0000	RADIATOR SET	1
21-1-1		A9010-LRA0-0000	RADIATOR COMP	1
21-1-2		A9005-LRA0-0000	SHROUD ASSY	1
21-1-3		I5801-06012-08	FLANGE BOLT 6x12	3
21-1-4		A9039-LRA0-0000	FILLER NECK	1
21-1-5	N	I5002-40850-00	TUBE CLIP D8.5	1
21-1-6		A9124-LRA0-0000	RADIATOR HOSE A	1
21-1-7	N	I5002-40730-00	TUBE CLAMP D7.3	1
21-2		A9125-LRA0-0000	RADIATOR HOSE OSE	1
21-2-1		A8657-LRA0-0000	FASTENER	1
21-3		C7760-LRA0-0000	THRMO. SW. ASSY	1
21-4		I0119-06030	BOLT, HEX.	4
21-5		A9111-LRA0-0000	RADIATOR FILLER CAP	1
21-6		I0149-06012	FLANGE BOLT, HEX.	1
21-7		A9121-LRA0-0000	RAD. INLET HOSE	1
21-8		A9123-LRA0-0000	RAD. OUTLET HOSE	1
21-9		A910A-LRA0-0000	RESERVE TANK ASSY	1
21-9-1		A9101-LRA0-0000	RESERVE TANK	1
21-9-2		A9108-LRA0-0000	RESERVE TANK OUTLET HOSE	1
21-9-3		A9104-LRA0-0000	TANK RESERVE CAP	1
21-9-4		A9109-LRA0-0000	RESERVE TANK HOSE	1
21-10		A9401-LRA0-0000	SHROUD RADIATOR ASSY	1
21-10-1		A9400-LRA0-0000	SHROUD RADIATOR	1
21-10-2		E0415-LRA0-0000	FTLTER NET	1
21-11		I0119-06821	BOLT, HEX.	2

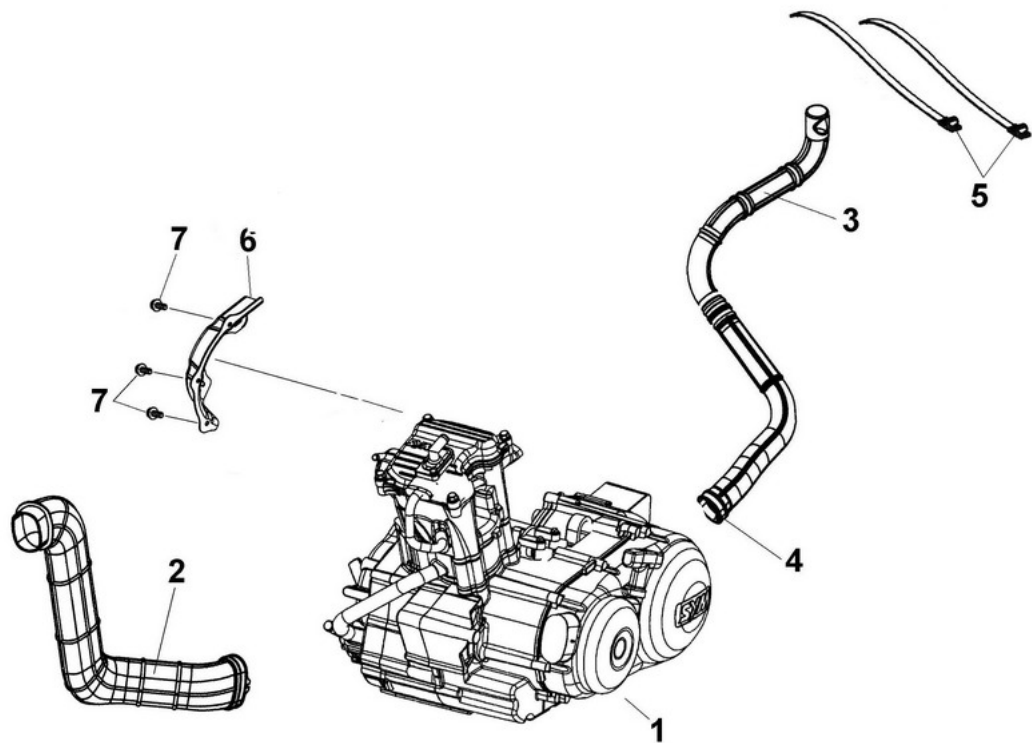


ITEM	AVAIL	PART NO.	NAME	QTY
22			ENGINE	
22-1		A8000-RF2-0000	MUFFLER ASSY.	1
22-2		B0100-LRA0-0000	CVT INLET TUBE	1
22-3		A1346-LRA0-0000	CVT OUTLET TUBE	1
22-4		A1349-LRA0-0000	CVT OUTLET TUBE BAND	1
22-5		H3936-5AA0-0000	WIRE CLAMP	2
22-6		D0105-RB2-0000	CHAIN PROTECTO	1
22-7		I0119-05071	BOLT, HEX.	3

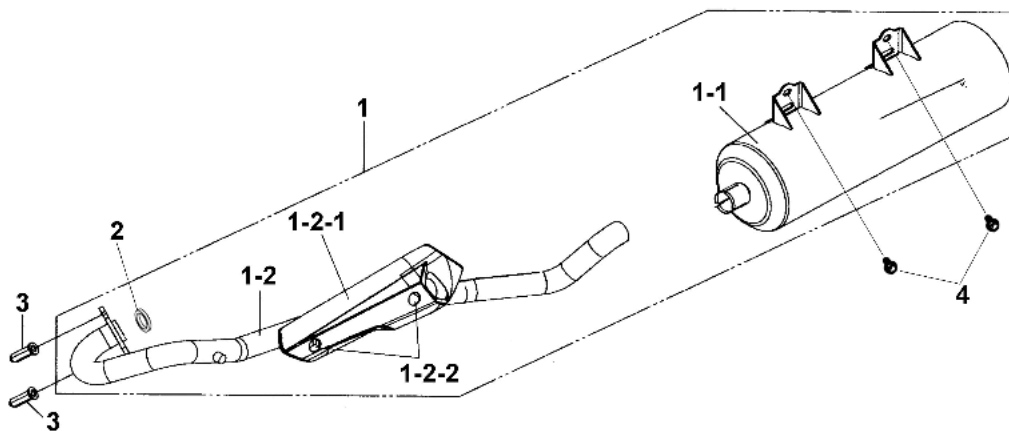

ITEM	AVAIL	PART NO.	NAME	QTY
23			MUFFLER	
23-1		A8000-RF2-0000	MUFFLER ASSY.	1
23-1-1		A8310-RF2-3000	EXH. MUFFLER COMP	1
23-1-2		A832A-RF2-0000	EXH. PIPE ASSY	1
23-1-2-1		A8302-LRC0-0000	HEAT INSULATION BOARD	1
23-1-2-1		A8302-LRC0-0000	HEAT INSULATION BOARD	1
23-1-2-2		I0103-V02-0000	SH. FLANGE BOLT	2
23-1-2-2		I0103-V02-0000	SH. FLANGE BOLT	2
23-2		A8291-RB2-0000	EXH. PIPE GASKET	1
23-3		I0043-HMA-0000	CAP NUT 8MM	2
23-4		I0149-08012	FLANGE BOLT, HEX.	2

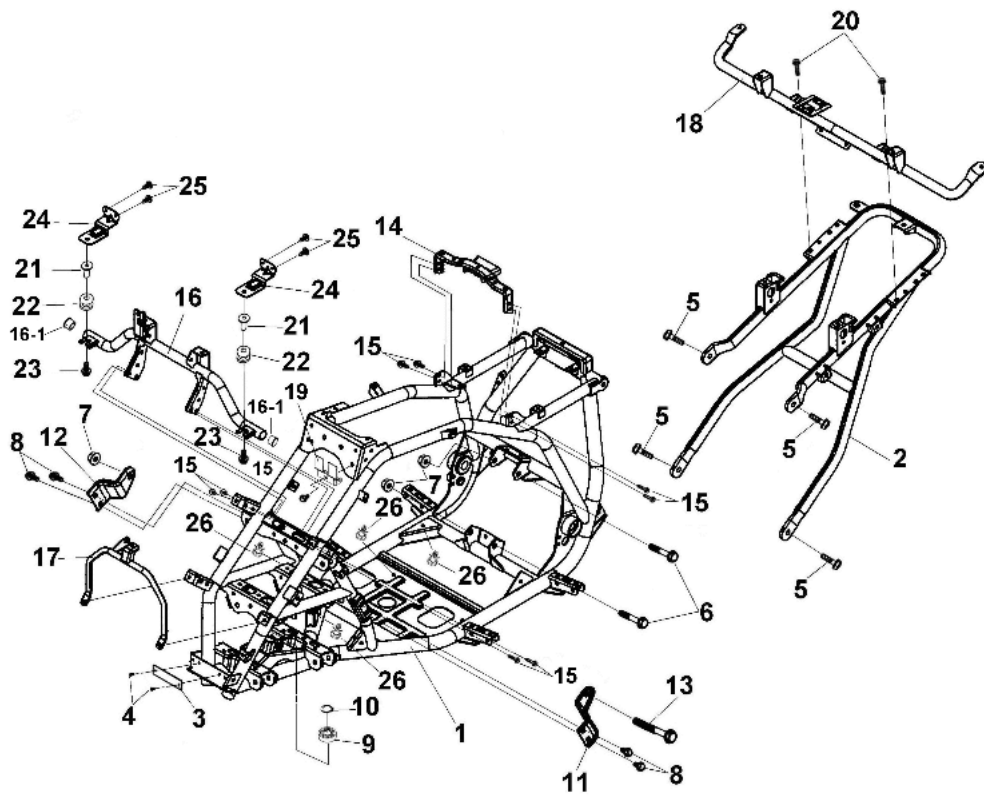


ITEM	AVAIL	PART NO.	NAME	QTY
24			FRAME	
24-1		E0100-LRC0-1A02	FRAME FRONT	1
24-2		E0110-LRA0-1A01	FRAME REAR	1
24-3	N	H7501-LRC0-0000	VIN PLATE	1
24-4		H750A-5BA1-0000	NAIL, PULL	2
24-5		I0149-10022	SCREW,FLANGE	4
24-6		I5701-12100-0C	BOLT FLANGE, HEX.	2
24-7		I5601-12200	FLANGE NUT, SAFETY	3
24-8		I5801-10016-0HA	BOLT, FLANGE (M10x16)	4
24-9		I6100-6002ZZ	BEARING (6002ZZ)	1
24-10		I4510-32000	C CLIP EX 32	1
24-11		E0101-LRA0-0000	LEFT ENG.BRACKET	1
24-12		E0102-LRA0-0000	RIGHT ENG.BRACKET	1
24-13		I5701-12160-0C	FLANGE BOLT, HEX.	1
24-14		E0170-LRA0-0000	SEAT STEY	1
24-15		I0149-06012	FLANGE BOLT, HEX.	9
24-16		E0105-LRA0-0000	UPPER SUPPORT BAR,FRONT FENDER	1
24-16-1		E0707-5EE0-0000	RUBBER PLUG	2
24-17		E0106-LRA0-0000	LOWER SUPPORT BAR,FRONT FENDER	1
24-18		E0107-LRA0-0000	SUPPORT BAR,REAR FENDER	1
24-19		C6602-LRA0-0000	HOLDER RELAY	1
24-20		I0149-08016	FLANGE BOLT, HEX.	2
24-21		H1104-BCA0-0000	COLLAR	2
24-22		F0703-BCA0-0000	DAMPER	2
24-23		I0119-06821	BOLT, HEX.	2
24-24		E0111-LRA0-0000	STAY HEAD LAMP	2
24-25		I3903-312B0	TRUSS	4
24-26		D3211-LRA0-0000	CLIP	4

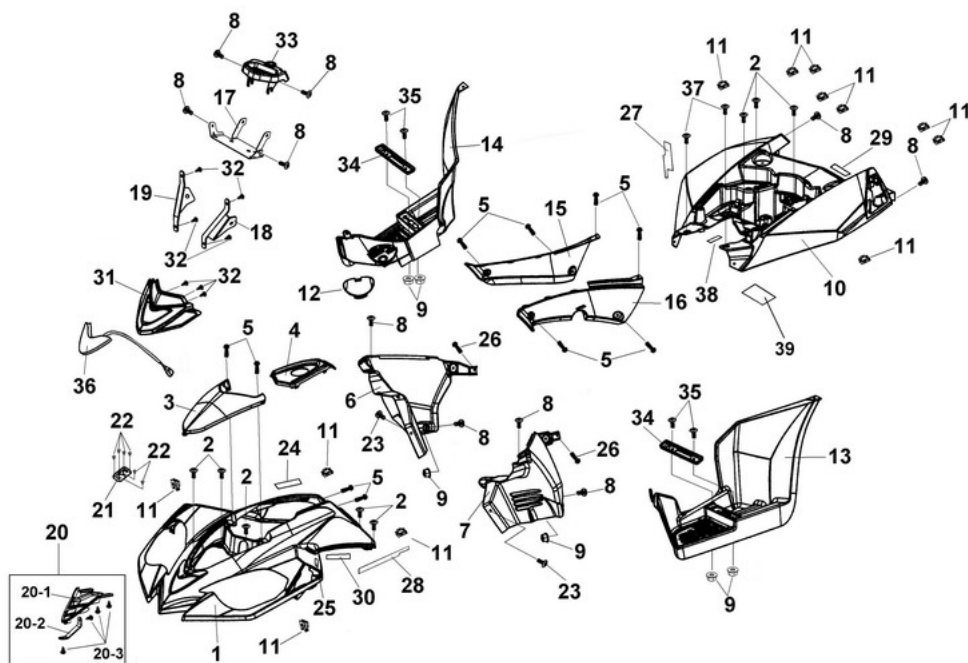


ITEM	AVAIL	PART NO.	NAME	QTY
25			FENDER	
25-1		F4300-LRA0-0700	FR. FENDER ASSY(SILVER)	1
25-1		F4300-LRA0-5400	FR. FENDER ASSY(BLUE)	1
25-1		F4300-LRA0-0800	FR. FENDER ASSY(BLACK)	1
25-1		F4300-LRA0-1E00	FR. FENDER ASSY(ORANGE)	1
25-2		I0119-06821	BOLT, HEX.	8
25-3		F4301-LRA0-0B00	FRONT CENTRAL COVER	1
25-4		F4302-LRA0-0001	REAR CENTRAL COVER	1
25-5		I8310-FIA0-0000	PLASTIC SCREW	10
25-6		F4303-LRA0-0000	FR NT SIDE COVER R	1
25-7		F4304-LRA0-0000	FR NT SIDE COVER L	1
25-8		E0117-9EA0-0000	SCREW, TRUSS	10
25-9		I5611-06200-0G	HEX. FLANGE NUT, SAFETY	6
25-10		H3500-LRA0-0700	REAR FENDER (SILVER)	1
25-10		H3500-LRA0-0800	REAR FENDER (BLACK)	1
25-10		H3500-LRA0-1E00	REAR FENDER (ORANGE)	1
25-10		H3500-LRA0-5400	REAR FENDER (BLUE)	1
25-11		I5900-06160	SPRING NUT	12
25-12		H3511-LRA0-0000	OIL CAP PLUG	1
25-13		H3520-LRA0-0000	FOOTREST,RIGHT	1
25-14		H3620-LRA0-0000	FOOTREST,LEFT	1
25-15		F4400-LRA0-0800	RIGHT SIDE COVER(BLACK)	1
25-15		F4400-LRA0-0700	RIGHT SIDE COVER(SILVER)	1
25-16		F4500-LRA0-0700	LEFT SIDE COVER(SILVER)	1
25-16		F4500-LRA0-0800	LEFT SIDE COVER(BLACK)	1
25-17		C7203-LRA0-0000	SPEEDOMETER BRACKET	1
25-18		C7204-LRC0-0000	BRACKET HANDLE COVER L	1
25-19		C7205-LRC0-0000	BRACKET HANDLE COVER R	1
25-20		F4316-LRA0-0000	FRONT FENDER ADORNMENT COMP	1
25-20-1	N	F4305-LRA0-0000	FRONT FENDER ADORNMENT	1
25-20-2	N	C3143-LRA0-0000	POSITION LAMP ASSY	1
25-20-3		I3903-312B0	TRUSS	4
25-21		B4627-LRA0-0000	SHIFT STAY	1
25-22		H750A-5BA1-0000	NAIL, PULL	6
25-23		I3893-06016-0H	SCREW WASHER	2
25-24		H7129-FIA0-0000	STICKER,INDICATE GEAR	1
25-24		H7129-FIAF-0000	STICKER,INDICATE GEAR	1
25-25		H7100-LRC0-0000	LABEL TTRE	1


25-25		H7100-LRCF-0000	LABEL TIRE(French)	1
25-26		I8556-06012	SCREW PAN	2
25-27		H7127-MRC0-1E00	STICKER ,REAR FENDE R(ORANGE)	1
25-27		H7127-MRC0-0800	STICKER ,REAR FENDE R(BLACK)	1
25-27		H7127-MRC0-0700	STICKER ,REAR FENDE R(SILVER)	1
25-28		H7103-MRC0-1E00	STICKER ,VECTOR 300 L(ORANGE)	1
25-28		H7103-MRC0-0800	STICKER ,VECTOR 300 L(BLACK)	1
25-28		H7103-MRC0-0700	STICKER ,VECTOR 300 L(SILVER)	1
25-29		H7108-5BA2-0700	STICKER E-TON(SILVER)	1
25-29		H7108-5EB0-0000	STICKER, E-TON	1
25-30		H7131-FIB0-0000	STICKER,POWER SUPPLY	1
25-31		E3205-LRC0-0000	FRONT COVER,HANDLE BAR	1
25-32		I3903-312B0	TRUSS	7
25-33		E3206-LRA0-0001	REAR COVER,HANDLE BAR	1
25-34		E0701-GJA0-0000	FOOTREST BAR	2
25-35		I0149-06016	FLANGE BOLT, HEX.	4
25-36		C3140-RA1-0000	POSITION LAMP ASSY	1
25-37		I0119-06802	BOLT, HEX.	2
25-39		F4315-LRF0-0000	LAGGING ALUMINUM FOIL	1

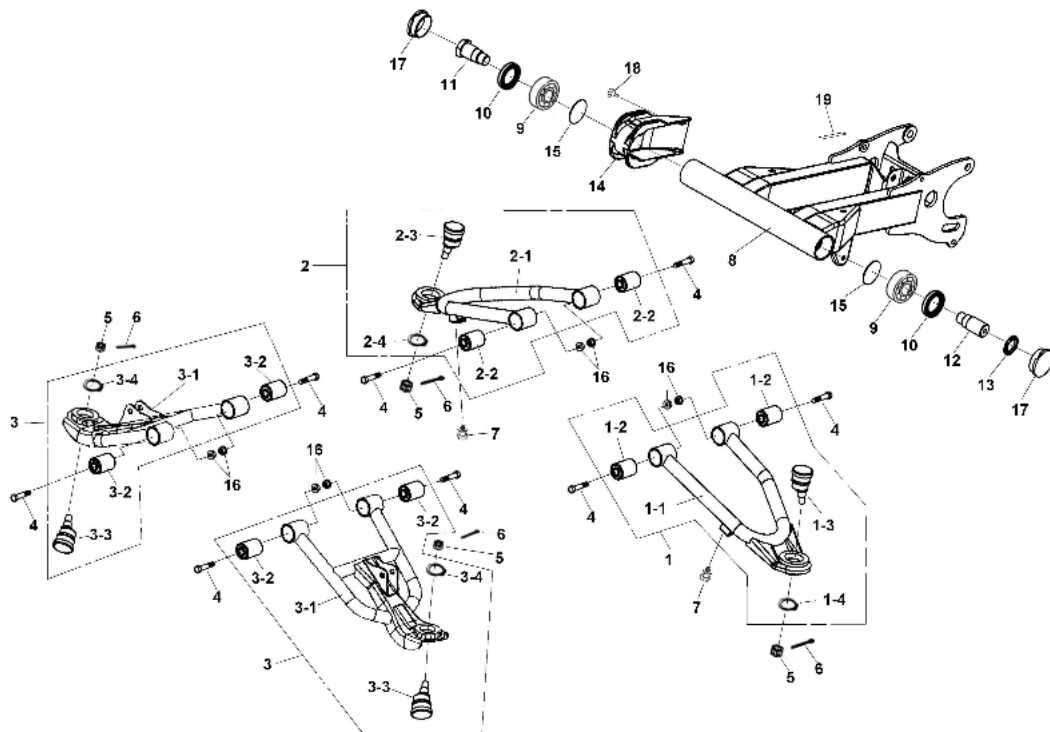


ITEM	AVAIL	PART NO.	NAME	QTY
26			SWING ARM	
26-1		E020A-LRA0-0701	ARM,SUSPENSION,L.U.ASSY(SILVE)	1
26-1-1		E0200-LRA0-0700	ARM,SUSPENSION,L.U.(SILVE)	1
26-1-2		A1203-LRA0-0000	BUSH,ARM SUSPENSION	2
26-1-3		E0230-LRA0-0001	BALL JOINT	1
26-1-4		I4510-30000	CIRCLIP	1
26-2		E021A-LRA0-0701	ARM,SUSPENSION,R.U.ASSY(SILVE)	1
26-2-1		E0210-LRA0-0700	ARM,SUSPENSION,R.U.(SILVE)	1
26-2-2		A1203-LRA0-0000	BUSH,ARM SUSPENSION	2
26-2-3		E0230-LRA0-0001	BALL JOINT	1
26-2-4		I4510-30000	CIRCLIP	1
26-3		E022A-LRA0-0701	ARM,SUSPENSION,LOWER ASSY(SILVE)	2
26-3-1		E0220-LRA0-0701	ARM,SUSPENSION,LOWER (SILVE)	2
26-3-2		A1203-LRA0-0000	BUSH,ARM SUSPENSION	4
26-3-3		E0230-LRA0-0001	BALL JOINT	2
26-3-4		I4510-30000	CIRCLIP	2
26-4		I5701-10060-0A	FLANGE BOLT, HEX.	8
26-5		I4011-121H0	CASTLE NUT(M12)	4
26-6		I4201-46325	SPLIT PIN	4
26-7		D3211-LRA0-0000	CLIP	2
26-8		E2200-LRA0-0000	SWING ARM SUB	1
26-9		I1600-4T30203	BEARING	2
26-10		I1201-LRA0-0000	OIL SEAL40*20*8	2
26-11		E2201-LRA0-0000	SWING RAM RIGHT BOLT	1
26-12		E2203-LRA0-0000	SWING RAM LEFT BOLT	1
26-13		I0231-LRA0-0000	NUT SWING ARM	1
26-14		E2202-LRA0-0000	RUBBER SLEEVE	1
26-15		E2204-LRA0-0000	WASHER	2
26-16		D4611-9EA0-0000	FLANGE NUT, HEX.	8
26-17		E2205-LRA0-0000	PLUG	2
26-18		I0109-5BA1-0000	BOLT FLANGE	1
26-19		H7106-FIA0-0000	WARNING STICKER , CHAIN	1

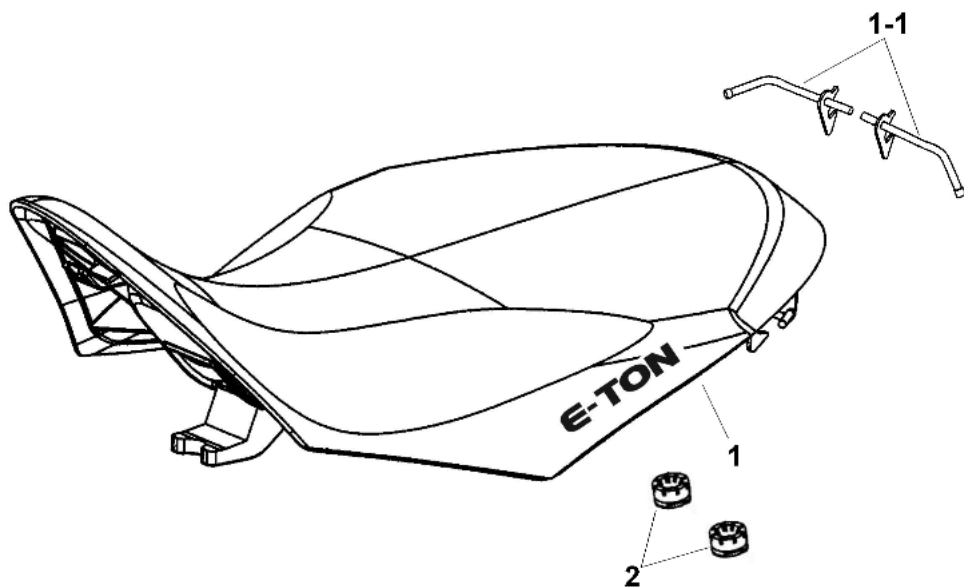


ITEM	AVAIL	PART NO.	NAME	QTY
27			SEAT	
27-1		G7200-LRC0-0000	SEAT ASSY	1
27-1-1		G7201-LRA0-0000	SEAT FASTENER	2
27-2		G7212-5EA0-0000	RUBBER DAMPER	2

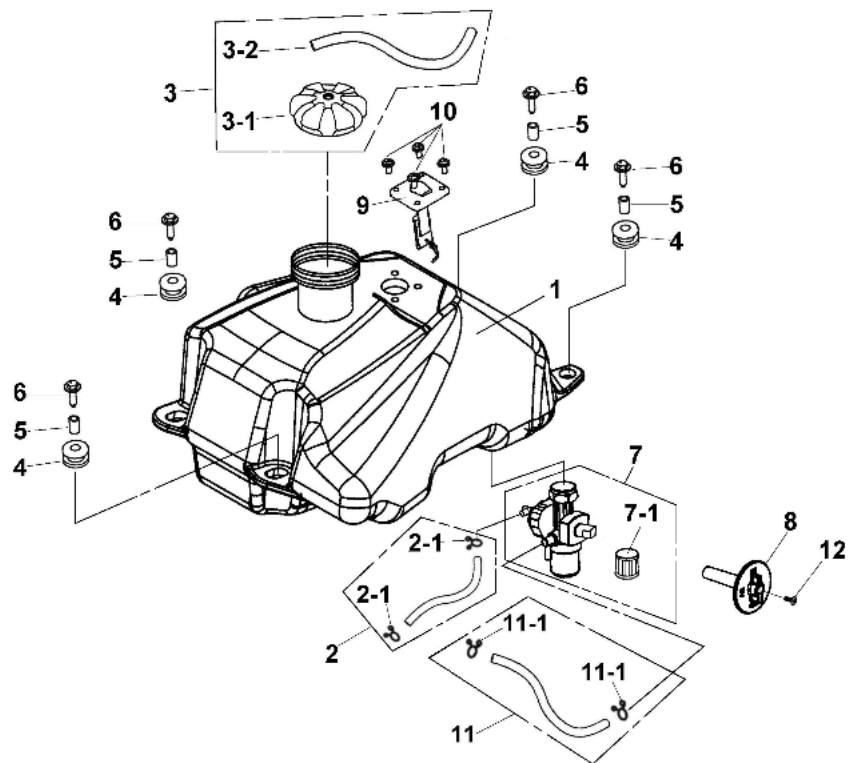

ITEM	AVAIL	PART NO.	NAME	QTY
28			FUEL TANK	
28-1		A7500-LRC0-0000	FUEL TANK COMP	1
28-2		A7514-LRA0-0000	FUEL TUBE	1
28-2-1		A7516-5EA0-0000	CLIP(A)	2
28-3		A762A-LRA0-0000	FUEL TANK CAP ASSY.	1
28-3-1		A7620-LRA0-0000	FUEL TANK CAP	1
28-3-2		A7621-LRA0-0000	BREATHE TUBE	1
28-4		A7510-FIA0-0000	FUEL TANK RUBBER PAD	4
28-5		A7511-FIA0-0000	RUBBER INSULATOR	4
28-6		I0119-06030	BOLT, HEX.	4
28-7		A6701-LRA0-0000	FUEL COCK ASSY	1
28-7-1		A7519-LRA0-0000	FILTER FUEL	1
28-8		A6702-LRA0-0000	FUEL COCK COVER	1
28-9		C780A-LRA0-0000	METER FUEL LEVER	1
28-10		I0200-50160	CROSS BOLT, HEX.	4
28-11		A751B-FIA0-0000	VACUUM TUBE COMP	1
28-11-1		A7518-FIA0-0000	CLIP	2
28-11-1		A7518-FIA0-0000	CLIP	2
28-12		I8506-04016	SCREW,PAN HEAD	1

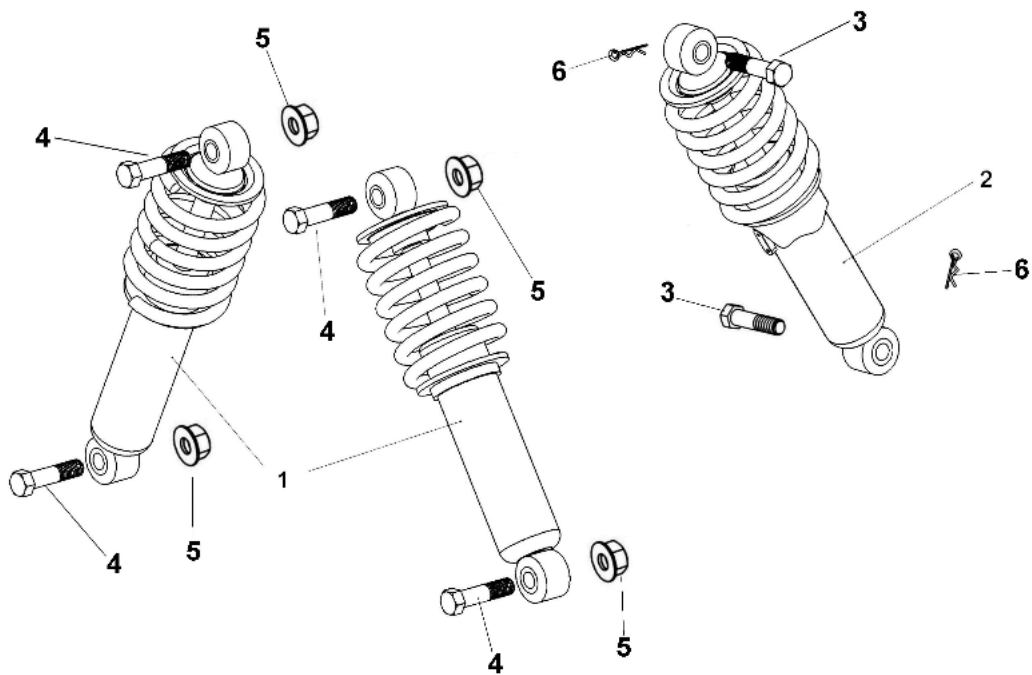


ITEM	AVAIL	PART NO.	NAME	QTY
29			SUSPENSION	
29-1		E1105-LRA0-0000	SUSPENSION, FRONT	2
29-2		E2400-LRA0-0000	SUSPENSION, REAR	1
29-3		I2811-10050-0G	NO:001 BOLT FLANGE	2
29-4		I0102-10048	FLANGE BOLT, HEX.	4
29-5		D4611-9EA0-0000	FLANGE NUT, HEX.	4
29-6		I0468-12006	PIN	2

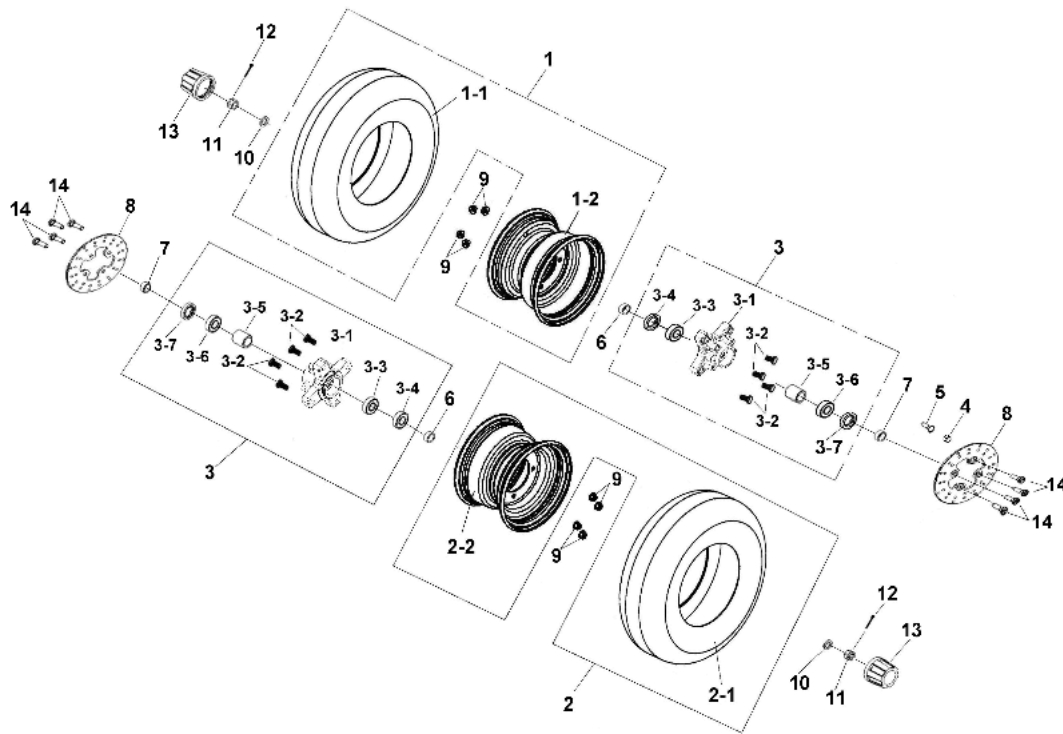


ITEM	AVAIL	PART NO.	NAME	QTY
30			FRONT WHEEL	
30-1		D471A-FIE0-0S00	FRONT WHEEL ASSY.,LEFT(ON ROAD,STEEL 10*5.5)	1
30-1		D471A-LRF0-00NA	FRONT WHEEL ASSY.,LEFT(ON ROAD ,ALUMINUM)(10*5.5)	1
30-1		D471A-LRF0-00FA	FRONT WHEEL ASSY.,LEFT(OFF ROAD ,ALUMINUM)(10*5.5)	1
30-1		D471A-LRC0-0SFS	FRONT WHEEL ASSY.,LEFT(OFF ROAD, STEEL 10*5.5)	1
30-1-1		D4710-FIE0-0000	WHEEL TIRE (ON ROAD)	1
30-1-1		D4710-LRA0-0000	WHEEL TIRE (OFF ROAD)	1
30-1-1		D4710-LRA0-0000	WHEEL TIRE (OFF ROAD)	1
30-1-1		D4710-FIE0-0000	WHEEL TIRE (ON ROAD)	1
30-1-2		D4601-FIC0-0S00	WHEEL RIM 10*5.5"	1
30-1-2		D4601-FIC0-0S00	WHEEL RIM 10*5.5"	1
30-1-2		D4601-FIC0-0S00	WHEEL RIM 10*5.5"	1
30-1-2		D4601-FIC0-9700	WHEEL RIM(ALUMINUM)(10"x5.5)	1
30-2		D471B-LRF0-00NA	FRONT WHEEL ASSY.,RIGHT(ON)(ALUMINUM)	1
30-2		D471B-LRF0-00FA	FRONT WHEEL ASSY.,RIGHT(OFF ROAD ,ALUMINUM 10*5.5)	1
30-2		D471B-FIE0-0S00	FRONT WHEEL ASSY.,RIGHT(ON ROAD, STEEL 10*5.5)	1
30-2		D471B-LRC0-0SFS	FRONT WHEEL ASSY.,RIGHT(OFF ROAD,STEEL 10*5.5")	1
30-2-1		D4710-FIE0-0000	WHEEL TIRE (ON ROAD)	1
30-2-1		D4710-LRA0-0000	WHEEL TIRE (OFF ROAD)	1
30-2-1		D4710-FIE0-0000	WHEEL TIRE (ON ROAD)	1
30-2-1		D4710-LRA0-0000	WHEEL TIRE (OFF ROAD)	1
30-2-2		D4601-FIC0-0S00	WHEEL RIM 10*5.5"	1
30-2-2		D4601-FIC0-0S00	WHEEL RIM 10*5.5"	1
30-2-2		D4601-FIC0-0S00	WHEEL RIM 10*5.5"	1
30-2-2		D4601-FIC0-9700	WHEEL RIM(ALUMINUM)(10"x5.5)	1
30-3		D461A-LRA0-0000	WHEEL HUB ASSY	2
30-3-1		D4610-LRA0-0000	WHEEL HUB	2
30-3-2		D4612-GJA0-0000	BOLT	8
30-3-3		I6100-6203LLU	BEARING(6203-LLU)	2
30-3-4		I1307-24040-10	OIL SEAL	2
30-3-5		D4620-LRA0-0000	INNER SPACER	2
30-3-6		I6150-60040-10	BEARING, BALL, RADIAL	2
30-3-7		I1202-LRA0-0000	OIL SEAL	2

30-4		C7205-5PA0-0000	MAGNET	1
30-5		D4613-5PA0-0000	SCREW	1
30-6		D4621-FIA0-0000	OUTER SPACER	2
30-7		D4621-LRA0-0000	OUTER SPACER	2
30-8		D5351-GJA0-0000	BRAKE DISC	2
30-9		D4611-FIC0-0000	NUT	8
30-10		I9905-14200	WASHER	2
30-11		I5500-14100	CASTLE NUT	2
30-12		I4201-46325	SPLIT PIN	2
30-13		D4609-9FA0-0000	RUBBER CAP	2
30-14		D5350-FIC0-0000	BOLT,ROUND HEAD	8

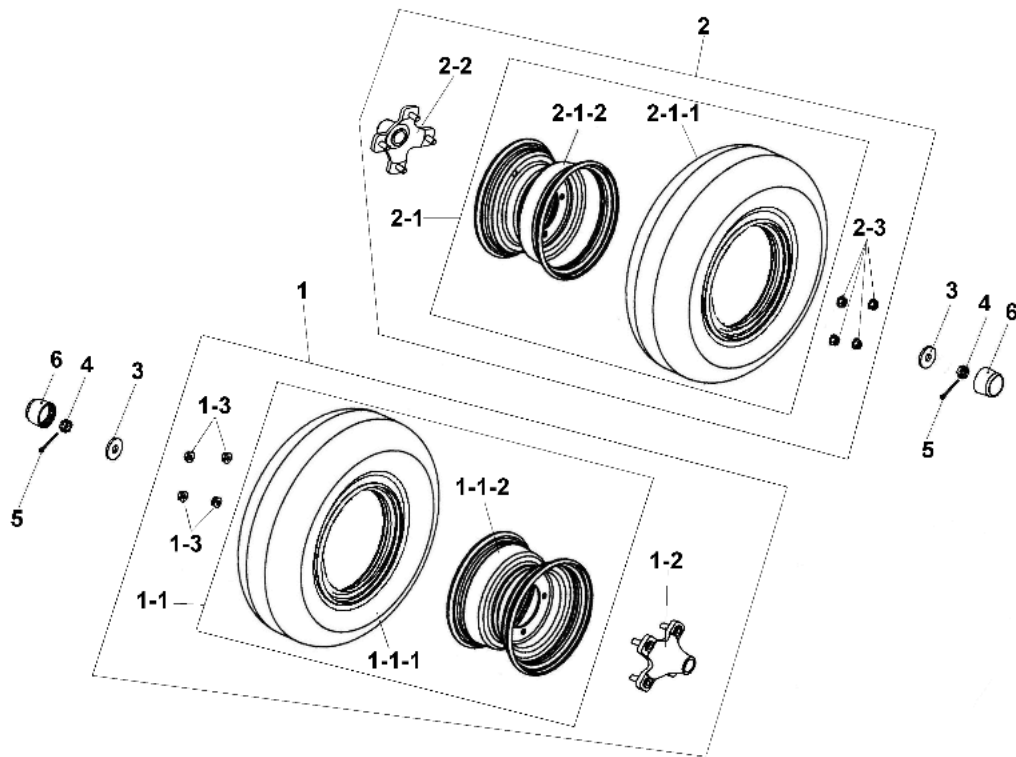


ITEM	AVAIL	PART NO.	NAME	QTY
31			REAR WHEEL	
31-1		D472C-LRC0-0SNS	REAR WHELL ASSY,LEFT(ON ROAD,STEEL 10*8)	1
31-1		D472C-LRC0-0SFS	REAR WHELL ASSY,LEFT(OFF ROAD,STEEL 10*8)	1
31-1		D472C-LRF0-00FA	REAR WHELL ASSY,LEFT(OFF ALUMINUM 10*8)	1
31-1-1		D471C-LRC0-0SFS	REAR WHELL COMP,RIGHT(OFF ROAD)	1
31-1-1		D471C-LRC0-0SNS	REAR WHELL COMP,LEFT(ON ROAD)	1
31-1-1		D471C-LRC0-0SFS	REAR WHELL COMP,RIGHT(OFF ROAD)	1
31-1-1		D471C-LRF0-00FA	REAR WHELL COMP,LEFT(ALUMINUM)	1
31-1-1-1		D4720-LRA0-0000	WHEEL TIRE (OFF ROAD)	1
31-1-1-1		D4720-LRC0-0000	WHEEL TIRE (ON ROAD)	1
31-1-1-1		D4720-LRA0-0000	WHEEL TIRE (OFF ROAD)	1
31-1-1-1		D4720-LRA0-0000	WHEEL TIRE (OFF ROAD)	1
31-1-1-2		D4602-FIC0-8S00	WHEEL RIM	1
31-1-1-2		D4602-FIC0-8S00	WHEEL RIM	1
31-1-1-2		D4602-FIC0-8S00	WHEEL RIM	1
31-1-1-2		D4602-FIC0-7700	WHEEL RIM(ALUMINUM) (10"x8)	1
31-1-2		D2705-GJA0-0000	SHAFT CONNECTER WITH BOLTS	1
31-1-2		D2705-GJA0-0000	SHAFT CONNECTER WITH BOLTS	1
31-1-3		D4611-FIC0-0000	NUT	4
31-1-3		D4611-FIC0-0000	NUT	4
31-2		D472D-LRF0-00FA	REAR WHELL ASSY,RIGHT(OFF ALUMINUM)(10*8)	1
31-2		D472D-LRC0-0SNS	REAR WHELL ASSY,RIGHT(ON ROAD,STEEL 10*8)	1
31-2		D472D-LRC0-00FS	REAR WHELL ASSY.,RIGHT(OFF)	1
31-2-1		D471D-LRF0-00FA	REAR WHELL COMP,RIGHT(OFF ALUMINUM)	1
31-2-1	N	D471D-LRC0-00FS	REAR WHELL ASSY.,RIGHT(OFF)	1
31-2-1		D471D-LRC0-00NS	REAR WHELL ASSY.,RIGHT(ON)	1
31-2-1-1		D4720-LRA0-0000	WHEEL TIRE (OFF ROAD)	1
31-2-1-1		D4720-LRA0-0000	WHEEL TIRE (OFF ROAD)	1
31-2-1-1		D4720-LRC0-0000	WHEEL TIRE (ON ROAD)	1
31-2-1-2		D4602-FIC0-7700	WHEEL RIM(ALUMINUM) (10"x8)	1
31-2-1-2		D4602-FIC0-8S00	WHEEL RIM	1

31-2-1-2		D4602-FIC0-7700	WHEEL RIM(ALUMINUM) (10"x8)	1
31-2-2		D2705-GJA0-0000	SHAFT CONNECTER WITH BOLTS	1
31-2-3		D4611-FIC0-0000	NUT	4
31-3		D2309-5EA0-0000	WASHER	2
31-4		I4012-140H0	CASTLE NUT	2
31-5		I4201-46325	SPLIT PIN	2
31-6		D4609-5EA0-0001	RUBBER CAP	2

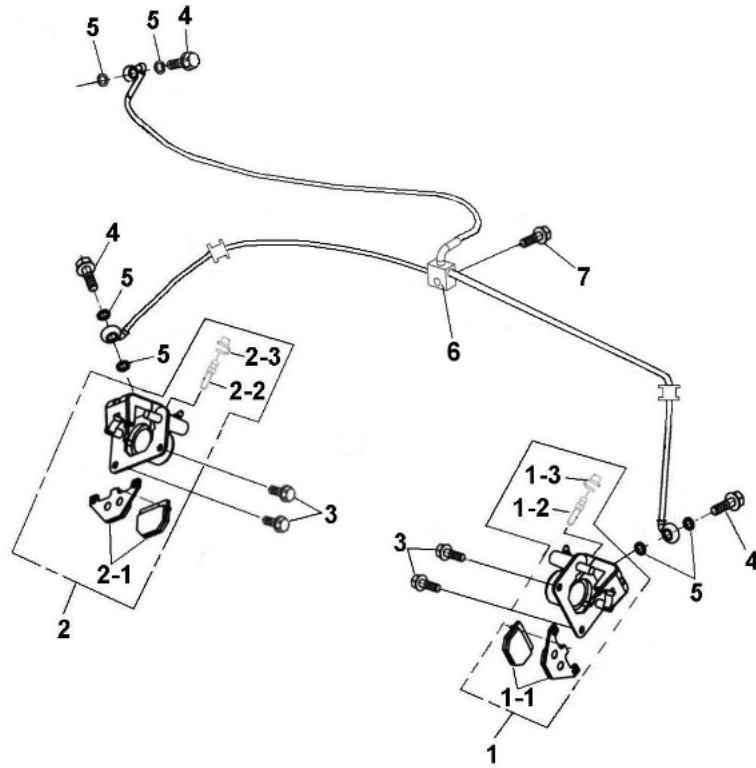


ITEM	AVAIL	PART NO.	NAME	QTY
32			FRONT BRAKE SYSTEM	
32-1		G7120-FIC0-0001	BRAKE CALLIPER (L)	1
32-1-1		G7131-5EE0-0000	BRAKE SHOE COMP	1
32-1-1		G7131-5EE0-0000	BRAKE SHOE COMP	1
32-1-2		G7132-5EE0-0000	BOLT LEAKAGE	1
32-1-2		G7132-5EE0-0000	BOLT LEAKAGE	1
32-1-3		G7133-BCA0-0000	CAP LEAKAGE	1
32-1-3		G7133-BCA0-0000	CAP LEAKAGE	1
32-1-4		G7139-5EE0-0000	SPRING,PAO	1
32-1-4		G7139-5EE0-0000	SPRING,PAO	1
32-2		G7140-FIC0-0001	BRAKE CALLIPER	1
32-2-1		G7131-5EE0-0000	BRAKE SHOE COMP	1
32-2-2		G7132-5EE0-0000	BOLT LEAKAGE	1
32-2-3		G7133-BCA0-0000	CAP LEAKAGE	1
32-2-4		G7139-5EE0-0000	SPRING,PAO	1
32-3		I7507-FIA0-0000	BOLT, HEX.	4
32-4		I0401-10034	FLANGE BOLT, HEX.	3
32-5		I0201-10118	WASHER	6
32-6		G7110-LRC0-0000	FRONT BRAKE OIL TUBE ASSY	1
32-7		I5821-08020	FLANGE BOLT, HEX.	1

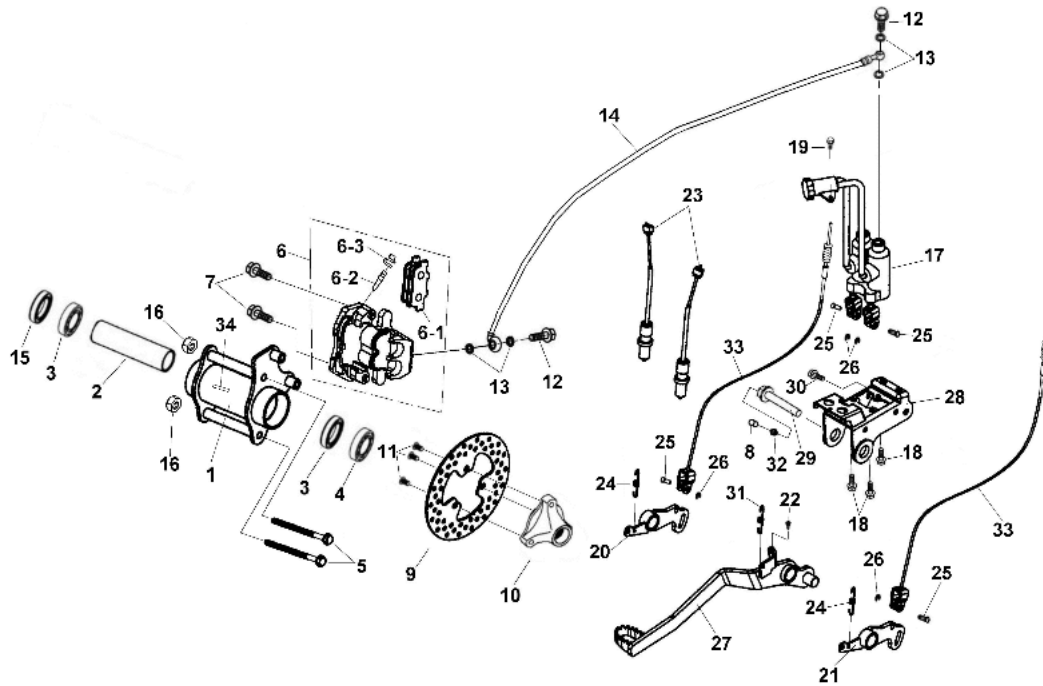


ITEM	AVAIL	PART NO.	NAME	QTY
33			REAR BRAKE SYSTEM	
33-1		D2310-LRA0-0000	BEARING SEAT ASSY., REAR WHEEL AXLE	1
33-2		D2311-FIA0-0000	SPACER	1
33-3		I6100-6007LLU	BEARING	2
33-4		D2315-FIA0-0000	OIL SEAL	1
33-5		I5701-12165-0C	FLANGE BOLT, HEX.	2
33-6		G7130-LRA0-0000	RR. CALIPER ASSY	1
33-6-1		G7131-LRA0-0000	PAD ASSY BRAKE	1
33-6-1		G7131-LRA0-0000	PAD ASSY BRAKE	1
33-6-2		G7132-LRA0-0000	BOLT LEAKAGE	1
33-6-2		G7132-LRA0-0000	BOLT LEAKAGE	1
33-6-3		G7133-LRA0-0000	CAP LEAKAGE	1
33-6-3		G7133-LRA0-0000	CAP LEAKAGE	1
33-6-4		G7139-5EE0-0000	SPRING,PAO	1
33-7		I5701-10035-0C	FLANGE BOLT, HEX.	2
33-8		E0209-5EA0-9000	CAP, GREASE VALVE	1
33-9		D3520-LRA0-0000	BRAKE DISK	1
33-10		D3251-FIA0-0000	BRAKE DISK MOUNTING SEAT	1
33-11		I0110-10811	BOLT, SOCKET	3
33-12		I0401-10034	FLANGE BOLT, HEX.	2
33-13		I0201-10118	WASHER	4
33-14		D3210-LRA0-0000	REAR BRAKE OIL TUBE	1
33-15		D2313-FIA0-0000	OIL SEAL(48×62×7)	1
33-16		I5601-12200	FLANGE NUT, SAFETY	2
33-17		G7100-LRC0-0000	FOOT MASTER CYLINDER ASSY.	1
33-18		I6705-06012-0C	BOLT, FLANGE (M8×12)	3
33-19		I0149-06016	FLANGE BOLT, HEX.	1
33-20		D3410-LRC0-0000	BRAKE MASTER CYLINDER ARM F	1
33-21		D3411-LRC0-0000	BRAKE MASTER CYLINDER ARM R	1
33-22		E7401-BCA0-0000	RUBBER,BUFFER	1
33-23		G7202-GJA0-0000	SWITCH (FLOOR)	2
33-24		E0711-FIC0-9000	SPG,BRAKE LAMP SWITCH	2
33-25		I7510-06016-1B	PIN	4
33-26		I5300-00500-N	E CLIP, EX	4
33-27		E0708-LRF0-0001	PEDAL COMP BRAKE	1
33-28		G7180-LRC0-0000	MASTER CYLINDER HOLDER	1
33-29		E0720-LRC0-0000	AXLE FIXED	1

33-30		I6800-08015-0H	SOCKET BOLT	1
33-31		D3419-LRC0-0000	FRONT RETURN SPRING	1
33-32		I6600-06000	GREASE VALVE	1
33-33		E5451-LRC0-0000	CABEL,BRAKE	2
33-34		H7118-FIB0-0000	STICKER,WARNING	1


34 HANDLE BAR

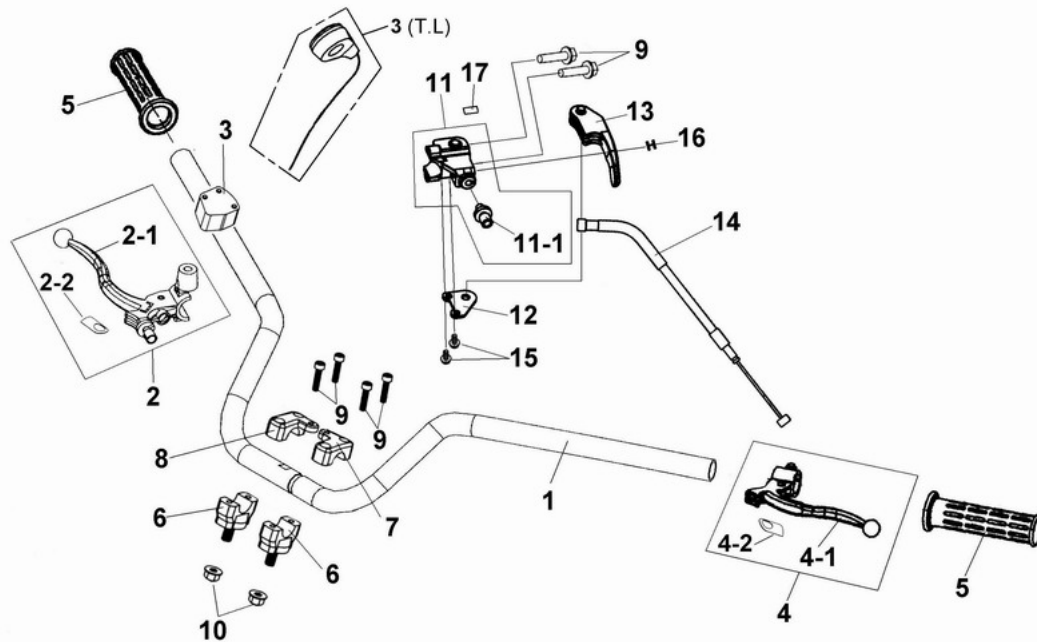


ITEM	AVAIL	PART NO.	NAME	QTY
34			HANDLE BAR	
34-1		E3100-LRA0-0700	HANDLE BAR ASSY	1
34-2		E3180-LRC0-0000	LEVER ASSY,RIGHT	1
34-2-1		E3181-LRC0-0000	LEVER ,RIGHT	1
34-2-2		E3175-LRC0-0000	LEVER,WASHER WAVE	1
34-2-3		D3202-LRA0-0000	BRAKE SWITCH ASSY	1
34-3		E3190-GJA0-0000	THROT HOOSING ASSY	1
34-4		E3170-LRC0-0000	LEVER ASSY,LEFT	1
34-4-1		E3171-FIA0-0000	LEVEL,LEFT	1
34-4-2		E3175-LRC0-0000	LEVER,WASHER WAVE	1
34-5		E3166-5EA0-0000	GRIP	2
34-6		E3112-5EA0-0000	BOTTOM,HANDLE BAR CLAMP	2
34-7		E3110-5EA0-0000	CAP,HANDEL BAR CLAMP(L)	1
34-8		E3111-5EA0-0000	CAP,HANDEL BAR CLAMP(R)	1
34-9		I0050-06025	BOLT, SOCKET	6
34-10		I5611-10200	HEX. FLANGE NUT, SAFETY	2
34-11		D3701-LRA0-0000	PARKING HOLDER	1
34-11-1		E3185-LRA0-0000	ADJUSTER BOLT	1
34-11-1		E3185-LRA0-0000	ADJUSTER BOLT	1
34-12		D3702-LRA0-0000	PARKING PLATE	1
34-13		D3703-LRA0-0000	PARKING LEVER	1
34-14		D3704-LRA0-0000	PARKING CABLE	1
34-15		I8501-06010	SCREW, PAN	2
34-16		H475B-5BA1-0000	PAD, LICENSE PLATE	1
34-17		H7140-LRA0-0000	STICKER,PARKING ADJUSTER NOTICE	1

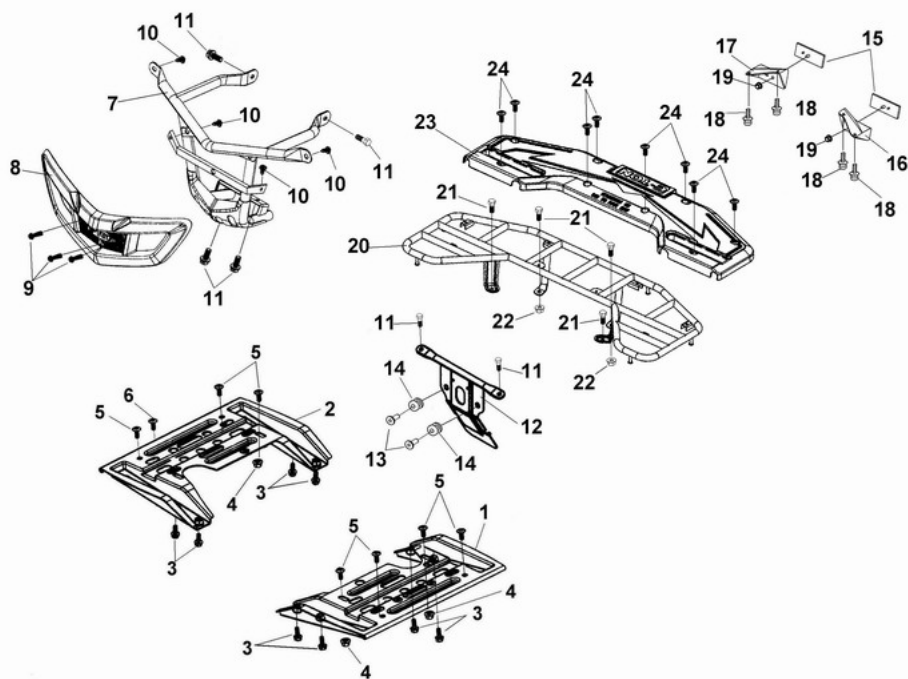


ITEM	AVAIL	PART NO.	NAME	QTY
35			BUMPER, FOOTREST	
35-1		E0700-FIA0-0000	FOOTREST BAR	1
35-2		E0700-FID0-0000	FOOTREST BAR	1
35-3		I7507-FIA0-0000	BOLT, HEX.	8
35-4		I5611-06200-0G	HEX. FLANGE NUT, SAFETY	3
35-5		I0149-06823	SCREW	7
35-6		I0119-06802	BOLT, HEX.	1
35-7		E0400-LRC0-0000	BUMPER FRONT	1
35-8		E0430-LRC0-0000	BUMPER FRONT COVER	1
35-9		I8310-06020-01	SCREW, OVAL	3
35-10		I0110-40120	SCREW, TAPPING	4
35-11		I0149-08016	FLANGE BOLT, HEX.	6
35-12		H4751-LRC0-0000	PLASTIC PLATE, LICENSE	1
35-13		H1104-BCA0-0000	COLLAR	2
35-14		F0703-BCA0-0000	DAMPER	2
35-15		C3741-5BA0-0000A	RETRO REFLECTOR	2
35-16		C3744-LRA0-0000	STAY REFLECTOR LEFT	1
35-17		C3745-LRA0-0000	STAY REFLECTOR RIGHT	1
35-18		I3891-06020-0C	SCREW WASHER	4
35-19		I4050-05055-0A	FLANGE NUT, HEX.	2
35-20		E0411-MRD0-0000	REAR PACK	1
35-21		I0149-08016	FLANGE BOLT, HEX.	4
35-22		I5616-08200	NUTFLANGE CHECK	2
35-23		F4001-MRD0-0000	REAR CARRIER COVER	1
35-24		E0117-9EA0-0000	SCREW, TRUSS	8

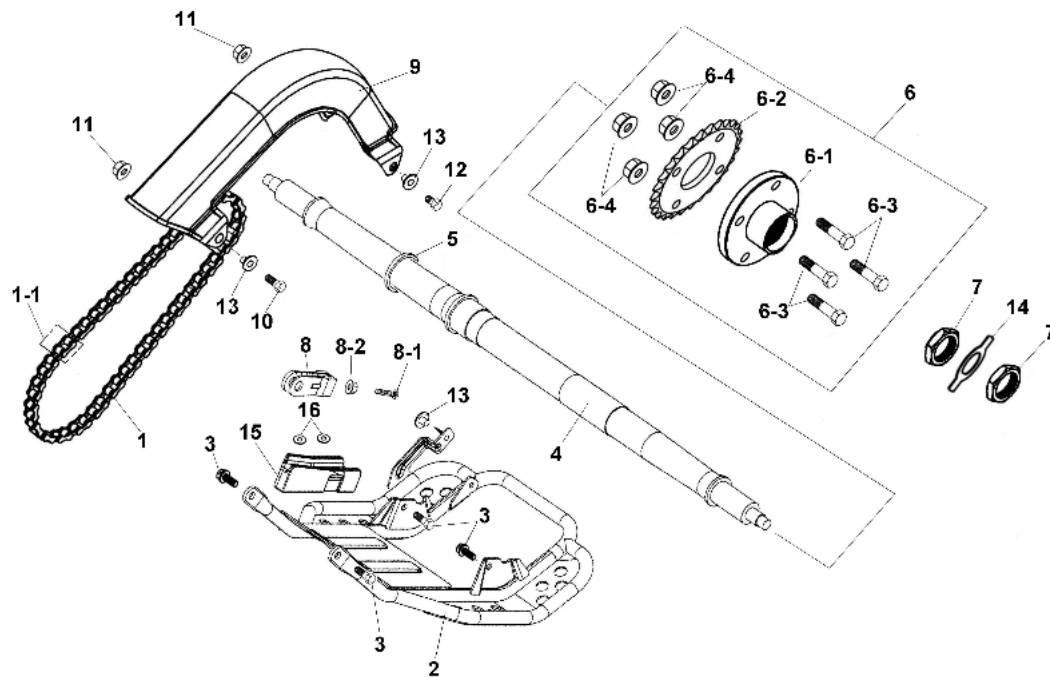

ITEM	AVAIL	PART NO.	NAME	QTY
36			REAR WHEEL AXLE	
36-1		D0100-LRA0-0000	DRIVE CHAIN ASSY(520HX90)	1
36-1-1		D0104-FIC0-0000	MASTERLINK	1
36-2		D0101-LRA0-0000	PROTECT COVER	1
36-3		I0149-08016	FLANGE BOLT, HEX.	4
36-4		D2301-LRA0-0000	REAR AXLE	1
36-5		D2303-LRA0-0000	AXLE CLIP,REAR	1
36-6		D0110-LRA0-0000	SPROCKET HOLDERREAR ASSY	1
36-6-1		D0111-LRA0-0000	SPROCKET HOLDERREAR (38T)	1
36-6-2		D1111-LRA0-0000	GEAR(520X38T)	1
36-6-3		D2706-9EA0-0000	BOLT	4
36-6-4		I5611-10200	HEX. FLANGE NUT, SAFETY	4
36-7		D2302-FIA0-0000	NUT REAR WHEEL AXLE(M28x1.5)	2
36-8		D0120-LRA0-0000	ADJUSTERCHAIN	1
36-8-1		I2201-08050-0H	BOLT	1
36-8-2		I5800-08300	NUT, HEX.	1
36-9		D0102-FIA0-0000	DRIVE CHAIN COVER	1
36-10		I5701-06020-0C	BOLT, FLANGE (M6x20)	1
36-11		I5611-06200-0G	HEX. FLANGE NUT, SAFETY	2
36-12		I0149-06012	FLANGE BOLT, HEX.	1
36-13		H3503-LRA0-0000	T COLLAR	3
36-14		D2303-GJA0-0000	PLATE FIXED REAR AXLE(USED WITH D2301-GJ)	1
36-15		D0130-LRA0-0000	GUIDE CHAIN	1
36-16		I4104-05501	WASHER	2

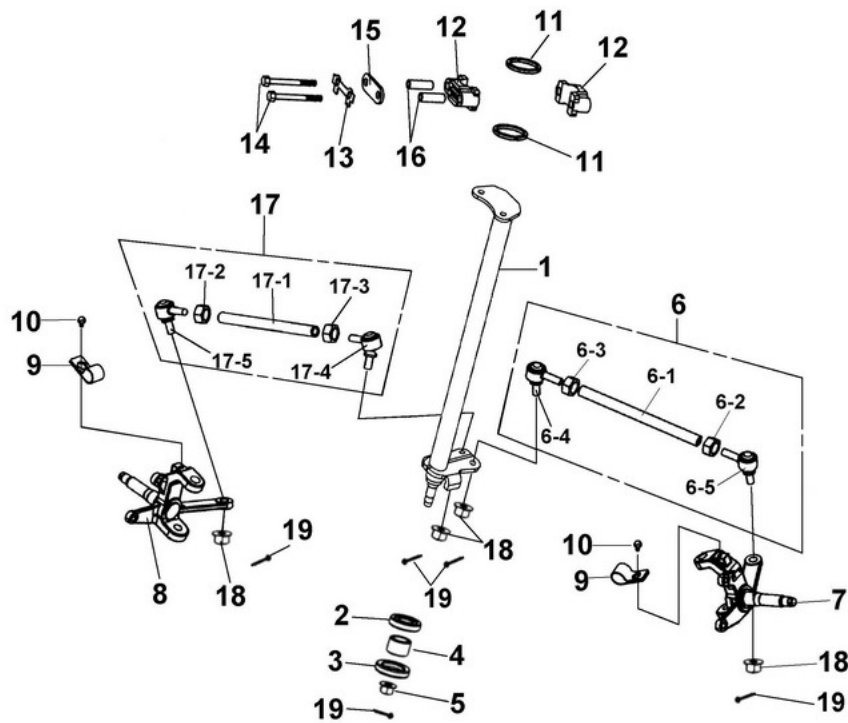


ITEM	AVAIL	PART NO.	NAME	QTY
37			STEERING	
37-1		E3200-LRC0-0000	SHAFT ASSYSTEERING	1
37-2		E3201-5EA0-0000	OIL SEAL	1
37-3		I3102-5AC0-0000	OIL SEAL	1
37-4		D4620-5EA0-0000	COLLAR	1
37-5		I5611-14200	HEX. FLANGE NUT, SAFETY	1
37-6		E0258-LRA0-0000	STEERING TIE-ROD ASSYLEFT	1
37-6-1		E0251-LRA0-0000	BOLTSTUD	1
37-6-2		E0252-5EA0-0000	NUT (R)	1
37-6-3		E0253-5EA0-0000	NUT (L)	1
37-6-4		E0255-LRA0-0000	UNIVERSAL JOINT(L)	1
37-6-5		E0256-LRA0-0000	UNIVERSAL JOINT(R)	1
37-7		E0205-LRA0-0000	KNUCKLELEFT	1
37-8		E0215-LRA0-0000	KNUCKLERIGHT	1
37-9		G7112-BCA0-0000	BRACKET BRAKE HOSE	2
37-10		I0149-06012	FLANGE BOLT, HEX.	2
37-11		E3209-FIA0-0000	OIL SEAL(31.8×37.8×4)	2
37-12		E3202-FIA0-0000	HOLDER, STEERING SHAFT	2
37-13		E3203-FIA0-0000	FIX PLATE, STEERING SHAFT	1
37-14		I0020-08060	BOLT, HEX.	2
37-15		E3210-LRB0-0000	HOLDERSTEERING SHAFT PRESSED PLATED	1
37-16		E3208-FIA0-0000	STEERING , COLLAR	2
37-17		E0259-LRA0-0000	STEERING TIE-ROD ASSYRIGHT	1
37-17-1		E0251-LRA0-0000	BOLTSTUD	1
37-17-2		E0252-5EA0-0000	NUT (R)	1
37-17-3		E0253-5EA0-0000	NUT (L)	1
37-17-4		E0255-LRA0-0000	UNIVERSAL JOINT(L)	1
37-17-5		E0256-LRA0-0000	UNIVERSAL JOINT(R)	1
37-18		D4611-9EA0-0000	FLANGE NUT, HEX.	4
37-19		I9900-25019	PIN, SPLIT	5

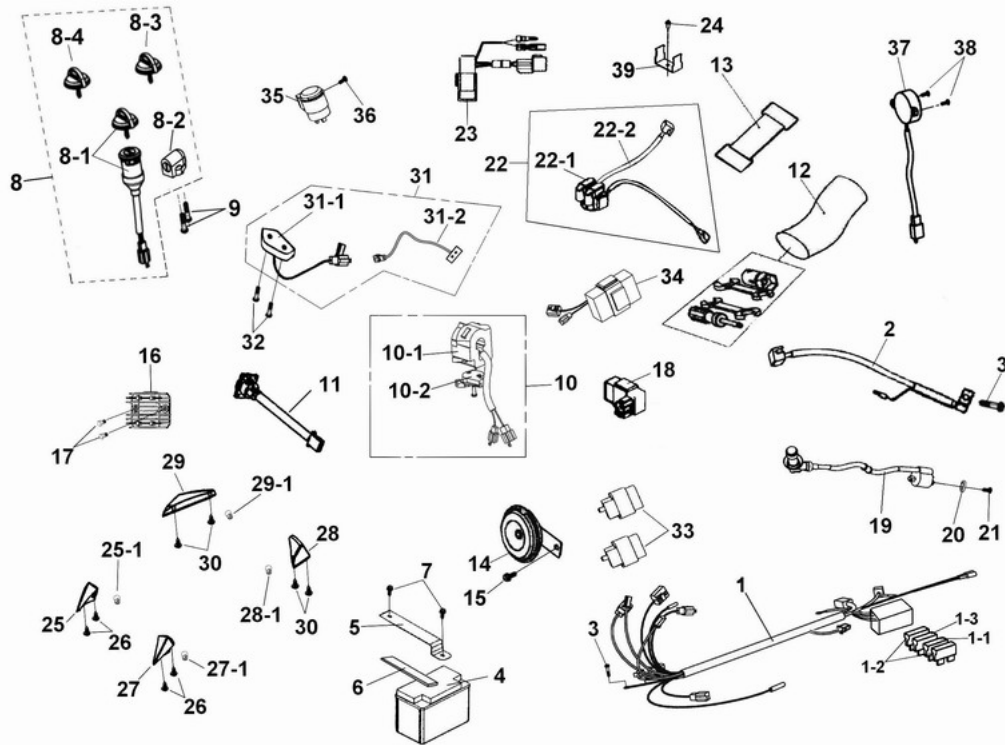


ITEM	AVAIL	PART NO.	NAME	QTY
38			ELECTRICAL EQUIPMENT	
38-1		C2100-LRC0-0000	WIRE HARNESS	1
38-1-1		C2010-GJA0-0000	FUSE(10A)	1
38-1-2		C2011-GJA0-0000	FUSE(15A)	2
38-1-3		C2013-LRA0-0000	FUSE(30A)	1
38-2		C2102-LRA0-0000	EARTH CABLE	1
38-3		I0153-06012	SCREW	1
38-4		C1500-LRA0-0000	BATTERY ASSY. (12AH)	1
38-5		C1502-LRA0-0000	BATTERY BAND	1
38-6		A7509-FID0-0000	LH. BACK MIRROR ASSY	1
38-7		I0149-06012	FLANGE BOLT, HEX.	2
38-8		C501A-LRC0-0001	MAIN SWITCH COMP	1
38-8-1		C5010-LRA0-0000	MAIN SWITCH	1
38-8-2		C5011-FIC0-0000	FAUCET LOCK	1
38-8-3		C5013-9FA0-0000	MATERIAL KEY (RIGHT CUT)	1
38-8-4		C5018-9FA0-0000	MATERIAL KEY (LEFT CUT)	1
38-9		I8501-5BA1-0000	BOLT,BROKENABLE	2
38-10		C5200-LRC0-0000	LEVER HOLDER ASSY., LEFT	1
38-10-1		C5201-LRC0-0000	LEVER HOLDER , LEFT	1
38-10-2		C5202-5EE0-0000	AIR CUT, LEVER	1
38-11		C1802-FIB0-0000	POWER SUPPLY	1
38-12		H9020-FIA0-0000	TOOL PACK	1
38-13		H9021-9FA0-0000	WIRE CLAMP	1
38-14		C8110-GJA0-0000	HORN	1
38-15		I0149-08012	FLANGE BOLT, HEX.	1
38-16		C1600-LRA0-0001	REG. REC. COMP.	1
38-17		I0149-06016	FLANGE BOLT, HEX.	2
38-18		C0410-RB1-0000	CDI UNIT ASS'Y	1
38-19		C051A-RB1-0000	IGN COIL ASS'Y	1
38-20		I2140-60001	WASHER	1
38-21		I0020-05024	BOLT HEX.	1
38-22		C585A-LRA0-0000	REALY ASSY, START	1
38-22-1		C5850-LRA0-0000	START RELAY	1
38-22-1	N	C5850-LRA0-0000	START RELAY	1
38-22-2		C2101-LRA0-0000	POSITIVE CABTE	1
38-22-2		C2101-LRA0-0000	POSITIVE CABTE	1
38-23		C576A-LRA0-0000	SHIFT GEAR CONTROL UNIT ASS'Y	1
38-24		I7701-50016	SCREW, TAPPING	1

38-25		C3401-LRC0-0000	TURN LAMP ASSY F.R	1
38-25-1		F1231-LRF0-0000	BULB	1
38-26		I7701-50016	SCREW, TAPPING	4
38-27		C3451-LRC0-0000	TURN LAMP ASSY F.L	1
38-27-1		F1231-LRF0-0000	BULB	1
38-28		F1240-LRC0-0000	TURN LAMP ASSY R.L	1
38-28-1		C3402-FIE0-0000	TURN LAMP BULB(10W)	1
38-29		F1230-LRC0-0000	TURN LAMP ASSY R.R	1
38-29-1		C3402-FIE0-0000	TURN LAMP BULB(10W)	1
38-30		I3903-312B0	TRUSS	4
38-31		C7200-LRA0-0000	SPEEDOMETER ASSY	1
38-31		C7200-LRA9-0000	SPEEDOMETER ASSY	1
38-31-1		C7201-LRA0-0000	SPEEDOMETER	1
38-31-2		C7207-FIC0-9000	METER SENSOR	1
38-32		I8506-05010	SCREW PAN	2
38-33		C850A-LRA0-0000	ELEC.RELAY ASSY	2
38-34		C872A-LRA0-0000	HAZARD CONTROL NUT ASSY	1
38-35		C8301-LRA0-0000	WINKER RELAY COMP	1
38-36		I0149-06012	FLANGE BOLT, HEX.	1
38-37		C8400-EMA0-0000	BUZZER	1
38-38		I2600-03012	SCREW, PAN	2
38-39		H0109-RB1-0000	MAG.STAY	1
38-40		C3101-FIGT-0000	REVERSING LIGHT	1

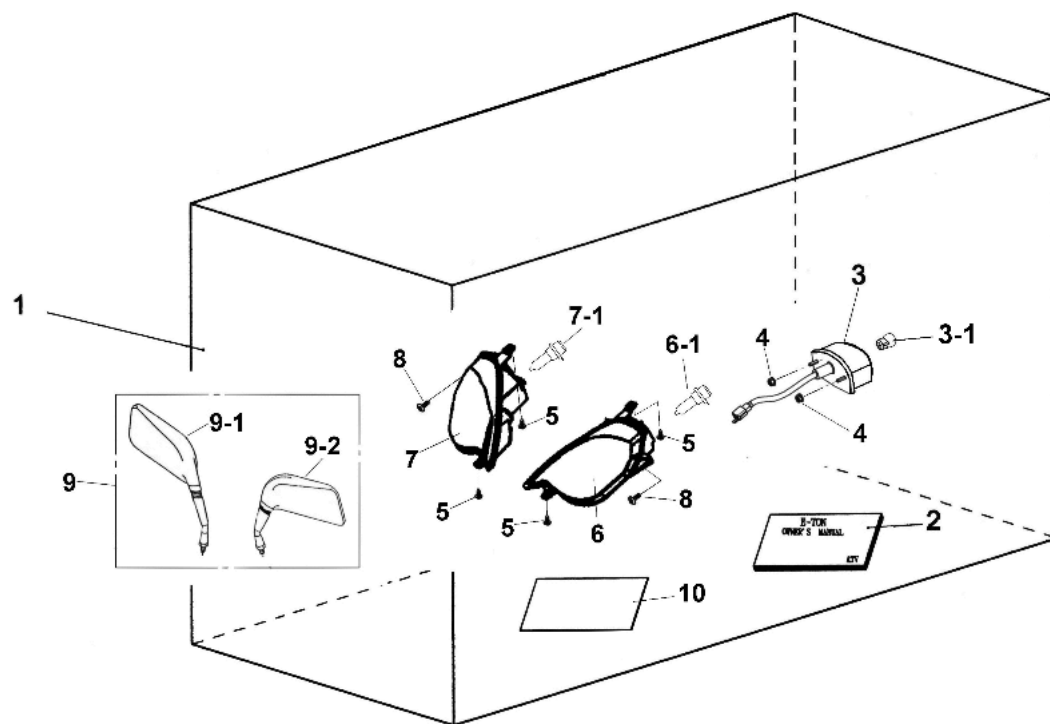

ITEM	AVAIL	PART NO.	NAME	QTY
39			PACKING CASE,EXTERNAL	
39-1		H9500-LRA0-0000	PACKING CASE,EXTERNAL	1
39-2	N	H9900-LRC0-0000	OWNER'S MANUAL	1
39-3		C5031-LRA0-0000	TAIL LIGHT	1
39-3-1		C5004-5BA1-0000	LAMP	1
39-4		I5611-06200-0G	HEX. FLANGE NUT, SAFETY	2
39-5		I7701-50016	SCREW, TAPPING	4
39-6		C5020-LRC0-0000	HEAD LIGHT ASSY.,LEFT	1
39-6-1		C5003-LRA0-0000	BULB	1
39-7		C5030-LRC0-0000	HEAD LIGHT ASSY.,RIGHT	1
39-7-1		C5003-LRA0-0000	BULB	1
39-8		E0117-9EA0-0000	SCREW, TRUSS	2
39-9		H8100-LRC0-0000	BACK MIRROR ASSY	1
39-9-1		H8110-LRC0-0000	REAR VIEW MIRROR ASSY,R	1
39-9-2		H8120-LRC0-0000	REAR VIEW MIRROR ASSY,L	1
39-10		H9905-MRC0-0000	CERTIFICAT OF ORIGIN	1

40 ACCESSORIES

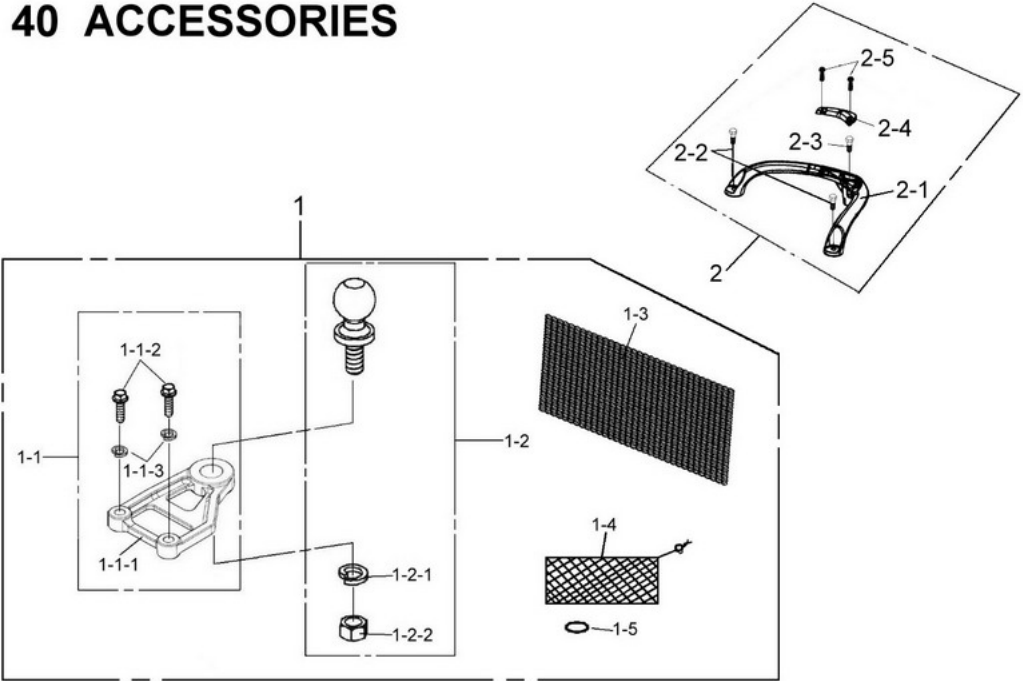

ITEM	AVAIL	PART NO.	NAME	QTY
40			ACCESSORIES	
40-1		Z0000-LRF0-0000	ACCESSORIES KIT(47.3)	1
40-1		Z0000-LRF0-9000	ACCESSORIES KIT(49.75)	1
40-1-1		E041C-LRA0-0000		1
40-1-1-1		E0418-LRA0-0000	VEHICLE A HOOK	1
40-1-1-2		I0149-10030	BOLT,FLANGE	2
40-1-1-3		I4111-10625-1A	SPRING WASHER	2
40-1-2	N	E0419-FIB0-0000	VEHICLE A HOOK BALL (1 7/8 inch)	1
40-1-2	N	E0419-FIB0-9000	VEHICLE A HOOK BALL (2 inch)	1
40-1-2-1		I3300-20000-0B	SPRING WASHER	1
40-1-2-2		I4100-19016	NUT	1
40-1-3		F4002-LRF0-0000	ANTI-SLIDE PAD	1
40-1-4		F4003-LRF0-0000	CARGO NET	2
40-1-5		F4004-LRF0-0000	O-RING	6
40-2		E041A-LRA0-0000	HANDRAIL ASSY	1
40-2-1	N	E0410-LRA0-0000	HANDRAIL	1
40-2-2		I0149-08030	FLANGE BOLT, HEX.	2
40-2-3		I5821-08020	FLANGE BOLT, HEX.	1
40-2-4		E0408-LRA0-0000	HANDRAIL COVER	1
40-2-5		I3903-312B0	TRUSS	2

No picture.

ITEM	AVAIL	PART NO.	NAME	QTY
41			SERVICE KITS,BRAKE CALLIPER	
41-1		G7120-FIC0-0001	BRAKE CALLIPER (L)	1
41-1-1		G7131-5EE0-0000	BRAKE SHOE COMP	1
41-1-2		G7132-5EE0-0000	BOLT LEAKAGE	1
41-1-3		G7133-BCA0-0000	CAP LEAKAGE	1
41-1-4		G7139-5EE0-0000	SPRING,PAO	1
41-1-5		G7137-5EE0-0000	SERVICE KITS, BRAKE CALIPER	1
41-1-5-1		G7134-5EE0-0000	RING,SEAL	1
41-1-5-2		G7135-5EE0-0000	RING,DUST RESISTANT	1
41-1-5-3		G7136-5EE0-0000	PISTON, BRAKE CALIPER	1
41-1-5-4		G7138-5EE0-0000	BRAKE SHOE ASSY	1
41-1-5-4-1		G7131-5EE0-0000	BRAKE SHOE COMP	1
41-1-5-4-2		G7139-5EE0-0000	SPRING,PAO	1
41-2		G7140-FIC0-0001	BRAKE CALLIPER	1
41-2-1		G7131-5EE0-0000	BRAKE SHOE COMP	1
41-2-2		G7132-5EE0-0000	BOLT LEAKAGE	1
41-2-3		G7133-BCA0-0000	CAP LEAKAGE	1
41-2-4		G7139-5EE0-0000	SPRING,PAO	1
41-2-5		G7137-5EE0-0000	SERVICE KITS, BRAKE CALIPER	1
41-2-5-1		G7134-5EE0-0000	RING,SEAL	1
41-2-5-2		G7135-5EE0-0000	RING,DUST RESISTANT	1
41-2-5-3		G7136-5EE0-0000	PISTON, BRAKE CALIPER	1
41-2-5-4		G7138-5EE0-0000	BRAKE SHOE ASSY	1
41-2-5-4-1		G7131-5EE0-0000	BRAKE SHOE COMP	1
41-2-5-4-2		G7139-5EE0-0000	SPRING,PAO	1
41-3		G7130-LRA0-0000	RR. CALIPER ASSY	1
41-3-1		G7131-LRA0-0000	PAD ASSY BRAKE	1
41-3-2		G7132-LRA0-0000	BOLT LEAKAGE	1
41-3-3		G7133-LRA0-0000	CAP LEAKAGE	1
41-3-4		G7139-5EE0-0000	SPRING,PAO	1
41-3-5		G7137-LRA0-0000	SERVICE KITS,BRAKE CALLIPER	1
41-3-5-1		G7134-LRA0-0000	RING,SEAL	1
41-3-5-2		G7135-LRA0-0000	RING,DUST RESISTANT	1
41-3-5-3		G7136-LRA0-0000	PISTON,BRAKE CALLIPER	1

No picture.

ITEM	AVAIL	PART NO.	NAME	QTY
42			TOOL	
42-1		A4451-HMA-FT1	TAKING TAPPET PIN TOOL	1
42-2		A4711-HMA-FT1	TAKING & FABRICATING IN. VALVE TOOL	1
42-3		A4721-HMA-FT1	ADJUST TAPPET IMPLEMENT	1
42-4		A9217-H9A-FT1	KNOCKING WATER PUMP OIL SEAL(IRON) IMPL	1
42-5		B2101-HMA-FT1	ALL-PURPOSE FIXER	1
42-6		I6150-RB1-FT1	TAKING BRG. RB1 TOOL	1
42-7		B3411-RB1-FT1	ASSEMBLING DRIVE SHAFT TOOL	1
42-8		C1110-RB1-FT1	TACKING ACG FLY WHEEL TOOL	1
42-9		E0205-LRA0-FT1	Ball Joint Puller	1
42-10		E1105-LRA0-FT1	Adjustable Hook Spencer	1
42-11		I0202-HMA-FT1	TAKING & LOCKING SPECIAL NUT 36MM SLEEVE	1
42-12		I1001-KJ9-FT1	KNOCKING BRG.(6901) WATER PUMP IMPLEMENT	1
42-13		I1003-RB1-FT1	COUNTER SHIFT IMPLEMENT	1
42-14		I1201-HMA-FT1	SLEEVE OF FABRICATING L CRANK & OIL SEAL	1
42-15		I1202-RB1-FT1	SLEEVE OF FABRICATING TRANSMISSION SHAFT	1
42-16		I1205-KF0-FT1	KNOCKING WATER PUMP OIL SEAL IMPLEMENT (	1
42-17		I6100-6204-FT3	TAKING BRG. 62040 LARGE-SIZE TOOL	1
42-18		I6100-6204-FT2	KNOCKING BRG.(6204) IMPLEMENT	1
42-19		I6100-6305-FT1	TAKING TRANSMISSION SHAFT BRG. 6305 TOOL	1
42-20		I6140-6201-FT1	FABRICATING R CRANK CASE COVER 6201 BRG	1
42-21		I6150-6006-FT1	L CRANK CASE COVER 6006 BRG. FABRICATIN	1
42-22		I6150-6205-FT1	TAKING 6205 BRG. TOOL	1
42-23		I6150-6205-FT2	6205 BRG. KNOCK TOOL	1
42-24		I6150-6205-FT3	PNEUMATIC TAKING BRG. 6205 TOOL	1