

# PARTS CATALOGUE

## Viper Jr. RXL-40

---




# CONTENTS

## PARTS ITEM:

- 1 CYLINDER, SHROUD CYLINDER
- 2 CRANK SHAFT, CRANK CASE, PISTON
- 3 TRANSMISSION
- 4 CARBURETOR, AIR CLEANER
- 5 STARTERENG ASSY
- 6 EXHAUST PIPE
- 7 FRAME
- 8 A- ARM
- 9 SWING ARM SUB
- 10 FENDER , SEAT
- 11 SUSPENSION
- 12 FUEL TANK
- 13 FRONT WHEEL
- 14 REAR WHEEL
- 15 REAR BRAKE
- 16 HANDLE BAR
- 17 FEND BAR , FOOTREST
- 18 REAR WHEEL AXLE
- 19 CHAIN
- 20 STEERING
- 21 BRAKE
- 22 TOOL BOX ,PACKING CASE,EXTERNAL
- 30 CYLINDER PISTON TOP END KIT (1)
- 31 CYLINDER PISTON TOP END KIT (2)


**N & sign meaning: not available to sale**

1. CYLINDER / SHROUD CYLINDER

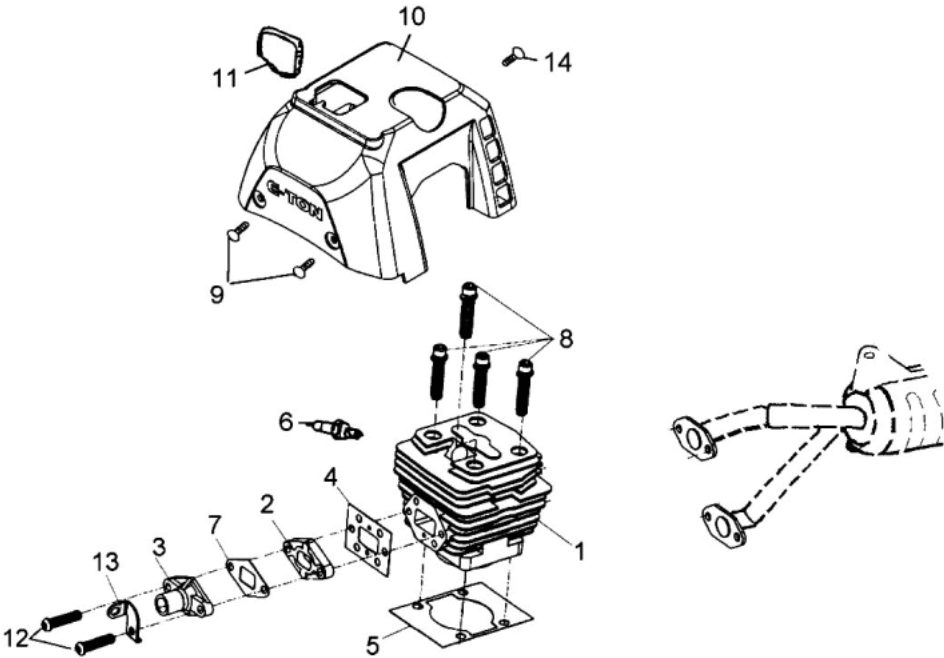

| ITEM | AVAIL | PART NO.       | NAME                      | QTY |
|------|-------|----------------|---------------------------|-----|
| 1    |       |                | CYLINDER, SHROUD CYLINDER |     |
| 1-1  |       | A2100-UE1-0001 | CYLINDER COMP.            | 1   |
| 1-2  |       | A7111-UE1-0000 | INLET PIPE,INSULATOR      | 1   |
| 1-3  |       | A7110-UE1-0002 | PIPE INLET                | 1   |
| 1-4  |       | A6201-UE1-0000 | GASKET CARB INSULATOR     | 1   |
| 1-5  |       | A2191-UE1-0000 | GASKET CYLINDER           | 1   |
| 1-6  |       | I8000-UE1-9000 | SPARK PLUG (BPM6Y)        | 1   |
| 1-7  |       | A6211-UE1-0000 | GASKET CARB.              | 1   |
| 1-8  |       | I6705-06035-0C | SCREW WASHER              | 4   |
| 1-9  |       | I3893-05012-0G | SCREW WASHER              | 2   |
| 1-10 |       | A9620-UE1-0001 | SHROUD,CYLINDER           | 1   |
| 1-11 |       | A9625-UE1-0000 | CAP CYLINDER SHROUD       | 1   |
| 1-12 |       | I3500-05028-0H | SCREW PAN                 | 2   |
| 1-13 |       | A7112-UE1-0000 | CARB PLATE                | 1   |
| 1-14 |       | I3893-05012-0H | SCREW WASHER              | 1   |


## 2.CRANK SHAFT/CRANK CASE/PISTON

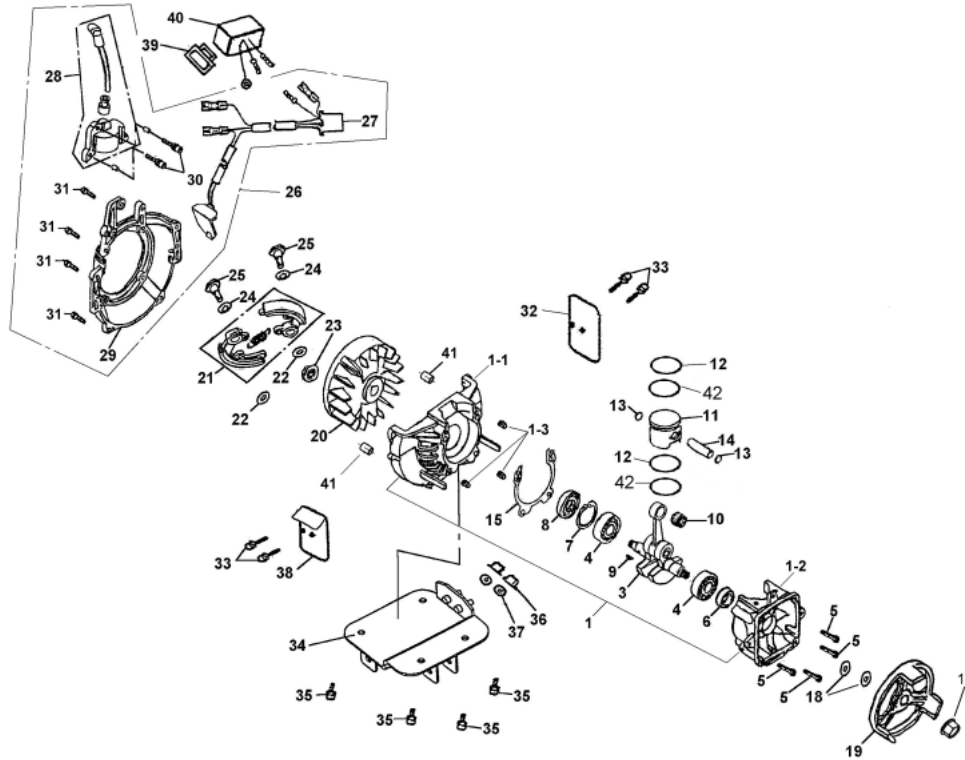

| ITEM  | AVAIL | PART NO.       | NAME                            | QTY |
|-------|-------|----------------|---------------------------------|-----|
| 2     |       |                | CRANK SHAFT, CRANK CASE, PISTON |     |
| 2-1   |       | A1000-UE1-0900 | CRANK CASE COMP                 | 1   |
| 2-1-1 | N     | A1100-UE1-0903 | R-CASE                          | 1   |
| 2-1-2 | N     | A1200-UE1-0902 | L-CASE                          | 1   |
| 2-1-3 |       | I4305-32082    | SPRING PIN                      | 3   |
| 2-3   |       | A3000-UE1-8004 | CRANKSHAFT COMP.                | 1   |
| 2-4   |       | I6100-62013-10 | BEARING, BALL, RADIAL           | 2   |
| 2-5   |       | I3500-05028-0H | SCREW PAN                       | 4   |
| 2-6   |       | I1201-UE1-0000 | OIL SEAL                        | 1   |
| 2-7   |       | I4520-32000    | CIRCLIP                         | 1   |
| 2-8   |       | I1202-UE1-0000 | OIL SEAL                        | 1   |
| 2-9   |       | I4401-10037    | WOODRUFF KEY                    | 1   |
| 2-10  |       | I1100-1014148  | BEARING, CON-ROD                | 1   |
| 2-11  |       | A3101-UE1-0002 | PISTON                          | 1   |
| 2-12  |       | A3011-B02-0000 | PISTON RING SET                 | 1   |
| 2-13  |       | I4601-B02-0000 | CLIP, PISTON PIN                | 2   |
| 2-14  |       | A3111-B02-0000 | PIN PISTON                      | 1   |
| 2-15  |       | A1192-UE1-0000 | GASKET CRANK CASE               | 1   |
| 2-17  |       | I0309-083H0    | NUT CHECK                       | 1   |
| 2-18  |       | I4101-08516    | WASHER                          | 2   |
| 2-19  |       | B8211-UE1-8000 | CLUTCH ONEWAY                   | 1   |
| 2-20  |       | C1100-UE1-0001 | A.C. GEN ASSY                   | 1   |
| 2-21  |       | B253A-UE1-9000 | WEIGHT SET CLUTCH               | 1   |
| 2-22  |       | I4104-08010    | WASHER                          | 2   |
| 2-23  |       | I4050-08075-0H | NUT HEXAGON HEAD                | 1   |
| 2-24  |       | I4121-10G00    | WASHER WAVE                     | 2   |
| 2-25  |       | B2402-UE1-0000 | BOLT WEIGHT CLUTCH              | 2   |
| 2-26  |       | A133A-UE1-0001 | R-COVER ASSY                    | 1   |
| 2-27  |       | C0520-UE1-0000 | HOLDER COIL                     | 1   |
| 2-28  |       | C0510-UE1-0000 | COIL ASS'Y IGNITION             | 1   |
| 2-29  |       | A1331-UE1-0901 | R-COVER                         | 1   |
| 2-30  |       | I3401-04020-0H | BOLT WASHER                     | 2   |
| 2-31  |       | I6706-05020-0C | SCREW WASHER                    | 4   |
| 2-32  |       | A1131-UE1-0000 | FENDER                          | 1   |
| 2-33  |       | I3893-05012-0G | SCREW WASHER                    | 4   |
| 2-34  |       | E0102-UE1-0000 | ENGINE BRACKET                  | 1   |
| 2-35  |       | I6706-06020-0C | SCREW WASHER                    | 4   |
| 2-36  |       | I4050-06060-0H | FLANGE NUT, HEX.                | 2   |


|      |  |                |                                  |   |
|------|--|----------------|----------------------------------|---|
| 2-37 |  | I4111-06100    | SPRING WASHER                    | 2 |
| 2-38 |  | A1132-UE1-0000 | FRONT FENDER                     | 1 |
| 2-39 |  | C0531-UE1-0000 | JACKET RESTRICT VELOCITY<br>UNIT | 1 |
| 2-40 |  | C0530-UE1-0000 | RESTRICT VELOCITY UNIT           | 1 |
| 2-41 |  | I4305-45100    | SPRING-PIN                       | 2 |
| 2-42 |  | A3122-UE1-0000 | INNER RING                       | 2 |

### 3.TRANSMISSION

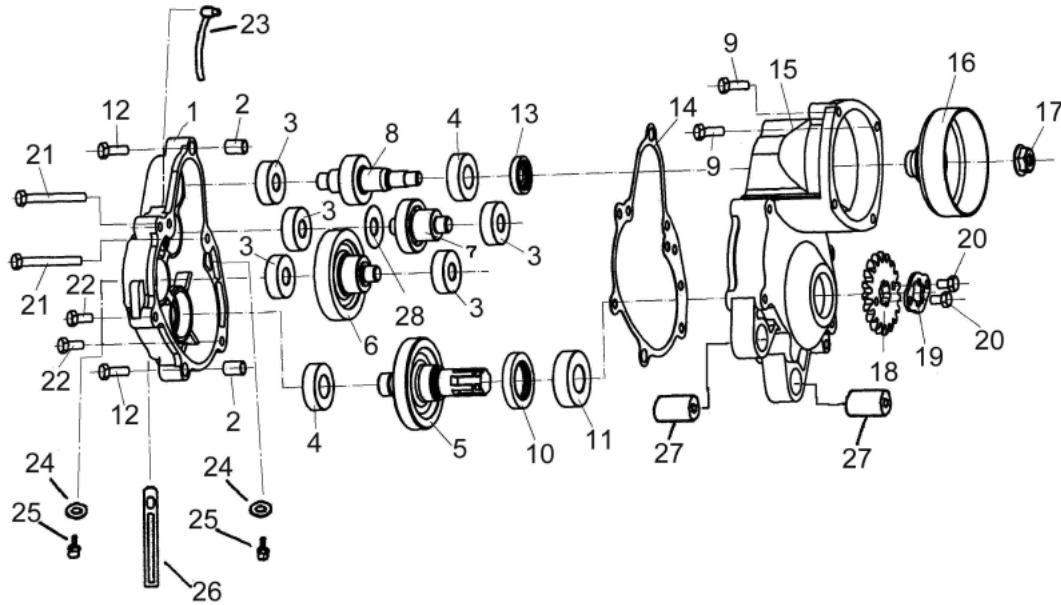

| ITEM | AVAIL | PART NO.       | NAME                   | QTY |
|------|-------|----------------|------------------------|-----|
| 3    |       |                | TRANSMISSION           |     |
| 3-1  |       | B1300-UE1-0902 | COVER, GEAR BOX        | 1   |
| 3-2  |       | I4301-10140    | KNOCK PIN              | 2   |
| 3-3  |       | I6100-62013-10 | BEARING, BALL, RADIAL  | 5   |
| 3-4  |       | I6100-60030    | BEARING, BALL, RADIAL  | 2   |
| 3-5  |       | B3430-UE1-0000 | FINAL SHAFT COMP.      | 1   |
| 3-6  |       | B3420-UE1-0000 | COUNTER GEAR COMP.     | 1   |
| 3-7  |       | B3440-UE1-0000 | IDLE GEAR COMP         | 1   |
| 3-8  |       | B3411-UE1-0000 | DRIVE SHAFT            | 1   |
| 3-9  |       | I6001-06032-0C | BOLT HEXAGON HEAD      | 2   |
| 3-10 |       | I1203-B00-0000 | OIL SEAL               | 1   |
| 3-11 |       | I6150-60040-10 | BEARING, BALL, RADIAL  | 1   |
| 3-12 |       | I6001-06035-0H | FLANGE BOLT, HEX.      | 2   |
| 3-13 |       | I1225-42007    | OIL SEAL(INNER)        | 1   |
| 3-14 |       | B1395-UE1-0000 | GASKET,GEAR BOX        | 1   |
| 3-15 |       | B1200-UE1-0901 | GEAR BOX               | 1   |
| 3-16 |       | B2101-UE1-0000 | CLUTCH OUTER COMP.     | 1   |
| 3-17 |       | I4050-10080-0H | NUT FLANGE             | 1   |
| 3-18 |       | B3801-UE1-0000 | SPROCKET               | 1   |
| 3-19 |       | B3811-A00-0000 | PLATE FIXING           | 1   |
| 3-20 |       | I2201-06010-0H | BOLT, HEX.             | 2   |
| 3-21 |       | I6001-06100-0C | BOLT HEXAGON HEAD      | 2   |
| 3-22 |       | I6001-06028-0H | FLANGE BOLT, HEX.      | 2   |
| 3-23 |       | A1220-UE1-0000 | BREATHER HOSE COMP.    | 1   |
| 3-24 |       | I4102-08020    | WASHER                 | 2   |
| 3-25 |       | I5801-08012-0H | FLANGE BOLT, HEX.      | 2   |
| 3-26 |       | C2962-UE1-0000 | CLAMPER PULSER CORD    | 1   |
| 3-27 |       | A1203-B00-0000 | RUBBER BUSH RR CUSHION | 2   |
| 3-28 |       | I4121-12J00    | WASHER WAVE            | 1   |


#### 4. CARBURETOR, AIR CLEANER

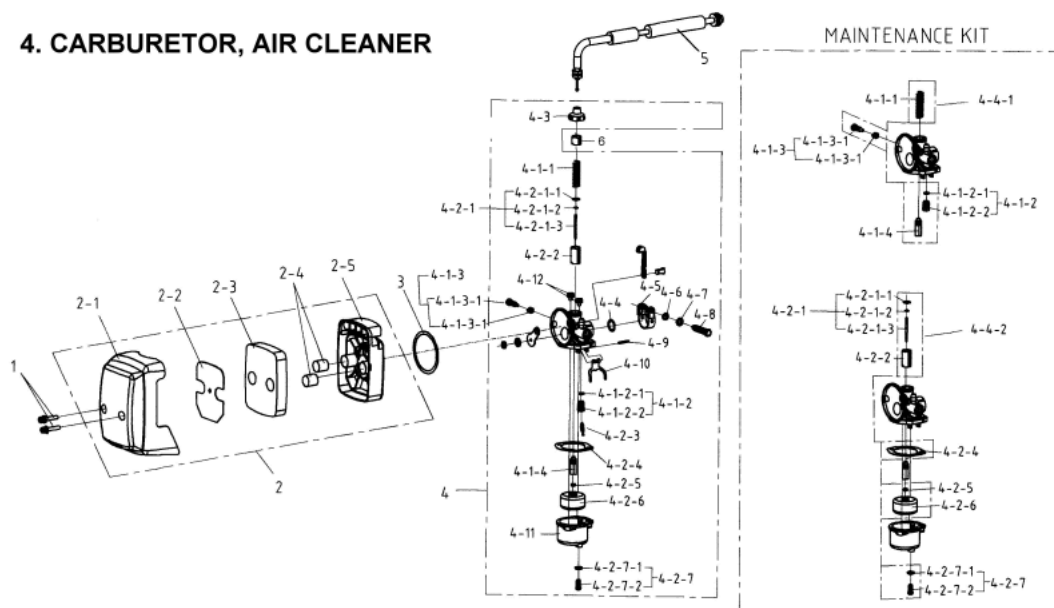

| ITEM      | AVAIL | PART NO.       | NAME                      | QTY |
|-----------|-------|----------------|---------------------------|-----|
| 4         |       |                | CARBURETOR, AIR CLEANER   |     |
| 4-1       |       | I3893-04025-0H | SCREW WASHER              | 2   |
| 4-2       |       | A720A-UE1-0002 | AIR CLEANER ASSY          | 1   |
| 4-2-1     |       | A7231-UE1-0002 | COVER AIR/C               | 1   |
| 4-2-2     |       | A7232-UE1-0000 | FILTER HOLDER             | 1   |
| 4-2-3     |       | A7233-UE1-0000 | ELEMENT                   | 1   |
| 4-2-4     |       | A7234-UE1-9000 | BUSH                      | 2   |
| 4-2-5     |       | A7230-UE1-0001 | CASE AIR/C                | 1   |
| 4-3       |       | A7201-UE1-0000 | GASKET AIR CLEANER        | 1   |
| 4-4       |       | A610A-UE1-0001 | CARBURETOR ASSY           | 1   |
| 4-4-1     |       | A6100-UE1-A003 | MAINTENANCE KIT 3         | 1   |
| 4-4-1-1   |       | KAC40410       | THROTTLE VALVE VE SPRING  | 1   |
| 4-4-1-2   |       | KBC40710       | VALVE SEAT COMP           | 1   |
| 4-4-1-2-1 | N     | KBC40711       | O-RING                    | 1   |
| 4-4-1-2-2 | N     | KBC40712       | VALVE SEAT                | 1   |
| 4-4-1-3   | N     | KAC40920       | THROTTLE ADJUSTING ASSY.  | 1   |
| 4-4-1-3-1 | N     | KAC40921       | THROTTLE ADJUSTING        | 1   |
| 4-4-1-3-2 | N     | KAC40922       | THROTTLE ADJUSTING SPRING | 1   |
| 4-4-1-4   | N     | KAC40610       | NEEDLE JET(*9.5)          | 1   |
| 4-4-2     |       | A6100-UE1-A004 | MAINTENANCE KIT 4         | 1   |
| 4-4-2-1   |       | KAC40230       | JET NEEDLE ASSY.          | 1   |
| 4-4-2-1-1 | N     | KAC40310       | CLIP(A)                   | 1   |
| 4-4-2-1-2 | N     | KAC40233       | CLIP(B)                   | 1   |
| 4-4-2-1-3 | N     | KAC40231       | JET NEEDLE(*183)          | 1   |
| 4-4-2-2   | N     | KAC40110       | THROTTLE VALVE            | 1   |
| 4-4-2-3   | N     | KBC40810       | NEEDLE VALVE              | 1   |
| 4-4-2-4   | N     | KAC41010       | CHAMBER PACKING           | 1   |
| 4-4-2-5   | N     | KAC40510       | MAIN JET(*64)             | 1   |
| 4-4-2-6   | N     | KAC41110       | FLOAT                     | 1   |
| 4-4-2-7   | N     | KAC41320       | DRAIN SCREW ASSY          | 1   |
| 4-4-2-7-1 | N     | KAC41322       | WASHER                    | 1   |
| 4-4-2-7-2 | N     | KAC41321       | DRAIN SCREW               | 1   |
| 4-4-3     |       | A6102-UE1-0000 | CARBURETOR COVER          | 1   |
| 4-4-4     |       | A6103-UE1-0000 | WASHER                    | 1   |
| 4-4-5     |       | A6104-UE1-0000 | BIND RING                 | 1   |
| 4-4-6     |       | A6105-UE1-0000 | WASHER                    | 1   |
| 4-4-7     |       | A6106-UE1-0000 | SPRING WASHER             | 1   |
| 4-4-8     |       | A6107-UE1-0000 | BOLT                      | 1   |
| 4-4-9     |       | A6109-UE1-0000 | FLOAT ARM PIN             | 1   |


|               |  |                        |                         |          |
|---------------|--|------------------------|-------------------------|----------|
| <b>4-4-10</b> |  | <b>A6108-UE1-0000</b>  | <b>FLOAT ARM</b>        | <b>1</b> |
| <b>4-4-11</b> |  | <b>A6111-UE1-0000</b>  | <b>FLOAT ROOM</b>       | <b>1</b> |
| <b>4-4-12</b> |  | <b>A6114-UE1-0000</b>  | <b>BOLT</b>             | <b>2</b> |
| <b>4-5</b>    |  | <b>A7910-UE1-0001</b>  | <b>CABLE ASSY THROT</b> | <b>1</b> |
| <b>4-6</b>    |  | <b>A6101-4HA0-0000</b> | <b>CARBURATOR BUSH</b>  | <b>1</b> |

5.STARTER 、 ENG ASSY.

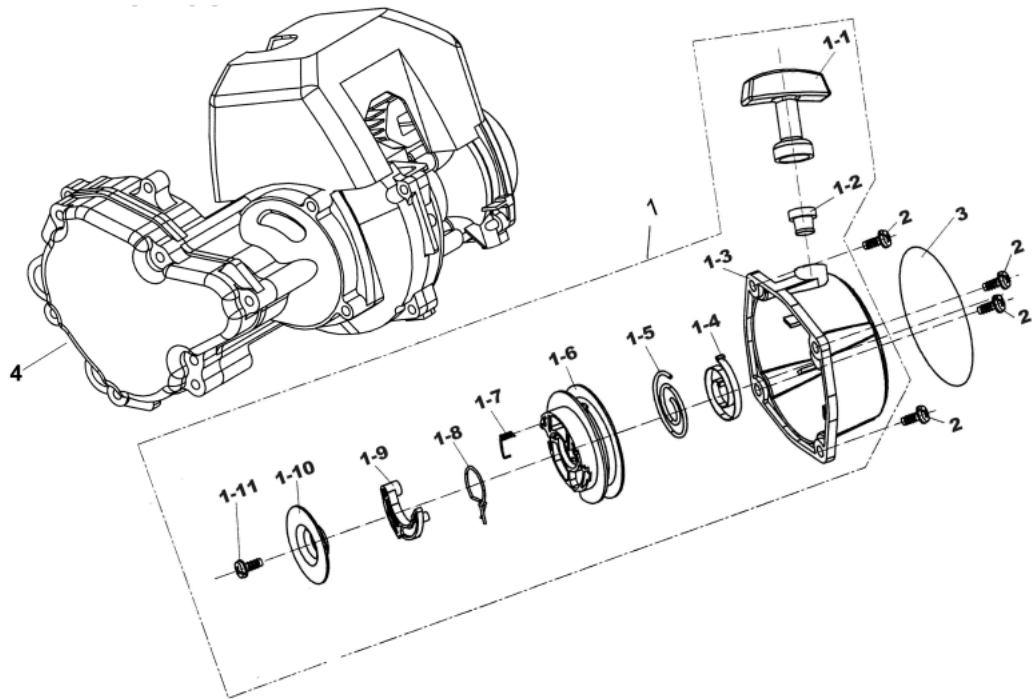


| ITEM   | AVAIL | PART NO.       | NAME               | QTY |
|--------|-------|----------------|--------------------|-----|
| 5      |       |                | STARTERENG ASSY    |     |
| 5-1    |       | A134A-UE1-8001 | COVER ASSY L SIDE  | 1   |
| 5-1-1  | N     | A1342-UE1-8000 | KNOB               | 1   |
| 5-1-2  | N     | A1351-UE1-8000 | GROMMET            | 1   |
| 5-1-3  | N     | A1341-UE1-8000 | L-COVER            | 1   |
| 5-1-4  | N     | A1343-UE1-8000 | SPRING             | 1   |
| 5-1-5  | N     | A1345-UE1-8001 | ROPE               | 1   |
| 5-1-6  | N     | A1344-UE1-8000 | REEL               | 1   |
| 5-1-7  | N     | A1352-UE1-8000 | RETURN PULL SPRING | 1   |
| 5-1-8  | N     | A1346-UE1-8000 | ARM                | 1   |
| 5-1-9  | N     | A1353-UE1-0000 | TENSION ARM        | 1   |
| 5-1-10 | N     | A1347-UE1-8000 | COLLAR             | 1   |
| 5-1-11 | N     | I3901-211H0    | TAPPING SCREW PAN  | 1   |
| 5-2    |       | I3893-06016-0H | SCREW WASHER       | 4   |
| 5-3    |       | A1350-UE1-0000 | LABEL RECOIL       | 1   |
| 5-4    |       | AA000-UE1-7000 | ENG ASSY.          | 1   |

## 6.EXHAUST PIPE

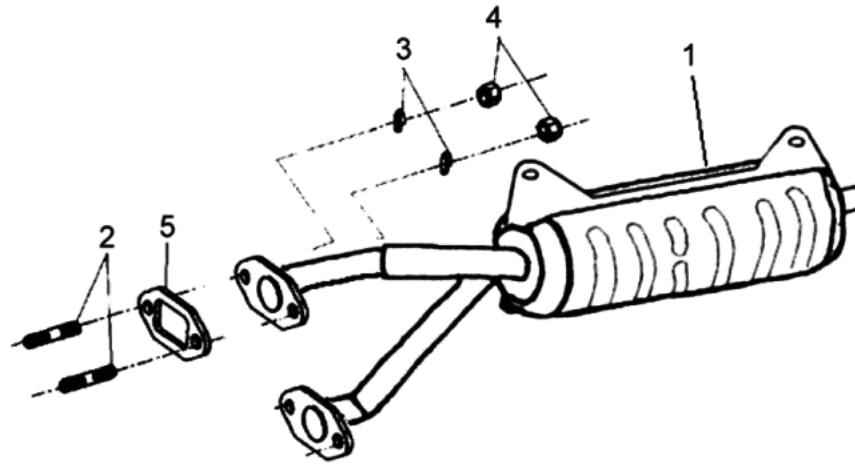


| ITEM | AVAIL | PART NO.       | NAME                | QTY |
|------|-------|----------------|---------------------|-----|
| 6    |       |                | EXHAUST PIPE        |     |
| 6-1  |       | A830A-UE1-9000 | EXHAUST PIPE ASSY.  | 1   |
| 6-2  |       | I2900-05016-0A | STUD BOLT           | 2   |
| 6-3  |       | I4111-05100    | SPRING WASHER       | 2   |
| 6-4  |       | I0309-050G0    | NUT, CHECK          | 2   |
| 6-5  |       | A8291-UE1-0001 | GASKET EXHAUST PIPE | 1   |

## 7.FRAME

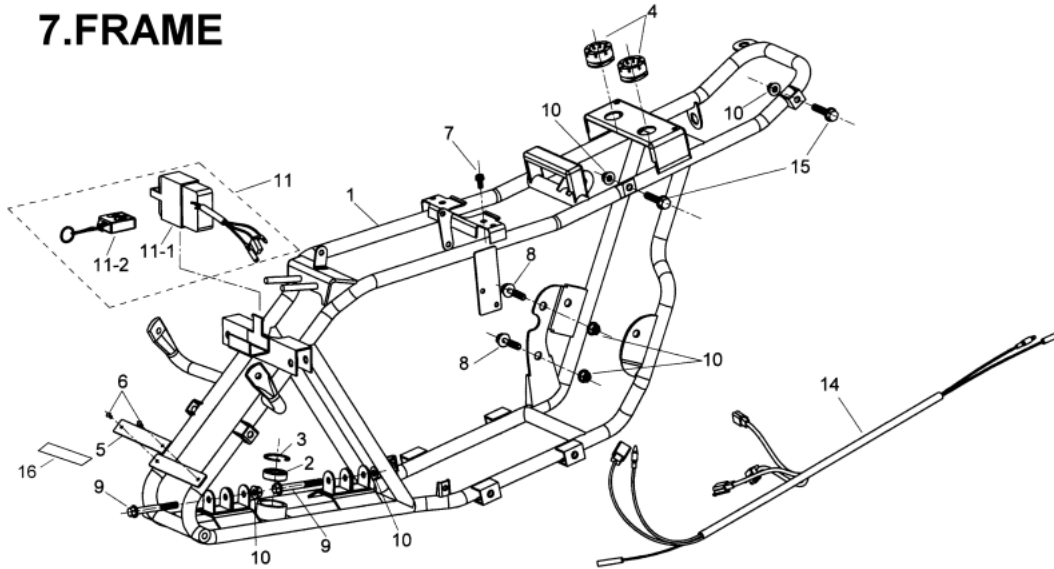


| ITEM   | AVAIL | PART NO.        | NAME                               | QTY |
|--------|-------|-----------------|------------------------------------|-----|
| 7      |       |                 | FRAME                              |     |
| 7-1    |       | E0100-4HB0-0000 | FRAME COMP.                        | 1   |
| 7-2    |       | I6100-6002ZZ    | BEARING (6002ZZ)                   | 1   |
| 7-3    |       | I4510-32000     | C CLIP EX 32                       | 1   |
| 7-4    |       | G7212-5EA0-0000 | RUBBER DAMPER                      | 2   |
| 7-5    | N     | E0101-4HA0-0000 | VIN PLATE                          | 1   |
| 7-6    |       | H750A-5BA1-0000 | NAIL, PULL                         | 2   |
| 7-7    |       | I8557-06012     | SCREW WASHER                       | 1   |
| 7-8    |       | I0149-08036-01  | BOLT,FLANGE                        | 2   |
| 7-9    |       | I2502-08070-0B  | BOLT,FLANGE(M8×70)                 | 2   |
| 7-10   |       | I5611-08200     | HEX. FLANGE NUT, SAFETY            | 6   |
| 7-11   |       | C2105-4HB0-1000 | ROMOTE CONTROL SAFETY SWITCH ASSY. | 1   |
| 7-11-1 |       | C2106-4HB0-1000 | RECEIVE(BLACK)                     | 1   |
| 7-11-2 |       | C2107-4HB0-1000 | ROMOTE CONTROL(433MHZ)(YELLOW)     | 1   |
| 7-14   |       | C2100-4HB0-0000 | MAIN WIRE ASSY.                    | 1   |
| 7-15   |       | I0105-08040     | BOLT, FLANGE                       | 2   |
| 7-16   |       | F4309-5EA0-0000 | STICKER, MFD.                      | 1   |

## 8.A- ARM

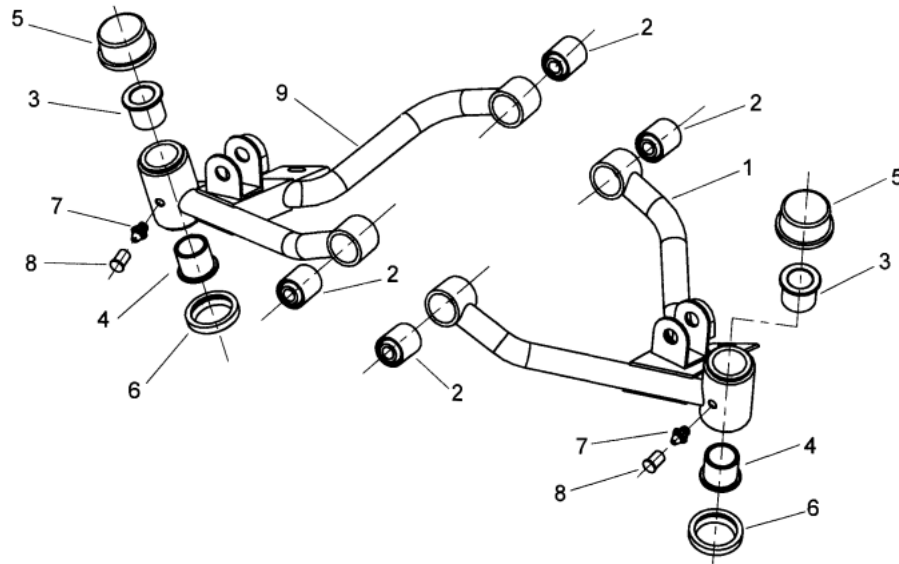


| ITEM | AVAIL | PART NO.        | NAME                  | QTY |
|------|-------|-----------------|-----------------------|-----|
| 8    |       |                 | A- ARM                |     |
| 8-1  |       | E0200-4HA0-0000 | ARM, SUSPENSION, L.H. | 1   |
| 8-2  | N     | E0201-4HA0-0000 | BUSH (20×8.1×21×24)   | 4   |
| 8-3  |       | E0207-5EA0-0000 | OIL LINER(15.5)       | 2   |
| 8-4  |       | E0206-5EA0-0000 | OIL LINER(17)         | 2   |
| 8-5  |       | E0202-5EA0-0000 | WATERPROOF SEAL       | 2   |
| 8-6  |       | E0203-5EA0-0000 | DUST SEAT             | 2   |
| 8-7  |       | I6600-06000     | GREASE VALVE          | 0   |
| 8-8  |       | E0209-5EA0-9000 | CAP, GREASE VALVE     | 2   |
| 8-9  |       | E0210-4HA0-0000 | ARM, SUSPENSION, R.H. | 1   |

9.SWINGARM

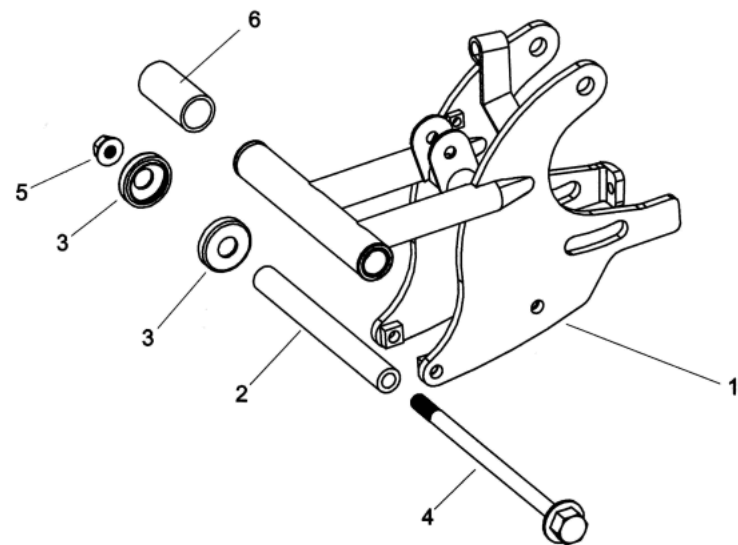

| ITEM | AVAIL | PART NO.        | NAME                          | QTY |
|------|-------|-----------------|-------------------------------|-----|
| 9    |       |                 | SWING ARM SUB                 |     |
| 9-1  |       | E220A-4HB0-0000 | SWING ARM SUB ASSY.           | 1   |
| 9-2  |       | E2209-4HA0-0000 | SWING ARM SPACER(17×10×158.5) | 1   |
| 9-3  |       | E2205-4HA0-0000 | SWING ARM SEAL COVER (25.4)   | 2   |
| 9-4  |       | E2201-4HA0-0000 | FLANGE BOLT, HEX.             | 1   |
| 9-5  |       | I5612-10200     | HEX. FLANGE NUT, SAFETY       | 1   |
| 9-6  |       | E2202-4HA0-0000 | RUBBER SLEEVE                 | 1   |



## 10.FENDER,SEAT

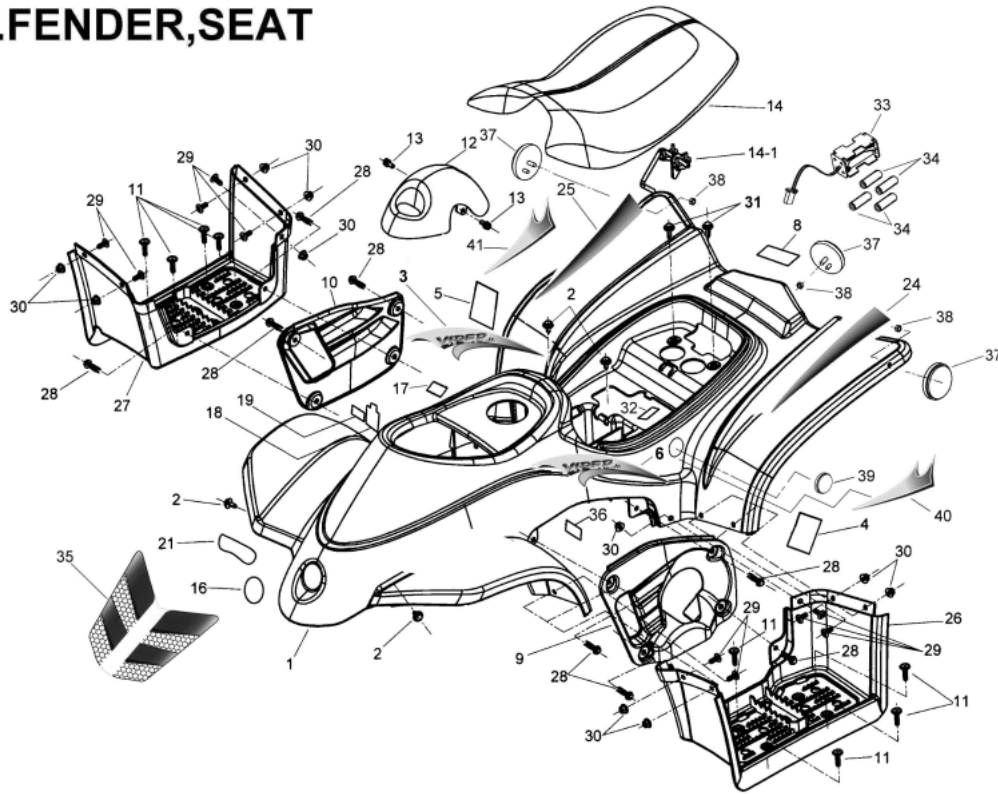


| ITEM    | AVAIL | PART NO.        | NAME                             | QTY |
|---------|-------|-----------------|----------------------------------|-----|
| 10      |       |                 | FENDER , SEAT                    |     |
| 10-1    |       | F4300-4HB0-4200 | FENDER(RED)                      | 1   |
| 10-1    |       | F4300-4HB0-5400 | FENDER(BLUE)                     | 1   |
| 10-2    |       | I0119-06802     | BOLT, HEX.                       | 4   |
| 10-3    |       | H7104-4HB0-9000 | STICKER, VIPER jr(R)             | 1   |
| 10-4    |       | H7101-4HA0-0000 | STICKER, WARNING(PASSENGER)      | 1   |
| 10-5    |       | H7102-4HA0-9000 | STICKER, WARNING (Y6)            | 1   |
| 10-6    |       | H7103-4HB0-9000 | STICKER, VIPER jr(L)             | 1   |
| 10-8    |       | C2109-4HB0-0000 | STICKER,SAFETY ROMOTE CONTROLLER | 1   |
| 10-9    |       | F4500-4HB0-0000 | FENDER SIDE COVER(L)             | 1   |
| 10-10   |       | F4400-4HB0-0000 | FENDER SIDE COVER(R)             | 1   |
| 10-11   |       | I8310-06020-01  | SCREW, OVAL                      | 8   |
| 10-12   |       | E3205-4HA0-5400 | COVER, HANDLE BAR(BLUE)          | 1   |
| 10-12   |       | E3205-4HA0-4200 | COVER, HANDLE BAR(RED)           | 1   |
| 10-13   |       | I8556-06016     | SCREW WASHER                     | 2   |
| 10-14   |       | G7200-4HB0-0000 | SEAT ASSY.                       | 1   |
| 10-14-1 |       | G7201-4HB0-0000 | SEAT FIXER ASSY                  | 1   |
| 10-16   |       | H7107-5EB0-0000 | EMBLEM, E-TON LOGO(SILVER)       | 1   |
| 10-17   |       | H7105-4HA0-0000 | STICKER,WARNING,OILPREMIX        | 1   |
| 10-18   |       | H7101-4HA1-0000 | STICKER,WARNING,CE               | 1   |
| 10-19   |       | H7102-5EA1-0000 | STICKER,CE                       | 1   |
| 10-25   |       | H7127-4HB0-9000 | STICKER,REAR FRAME COVER(R)      | 1   |
| 10-26   |       | H3520-4HB0-0000 | FOOTREST (L)                     | 1   |
| 10-27   |       | H3620-4HB0-0000 | FOOTREST (R)                     | 1   |
| 10-28   |       | I8310-FIA0-0000 | PLASTIC SCREW                    | 8   |
| 10-29   |       | E0117-9EA0-0000 | SCREW, TRUSS                     | 10  |
| 10-30   |       | I5611-06200-0G  | HEX. FLANGE NUT, SAFETY          | 10  |
| 10-31   |       | I0119-06821     | BOLT, HEX.                       | 2   |
| 10-32   |       | H7130-4HB0-0000 | BATTERY INDICATE STICKER         | 1   |
| 10-33   |       | C150A-4HB0-0000 | BATTERY BOX ASSY.                | 1   |
| 10-34   |       | C1500-4HB0-0000 | DRY BATTERY(1.5V)                | 4   |
| 10-35   |       | H7121-4HB0-9000 | STICKER,FRONT FENDER             | 1   |
| 10-39   |       | A1105-B00-0000  | CAP RUBBER R                     | 1   |
| 10-40   |       | H7128-4HB0-9000 | STICKER,REAR FENDER(L)           | 1   |
| 10-41   |       | H7129-4HB0-9000 | STICKER,REAR FENDER(R)           | 1   |
| 10-42   |       | H7105-4HB0-0000 | STICKER,MAXIMUN SPEED            | 1   |

11. SUSPENSION

| ITEM | AVAIL | PART NO.        | NAME                      | QTY |
|------|-------|-----------------|---------------------------|-----|
| 11   |       |                 | SUSPENSION                |     |
| 11-1 |       | E1105-4HA0-9000 | SUSPENSION FRONT          | 2   |
| 11-2 |       | I0102-10040     | BOLT, HEX                 | 6   |
| 11-3 |       | I9900-25019     | PIN, SPLIT                | 0   |
| 11-4 |       | E2400-4HA0-0000 | SHOCK ABSORBER ASSY. REAR | 1   |
| 11-5 |       | I0468-12006     | PIN                       | 2   |

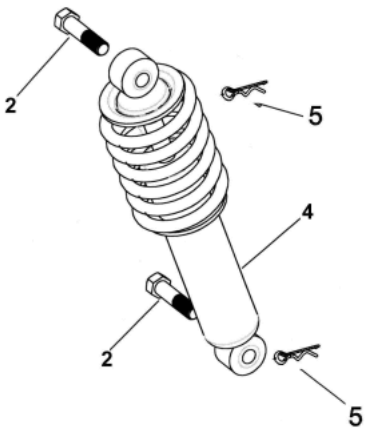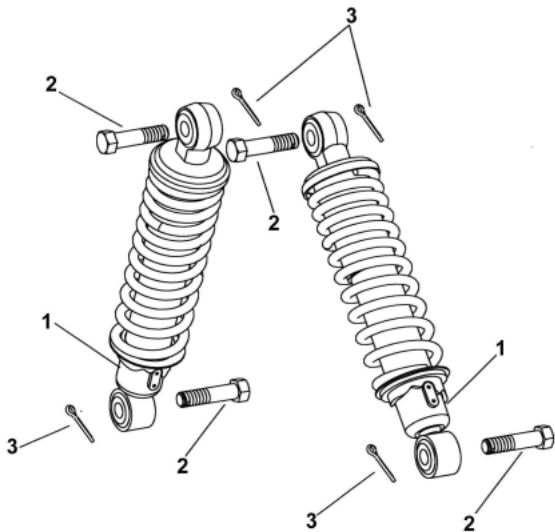


12.FUEL TANK

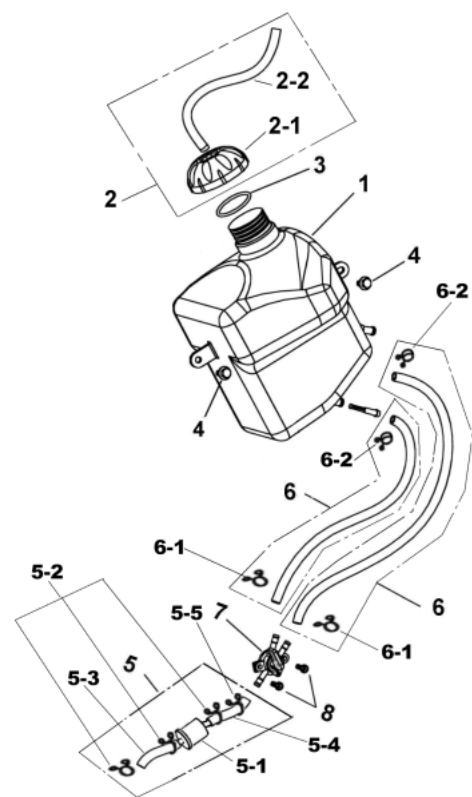


| ITEM   | AVAIL | PART NO.        | NAME                 | QTY |
|--------|-------|-----------------|----------------------|-----|
| 12     |       |                 | FUEL TANK            |     |
| 12-1   |       | A7500-4HA0-0000 | FUEL TANK ASSY.      | 1   |
| 12-2   |       | A762A-5EA0-0000 | FUEL TANK CAP ASSY   | 1   |
| 12-2-1 |       | A7620-5EA0-0000 | FUEL TANK CAP        | 1   |
| 12-2-2 |       | A7621-9FA0-0000 | TUBE, RUBBER         | 1   |
| 12-3   |       | A7622-5EA0-0000 | RUBBER PAD           | 1   |
| 12-4   |       | I0119-06821     | BOLT, HEX.           | 2   |
| 12-5   |       | A751A-4HA0-1000 | FUEL FILTER ASSY.    | 1   |
| 12-5-1 |       | A7519-FIA0-1000 | FUEL FILTER          | 1   |
| 12-5-2 |       | A7516-5EA0-0000 | CLIP(A)              | 3   |
| 12-5-3 |       | A7514-4HA0-0000 | FUEL TUBE (A)        | 1   |
| 12-5-4 |       | A7515-4HA0-0000 | FUEL TUBE (B)        | 1   |
| 12-5-5 |       | A7516-4HA0-0000 | CLIP(C)              | 1   |
| 12-6   |       | A7501-4HA0-0000 | MAIN/SPARE FUEL TUBE | 2   |
| 12-6-1 |       | A7516-5EA0-0000 | CLIP(A)              | 2   |
| 12-6-2 |       | A7517-5EA0-0000 | CLIP(B)              | 2   |
| 12-7   |       | A7520-5EA0-0000 | MANUAL FUEL CUP      | 1   |
| 12-8   |       | I8506-05016     | SCREW PAN            | 2   |

## 13. FRONT WHEEL

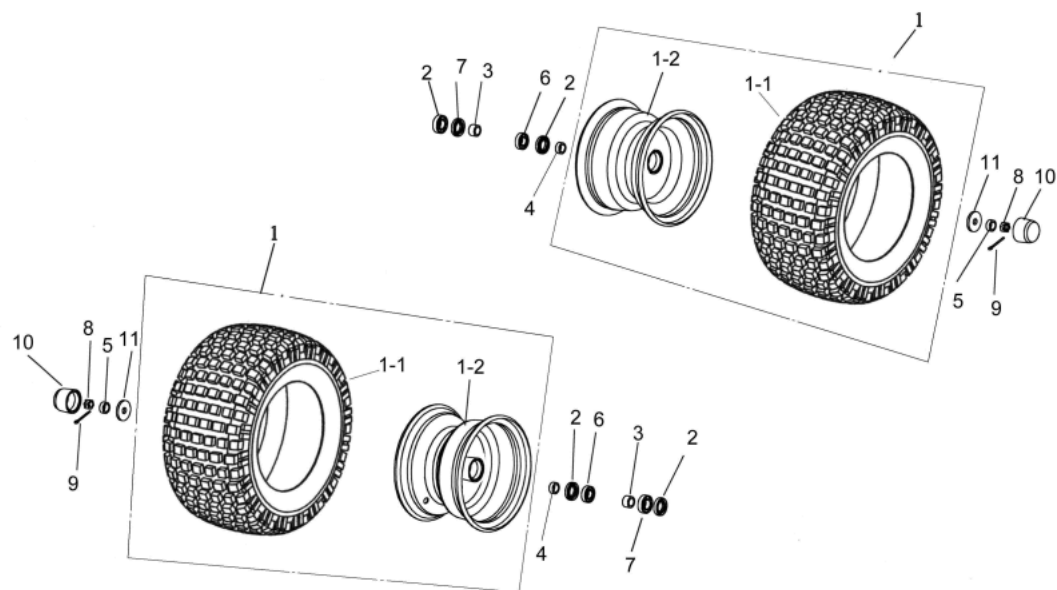


| ITEM   | AVAIL | PART NO.        | NAME                        | QTY |
|--------|-------|-----------------|-----------------------------|-----|
| 13     |       |                 | FRONT WHEEL                 |     |
| 13-1   |       | D471A-4HA0-0000 | FRONT TIRE ASSY             | 2   |
| 13-1-1 |       | D4710-4HA0-0000 | WHEEL TIRE(145×70-6)        | 2   |
| 13-1-2 | N     | D4601-4HA0-0000 | WHEEL RIM                   | 2   |
| 13-2   |       | I3102-5AC0-0000 | OIL SEAL                    | 4   |
| 13-3   |       | D4620-5EA0-0000 | COLLAR                      | 2   |
| 13-4   |       | D4621-5EA0-0000 | OUTER SPACER                | 2   |
| 13-5   |       | D4622-4HA0-0000 | OUTER SPACER(2)(17×21.7×17) | 2   |
| 13-6   |       | I6100-6002LLU   | BEARING(6002LLU)            | 2   |
| 13-7   |       | I6150-60030-10  | BEARING, BALL, RADIAL       | 2   |
| 13-8   |       | I5500-12000     | CASTLE NUT                  | 2   |
| 13-9   |       | I4201-46325     | SPLIT PIN                   | 2   |
| 13-10  |       | D4609-5EA0-0001 | RUBBER CAP                  | 2   |
| 13-11  |       | D4608-5EA0-0000 | FRONT WHEEL SHAFT WASHER    | 2   |

14. REAR WHEEL

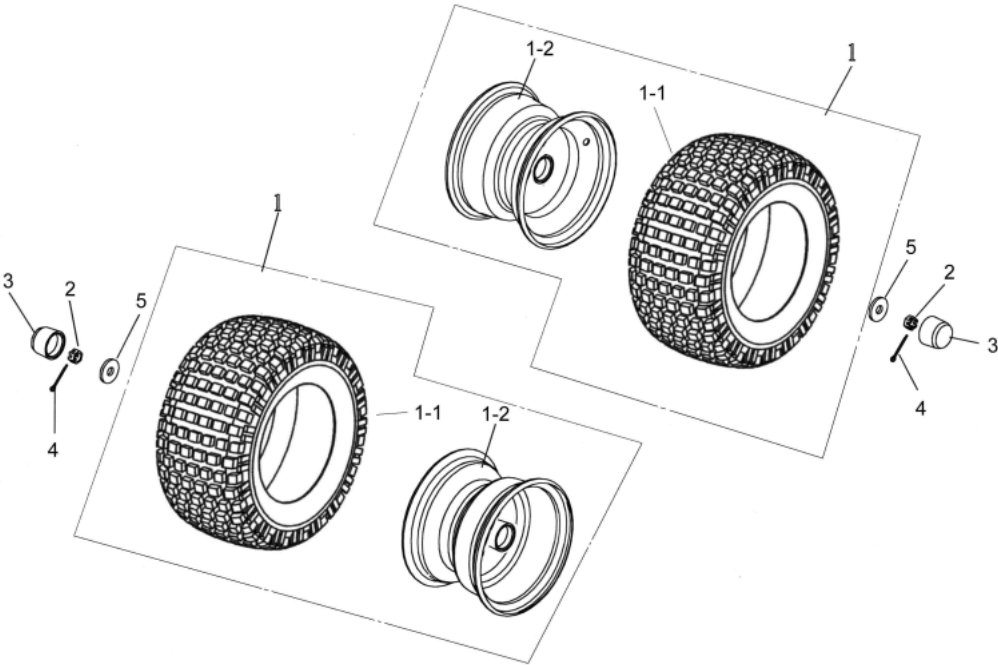


| ITEM   | AVAIL | PART NO.        | NAME                 | QTY |
|--------|-------|-----------------|----------------------|-----|
| 14     |       |                 | REAR WHEEL           |     |
| 14-1   |       | D471B-4HA0-0000 | REAR TIRE ASSY       | 2   |
| 14-1-1 |       | D4710-4HA0-0000 | WHEEL TIRE(145×70-6) | 2   |
| 14-1-2 | N     | D4602-4HA0-0000 | WHEEL RIM            | 2   |
| 14-2   |       | I5500-14100     | CASTLE NUT           | 2   |
| 14-3   |       | D4609-5EA0-0001 | RUBBER CAP           | 2   |
| 14-4   |       | I4201-46325     | SPLIT PIN            | 2   |
| 14-5   |       | D2309-5EA0-0000 | WASHER               | 2   |

## 15. REAR BRAKE

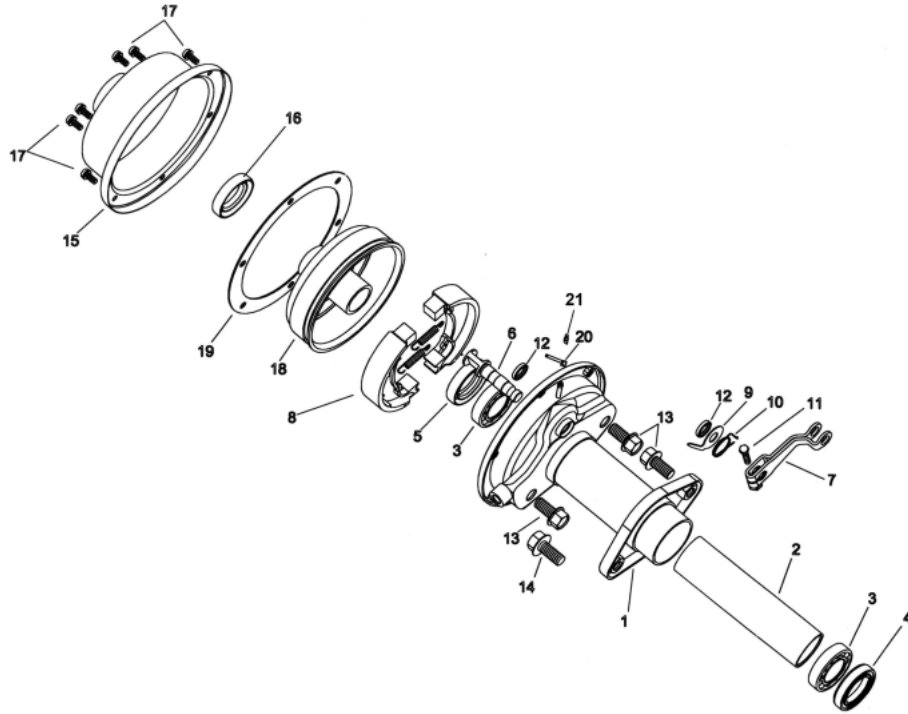


| ITEM  | AVAIL | PART NO.        | NAME                          | QTY |
|-------|-------|-----------------|-------------------------------|-----|
| 15    |       |                 | REAR BRAKE                    |     |
| 15-1  |       | D2310-4HA0-0000 | REAR WHEEL BEARING SEAT ASSY. | 1   |
| 15-2  |       | D2311-4HA0-0000 | SPACER(31×36×63.7)            | 1   |
| 15-3  |       | I6100-6006ZZ    | BEARING, BALL RADIAL          | 2   |
| 15-4  |       | D2313-9EA0-0000 | OIL SEAL                      | 1   |
| 15-5  |       | D2315-9EA0-0000 | OIL SEAL(38×55×10)            | 1   |
| 15-6  |       | D3141-5EA0-0000 | BRAKE ARM CAM, REAR           | 1   |
| 15-7  |       | D3410-4HA0-0000 | BRAKE ARM, REAR               | 1   |
| 15-8  |       | D3120-5EA0-0000 | REAR BRAKE SHOE COMP.(130)    | 1   |
| 15-9  |       | D3145-5EA0-0000 | REAR BRAKE INDICATOR          | 1   |
| 15-10 |       | D3419-5EA0-0000 | REAR RETURN SPRING            | 1   |
| 15-11 |       | I0020-06030     | BOLT                          | 1   |
| 15-12 |       | D2314-5EA0-0000 | OIL SEAL(14×20×4)             | 2   |
| 15-13 |       | I0141-12020-01  | SCREW, FLANGE (M12×20)        | 3   |
| 15-14 |       | I0141-12025-01  | FLANGE BOLT, HEX.             | 1   |
| 15-15 |       | D3615-9EA0-0000 | DRUM COVER, REAR              | 1   |
| 15-16 |       | D3616-9EA0-0000 | OIL SEAL(38×52×9)             | 1   |
| 15-17 |       | I8557-06012     | SCREW WASHER                  | 6   |
| 15-18 |       | D3610-9EA0-1000 | REAR DRUM                     | 1   |
| 15-19 |       | D3611-5EA0-0000 | GASKET, REAR DRUM COVER       | 1   |
| 15-20 |       | D2316-5EA0-0000 | DRAIN PIPE ASSY.              | 1   |
| 15-21 |       | D2319-5EA0-0000 | PLUG, PURGE HOLE              | 1   |

## 16.HANDLE BAR

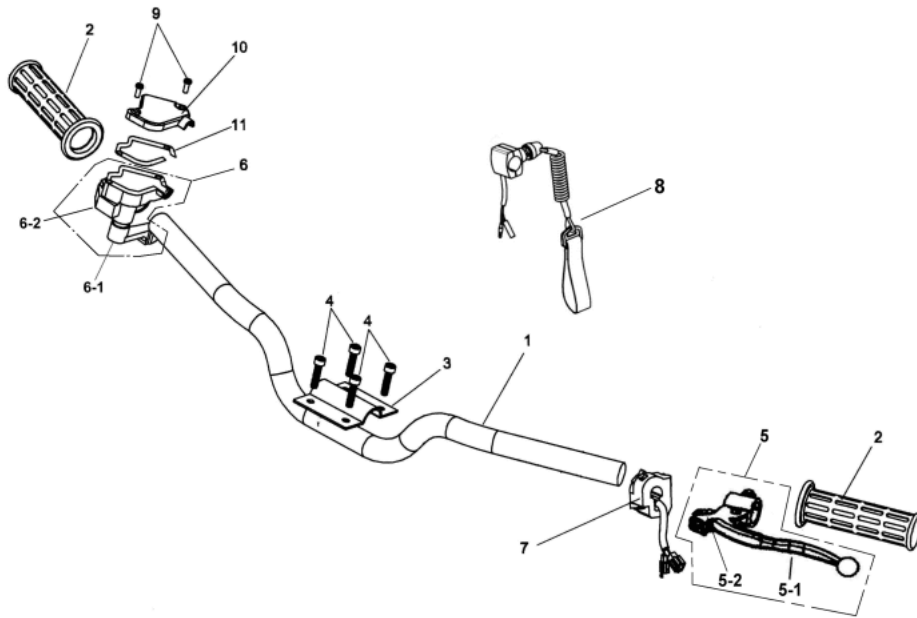


| ITEM   | AVAIL | PART NO.        | NAME                    | QTY |
|--------|-------|-----------------|-------------------------|-----|
| 16     |       |                 | HANDLE BAR              |     |
| 16-1   |       | E3100-4HA0-0000 | HANDLE BAR ASSY.        | 1   |
| 16-2   |       | E3166-4HA0-0000 | GRIP HANDLE BAR CLAMP   | 2   |
| 16-3   |       | E3111-4HA0-0000 | HANDLE BAR CLAMP, CAP   | 1   |
| 16-4   |       | I5701-06020-0C  | BOLT, FLANGE (M6x20)    | 4   |
| 16-5   |       | E3170-4HA0-0000 | LEFT LEVEL ASSY.        | 1   |
| 16-5   |       | E3170-4HA0-9000 | LEFT LEVEL ASSY.        | 1   |
| 16-5-1 |       | E3171-4HA0-0000 | LEFT LEVEL              | 1   |
| 16-5-1 |       | E3171-4HC0-0000 | LEFT LEVEL              | 1   |
| 16-5-2 |       | E3172-4HC0-0000 | PLATE                   | 1   |
| 16-6   |       | E3180-4HA0-0000 | RIGHT LEVEL ASSY.       | 1   |
| 16-6-1 |       | E319A-4HA0-0000 | LEVER ACCELERATE        | 1   |
| 16-6-2 |       | E3191-4HA0-0000 | ACCELERATOR BODY        | 1   |
| 16-7   |       | C5200-4HB0-0000 | HANDLE BAR ASSY. (LEFT) | 1   |
| 16-8   |       | C2108-7EE0-0000 | HANDLE BAR SAFETY ASSY  | 1   |
| 16-9   |       | I8506-04016     | SCREW,PAN HEAD          | 2   |
| 16-10  |       | E3183-4HA0-0000 | COVER,RIGHT LEVEL       | 1   |
| 16-11  |       | E3188-5EA0-0000 | GASKET, RIGHT LEVEL     | 1   |

## 17. FEND BAR, FOOTREST

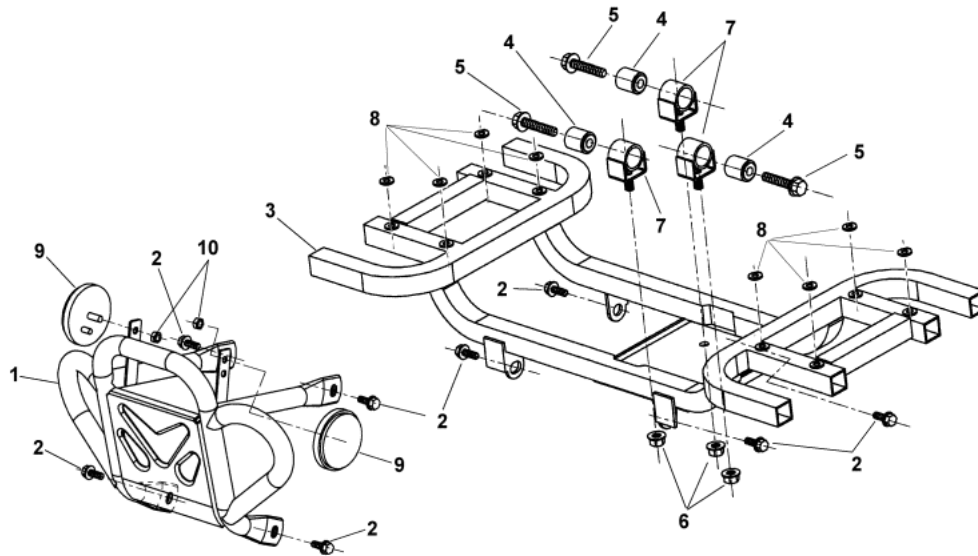


| ITEM | AVAIL | PART NO.        | NAME                    | QTY |
|------|-------|-----------------|-------------------------|-----|
| 17   |       |                 | FEND BAR , FOOTREST     |     |
| 17-1 |       | E0400-4HB0-0000 | FEND BAR ASSY.          | 1   |
| 17-2 |       | I0149-08012     | FLANGE BOLT, HEX.       | 8   |
| 17-3 |       | E0700-4HB0-0000 | FOOTREST ASSY.          | 1   |
| 17-4 | N     | E0201-4HA0-0000 | BUSH (20×8.1×21×24)     | 3   |
| 17-5 |       | I0105-08040     | BOLT, FLANGE            | 3   |
| 17-6 |       | I5611-08200     | HEX. FLANGE NUT, SAFETY | 3   |
| 17-7 |       | E0702-4HA0-0000 | ENGINE MOUNTING ASSY.   | 3   |
| 17-8 |       | C510C-4HB0-0000 | ABSORB WASHER           | 8   |

18. REAR WHEEL AXLE

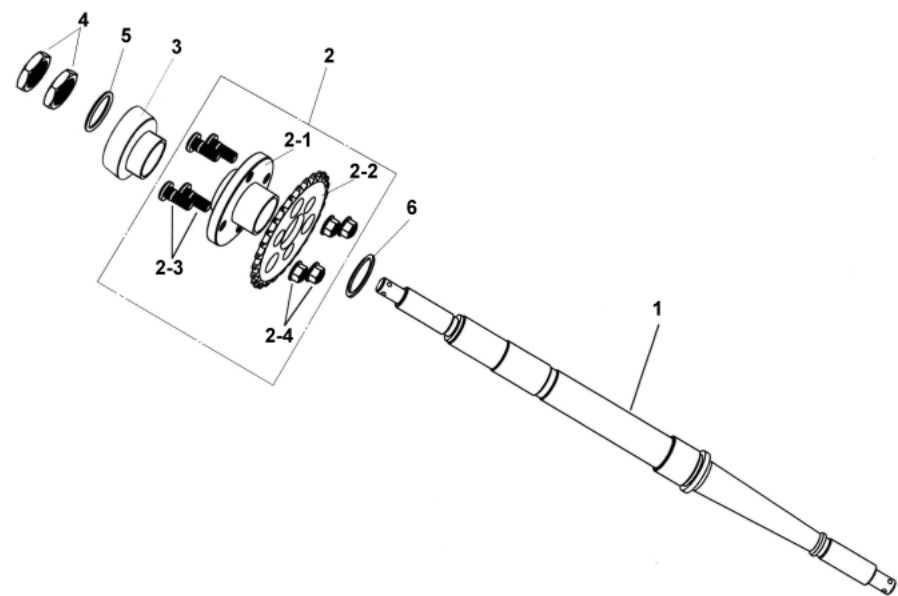


| ITEM   | AVAIL | PART NO.        | NAME                    | QTY |
|--------|-------|-----------------|-------------------------|-----|
| 18     |       |                 | REAR WHEEL AXLE         |     |
| 18-1   |       | D2301-4HA0-0000 | REAR AXLE               | 1   |
| 18-2   |       | D0110-4HA0-9000 | DRIVE CHAIN ASSY (36T)  | 1   |
| 18-2-1 |       | D0111-9EA0-0000 | SPROCKET HOLDER, REAR   | 1   |
| 18-2-2 |       | D1111-4HA0-9000 | GEAR(420×36T)           | 1   |
| 18-2-3 |       | D2706-9EA0-0000 | BOLT                    | 4   |
| 18-2-4 |       | I5611-10200     | HEX. FLANGE NUT, SAFETY | 4   |
| 18-3   |       | D0114-4HA0-0000 | SPACER                  | 1   |
| 18-4   |       | D2302-9EA0-0000 | NUT, HEX.               | 2   |
| 18-5   |       | I1303-4HA0-0000 | O-RING                  | 1   |
| 18-6   |       | I9905-35018     | WASHER(42×35×1.8)       | 1   |

19. CHAIN

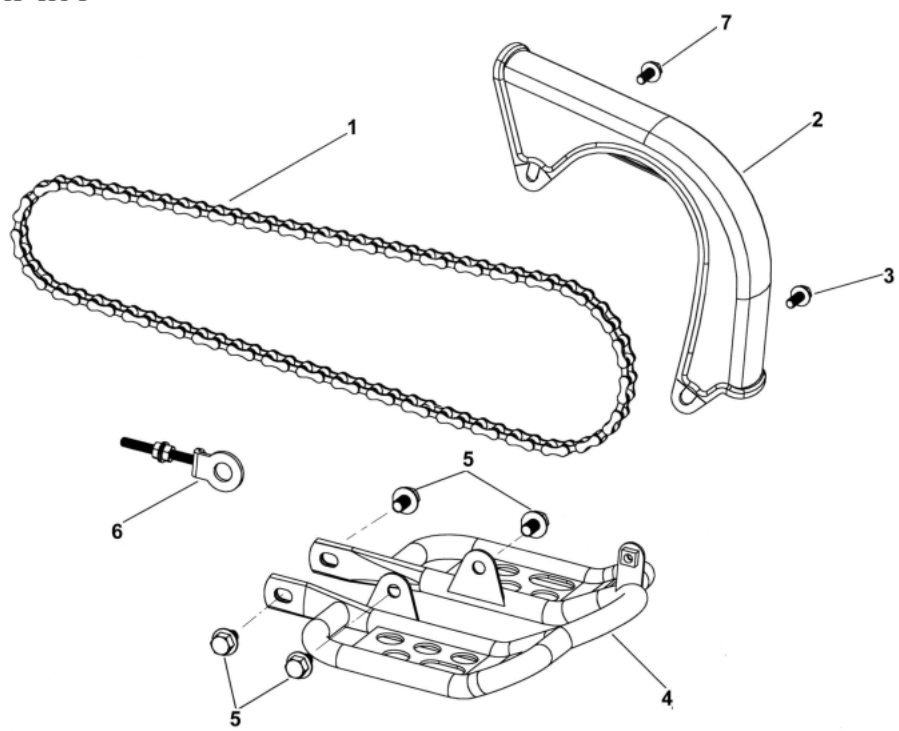

| ITEM | AVAIL | PART NO.        | NAME                       | QTY |
|------|-------|-----------------|----------------------------|-----|
| 19   |       |                 | CHAIN                      |     |
| 19-1 |       | D0100-5EA0-0000 | DRIVE CHAIN ASSY. (420×78) | 1   |
| 19-2 |       | D0102-4HA0-0000 | PROTECT COVER              | 1   |
| 19-3 |       | I7507-06225     | BOLT, HEX.                 | 1   |
| 19-4 |       | D0101-4HA0-0000 | BELOW PROTECT COVER        | 1   |
| 19-5 |       | I0149-08016     | FLANGE BOLT, HEX.          | 4   |
| 19-6 |       | D0120-4HA0-0000 | CHAIN ADJUSTER             | 1   |
| 19-7 |       | I0119-06030     | BOLT, HEX.                 | 1   |


## 20. STEERING

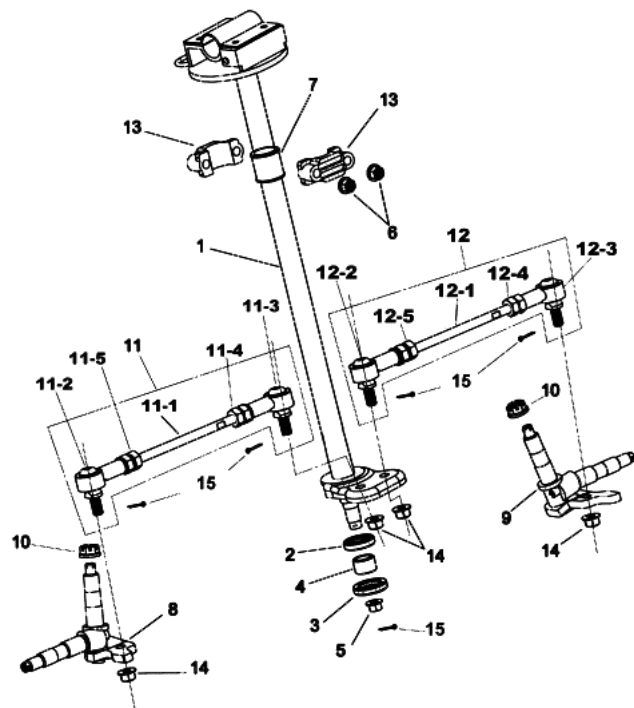


| ITEM    | AVAIL | PART NO.        | NAME                          | QTY |
|---------|-------|-----------------|-------------------------------|-----|
| 20      |       |                 | STEERING                      |     |
| 20-1    |       | E3200-4HA0-9000 | SHAFT, STEERING               | 1   |
| 20-2    |       | E3201-5EA0-0000 | OIL SEAL                      | 1   |
| 20-3    |       | I3102-5AC0-0000 | OIL SEAL                      | 1   |
| 20-4    |       | D4620-5EA0-0000 | COLLAR                        | 1   |
| 20-5    |       | I5611-14200     | HEX. FLANGE NUT, SAFETY       | 1   |
| 20-6    |       | I5611-08200     | HEX. FLANGE NUT, SAFETY       | 2   |
| 20-7    |       | E3225-5EA0-0000 | PU LINER                      | 1   |
| 20-8    |       | E0205-4HA0-0000 | LEFT, KNUCKLE                 | 1   |
| 20-9    |       | E0215-4HA0-0000 | RIGHT, KNUCKLE                | 1   |
| 20-10   |       | I5550-20000     | NUT                           | 2   |
| 20-11   |       | E0258-4HA0-0000 | STEERING TIE-ROD ASSY., LEFT  | 1   |
| 20-11-1 |       | E0251-4HA0-0000 | BOLT,STUD                     | 1   |
| 20-11-2 |       | E0255-FIA0-0000 | UNIVERSAL JOINT(L)            | 1   |
| 20-11-3 |       | E0256-FIA0-0000 | UNIVERSAL JOINT(R)            | 1   |
| 20-11-4 |       | E0252-5EA0-0000 | NUT (R)                       | 1   |
| 20-11-5 |       | E0253-5EA0-0000 | NUT (L)                       | 1   |
| 20-12   |       | E0259-4HA0-0000 | STEERING TIE-ROD ASSY., RIGHT | 1   |
| 20-12-1 |       | E0251-4HA0-0000 | BOLT,STUD                     | 1   |
| 20-12-2 |       | E0255-FIA0-0000 | UNIVERSAL JOINT(L)            | 1   |
| 20-12-3 |       | E0256-FIA0-0000 | UNIVERSAL JOINT(R)            | 1   |
| 20-12-4 |       | E0252-5EA0-0000 | NUT (R)                       | 1   |
| 20-12-5 |       | E0253-5EA0-0000 | NUT (L)                       | 1   |
| 20-13   |       | E3202-9FA0-0000 | HOLDER, STEERING COLUMN       | 2   |
| 20-14   |       | I5611-10200     | HEX. FLANGE NUT, SAFETY       | 4   |
| 20-15   |       | I9900-25019     | PIN, SPLIT                    | 5   |

21. BRAKE

| ITEM   | AVAIL | PART NO.        | NAME                    | QTY |
|--------|-------|-----------------|-------------------------|-----|
| 21     |       |                 | BRAKE                   |     |
| 21-1   |       | E3450-4HA0-0000 | CABLE, BRAKE REAR ASSY. | 1   |
| 21-1-1 |       | E3453-5EA0-0000 | CIRCULAR CYLINDER       | 1   |
| 21-1-2 |       | E3454-4HA0-0000 | NUT,ADJUSTING           | 1   |

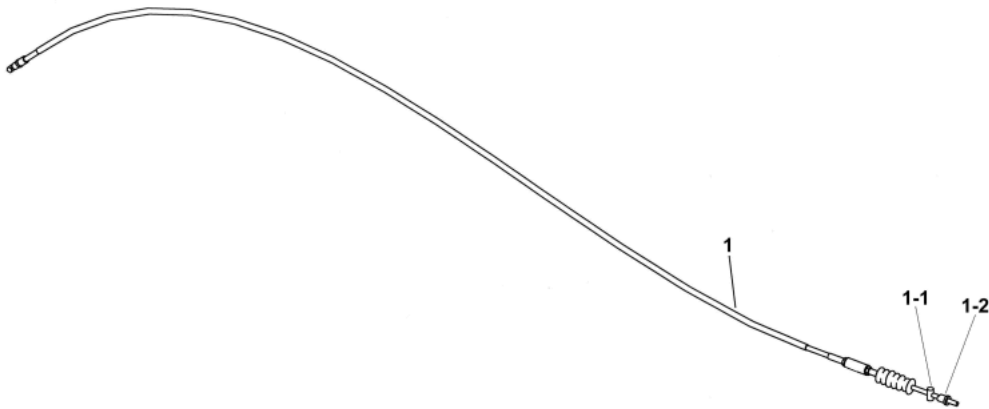

22.TOOL BOX,PAKING CASE,EXTERNAL

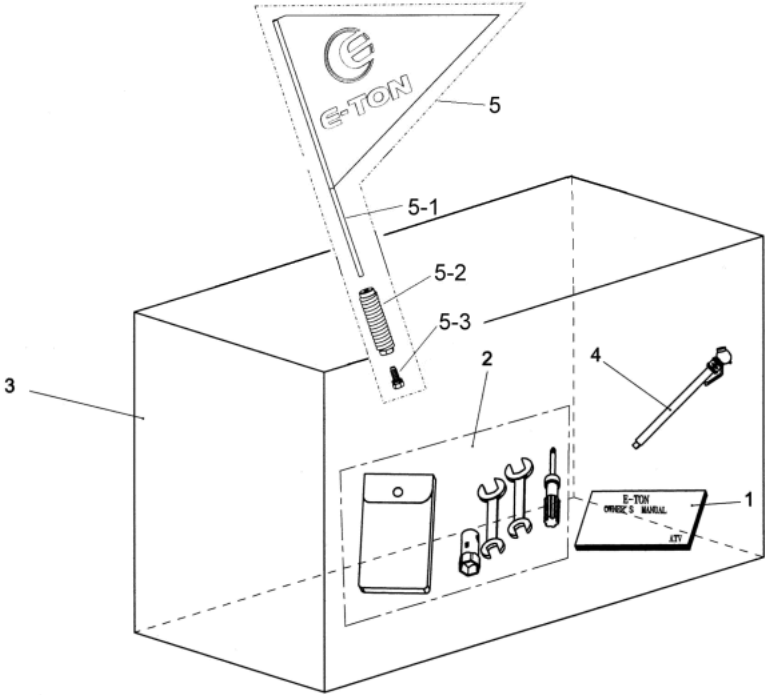

| ITEM   | AVAIL | PART NO.        | NAME                            | QTY |
|--------|-------|-----------------|---------------------------------|-----|
| 22     |       |                 | TOOL BOX ,PACKING CASE,EXTERNAL |     |
| 22-1   |       | H990A-4HC9-0000 | OWNER'S MANUAL ASSY             | 1   |
| 22-1-1 | N     | H9900-4HC0-9000 | OWNER'S MANUAL                  | 1   |
| 22-2   |       | H9020-4HA0-0000 | TOOL SET                        | 1   |
| 22-3   |       | H9500-4HA0-9000 | PACKING CASEEXTERNAL            | 1   |
| 22-4   |       | H9022-5EA0-0000 | PRESSURE METER                  | 1   |

No picture.

| ITEM   | AVAIL | PART NO.       | NAME                            | QTY |
|--------|-------|----------------|---------------------------------|-----|
| 30     |       |                | CYLINDER PISTON TOP END KIT (1) |     |
| 30-1   |       | A21AA-UE1-0000 | CYLINDER PISTON TOP END KIT     | 1   |
| 30-1-1 |       | A2100-UE1-0001 | CYLINDER COMP.                  | 1   |
| 30-1-2 |       | A2191-UE1-0000 | GASKET CYLINDER                 | 1   |
| 30-1-3 |       | A3011-B02-0000 | PISTON RING SET                 | 1   |
| 30-1-4 |       | A3101-UE1-0002 | PISTON                          | 1   |
| 30-1-5 |       | A3111-B02-0000 | PIN PISTON                      | 1   |
| 30-1-6 |       | A3122-UE1-0000 | INNER RING                      | 2   |
| 30-1-7 |       | I1100-1014148  | BEARING, CON-ROD                | 1   |
| 30-1-8 |       | I4601-B02-0000 | CLIP, PISTON PIN                | 2   |
| 30-1-9 |       | A8291-UE1-0001 | GASKET EXHAUST PIPE             | 1   |

No picture.

| ITEM   | AVAIL | PART NO.       | NAME                            | QTY |
|--------|-------|----------------|---------------------------------|-----|
| 31     |       |                | CYLINDER PISTON TOP END KIT (2) |     |
| 31-1   |       | A21AB-UE1-0000 | CYLINDER PISTON TOP END KIT     | 1   |
| 31-1-1 |       | A2100-UE1-0001 | CYLINDER COMP.                  | 1   |
| 31-1-2 |       | A2191-UE1-0000 | GASKET CYLINDER                 | 1   |
| 31-1-3 |       | A3011-B02-0000 | PISTON RING SET                 | 1   |
| 31-1-4 |       | A3101-UE1-0002 | PISTON                          | 1   |
| 31-1-5 |       | A3111-B02-0000 | PIN PISTON                      | 1   |
| 31-1-6 |       | A3122-UE1-0000 | INNER RING                      | 2   |
| 31-1-7 |       | I4601-B02-0000 | CLIP, PISTON PIN                | 2   |
| 31-1-8 |       | A8291-UE1-0001 | GASKET EXHAUST PIPE             | 1   |